




Tips: the charging adapter should not exceed 0.5A. The adapter with high power will seriously damage the earphone, and the product will be burnt out in serious cases.

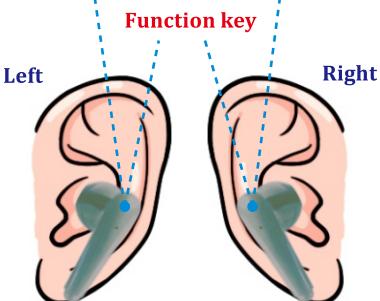

1. Long press the left ear to reduce the volume
2. Press the left ear three times and play the previous song
3. Click pause, four Click game mode
1. Long press the right ear to increase the volume
2. Press the right ear three times to the next song
3. Click pause, four Click game mode

MATTER NEEDING ATTENTION

Please read this manual before using the headset and keep it for future reference. The pictures used in this manual are for illustration purposes only. Real products may be different.

⚠ SAFETY PRECAUTIONS

1. When using headphones while driving, please observe the regulations of your country or region.
2. Do not remove or modify the headset for any reason, otherwise it may cause the headset to malfunction or burn.
3. Please send the headset to an authorized service center for repair. Please keep the equipment and all accessories out of the reach of children and pets. Swallowing small parts by mistake may cause suffocation and serious injury.
4. Do not put the equipment in the environment with too low or too high temperature (below 0°C or above 45°C). Extreme temperature will lead to deformation of the equipment, reduce the charging capacity of the equipment, and shorten the service life of the equipment.
5. Do not wet the equipment, the liquid will cause serious damage to the equipment. Do not touch the equipment with wet hands. The manufacturer will not guarantee the damage caused by water in the equipment.
6. Please avoid using the device indicator near the eyes of children or animals.
7. Do not use the equipment in thunderstorm weather. Thunderstorms can cause abnormal operation of equipment and increase the risk of electric shock. Function key for 5 seconds to turn off the machine.



Listening to high volume sound for a long time is harmful to hearing. Listening to high volume sound while driving can distract people and even lead to accidents. Use only the minimum volume setting required for a call or music.

WARRANTY CARD

Thank you for purchasing Bluetooth headset!

The design and process of this product are in line with the relevant quality standards. According to the national Three Guarantees regulations, if any non-human or illegal operation of the component damage occurs within one year from the date of purchase. The manufacturer will provide free warranty service for card users according to the warranty regulations.

1. Fill in product warranty information

User name _____ Telephone _____
Address _____

Product name	Frame model	
Dealer name	Telephone	
Dealer Address	Postcode	
InvoiceNo.	Date of sale	Dealer seal

2. Product maintenance record

Failure phenomenon	Material replacement
Maintenance method	Maintenance date
Maintenance unit	Whether to repair or not
Remarks	

*This warranty card must be provided when you enjoy the warranty service. Please keep it properly!

Warning: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:--Reorient or relocate the receiving antenna.-- Increase the separation between the equipment and receiver--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.--Consult the dealer or an experienced radio/TV technician for help. **NOTE:** This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Switch on / off

1. Automatic power on: take out the earphone from the charging chamber to automatically power on.
2. Manual power on: if it is not taken out, press and hold the function key for 3 seconds to start the machine
3. Automatic shutdown: if the headset is not connected within 5 minutes after power on, no operation will occur Power off.
4. Manual shutdown: In the music pause state, long press the function key for 5 seconds to shut down.

Pair

Open the charging bin. After the left and right headphones flash twice and turn to slow flash, the host flashes quickly and the auxiliary flashes slowly. After the left and right headphones are paired, the mobile phone can search for A6 pairing connection.

Answer a call

After the headset and mobile phone are paired successfully, click one of the ears when there is an external call. You can answer by pressing the function key.

Reject function

If you don't want to answer the call, long press one of the headset function keys for 3 seconds to reject.

Voice assistant

When the headset is connected, press the function key 6 times (both left and right ears) to open Siri voice assistant.

Last dialing

In the music pause state, double-click the headset button to dial the last group of numbers.

Volume control

1. During listening to music, you can increase the music volume by long pressing the function key of the right headset, as shown in the figure.
2. During listening to music, you can adjust and reduce the music volume by long pressing the function key of the left earphone, as shown in the figure.

Choose last or next music

1. In listening to songs, you can switch to the previous song by three clicking the function key of the left headset, as shown in the figure.
2. In listening to songs, you can switch to the next song by three clicking the function key of the right headset, as shown in the figure.

Chinese English conversion

When the phone is not connected, double-click the function key to freely switch between Chinese and English.

Headset charging

Put the headset into the charging bin and close the cover of the charging bin. At this time, the indicator lights on both sides are on for a long time, and the red light is charging. When the headset is fully charged and the charging indicator is off, it is fully charged.

Charging bin charging

When the charging bin is out of power, the charging indicator flashes slowly, that is, it is necessary to charge the charging bin. When charging, the charging indicator flashes slowly, and the long red light is full.