

FLOOD LIGHT

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product is equipped with non-replaceable type lamps. Do not attempt to replace the lamps.
- n) Use only with the AC adaptor provided with this product.
- o) Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS

WARNING: Risk of Fire, shock, or personal injury.

- 1) Use only with the included AC power adaptor.
- 2) Not for use on outlets controlled by a dimmer.
- 3) Use only on timer controlled outlets where the timer is rated for use with compact fluorescent bulbs (CFL) or LED bulbs.
- 4) Do not use power adaptor if enclosure is broken or cracked, discard unit.
- 5) Do not use with a voltage converter.
- 6) The product and the AC power adaptor shall not be installed within 10 feet of a pool, spa, fountain, or other areas of standing water.

Use and Care Instructions

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- b) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or brushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- c) When not used, store neatly in a cool, dry location protected from sunlight.
- d) Do not impact or drop the AC power adaptor, if enclosure is broken or cracked, discard product.

Installation Instructions

1. Carefully remove product from packaging, be sure not to cut any wires.
2. Attach the light set connector to the adaptor by inserting the pins fully into the adaptor and screw on the holding ring.
Hint – apply slight pressure to the holding ring towards adaptor while turning it.
3. Plug adaptor into wall outlet, lights should come on. For outdoor use, adaptor should be located in an outdoor outlet box where the adaptor connections can be protected from falling rain (see instructions on adaptor for further information)


Projector Operation

Use the push button on the remote control to select the timer mode or to change light color and functions.

Projector Function List:

Momentarily press button to change the color and function.

1. On	8. Adjust brightness (☀+/☀-)
2. Off	9. Light colors
3. Flash	10. Timer setting (2H/4H/6H)
4. Strobe	
5. Fade	
6. Smooth	
7. Adjust speed (S-/S+)	

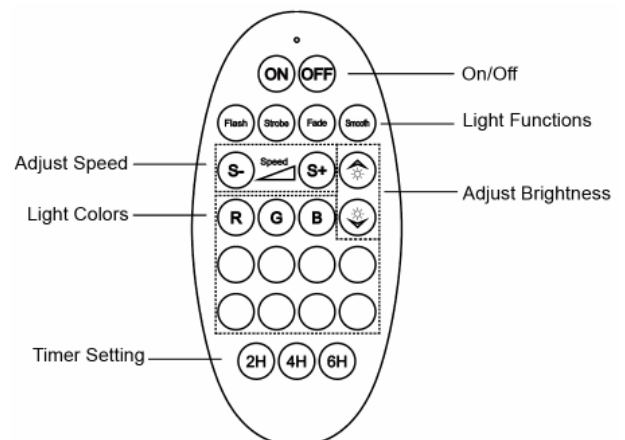

Timer Operation:

Note – Product is shipped with the timer turned off.

Enter Timer Mode - Press the timer button one time, the light flashes 3 times. There are 3 timer modes – 2H/4H/6H.

Projector will turn on for approximately 2/4/6 hours and turn off for 22/20/18 hours and repeat daily as long as power is not turned off to the projector.

Exit Timer Mode - Press the timer button one time, the light flashes 1 times. Light will remain on until power to projector is turned off.

Functions Operation:

Note – Each function button has a dual function.

First Press – Enter the functions.

Second Press – Exit the functions, and restore to a steady on color before enter the function.

Troubleshooting Instructions

If projector does not turn on:

- a) Make sure lights are connected to the AC power adaptor. Make sure connectors are fully inserted into the power adaptor, and are tight.
- b) Make sure the AC power adaptor is plugged into a 120V AC outlet.
- c) Make sure the outlet has power (check to see if any switches or timers control the outlet) and not connected to a dimmer switch.
- d) If used on a timer controlled outlet, make sure the timer is rated for use with compact fluorescent bulbs (CFL bulbs) or LED bulbs, if not, use on a different circuit/outlet.
- e) If plugged into a GFCI protected outlet, reset the GFCI in case it activated.
- f) Replace battery in remote control**
- g) Contact customer service for additional information.

If projector turns off on its own:

- a) Projector is in timer mode, see Projector Operation section to turn off timer.

If projector turns on or off at the wrong time:

- a) Turn timer mode off and then turn the timer mode back on again at the desired time. Please see the Projector Operation section to turn timer off and back on.

If moisture builds up on inside of lens:

- a) This is normal due to changes in temperature and humidity and will disappear in a few hours or few days depending on atmospheric conditions, operate unit as normal as the heat from operation and/or the sun will assist with the clearing of the moisture.

Note: 1. Please insert 2 pieces of AAA Battery before use. (Battery not included)

2. If the remote control does not work, check whether the battery of the remote control is out of power.

FCC Information:

Frequency: 433.92MHz

FCC Product name: Wireless Remote

FCC Model Number: 656379-102

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any modifications could void the user's authority to operate the equipment

Warning:

responsible for compliance could void the user's authority to operate the equipment.
Changes or modifications to this unit not expressly approved by the part

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Seasonal Specialties

11455 Valley View Road

Eden Prairie, MN 55344

1-855-995-6598

Call Customer Service at 1-855-995-6598 Monday-Friday 9:00am – 5:00pm CST with any additional questions.

656379-102

SSC

Indoor/Outdoor

2024