



PROMISE ELECTRONIC TRADE INC.  
HONEST IS THE BEST POLICY.

#### FCC Warning


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

 CW61



#### The Earphones and the Touch Button

##### How to Connect:

###### 1. Earphones Power On/Power Off:

Open the cover of the charging case, and the earphones will automatically power on. Close the cover of the charging case to power off the earphones.

###### 2. Pairing (First Use):

Turn on the wireless feature on your mobile phone. Open the lid of the charging case, and the earphones will automatically power on. Search for the wireless device named "CW61" and click to connect. After the connection is successful, the earphones will prompt "Connected".

##### How to Use

###### Play/Pause:

Click the left/right earphone touch button.

Previous/Next Song: Press the left earphone touch button for 2 seconds to play the previous song.

Volume Up: Double-click the round button to increase the volume when the video is playing.

Take a Photo: When the camera is on, double-click the round button to capture a picture.

Video Recording Start/Pause: When recording, double-click the round button to start/pause.

Previous Video/Next Video: When the video is playing, short press the square button to play the next video.

Like: When the video is playing, double-click the square button to like the video.

iPhone Usage Tutorial: Settings --> Accessibility --> Touch --> AssistiveTouch --> Enable AssistiveTouch --> Adjust the tracking sensitivity to the middle position. Refer to the images below for guidance:

#### The video page-turning/Shooting function of the charging case

##### How to Connect

###### 1. Charging Box Power On/Power Off:

Press and hold the round button for 2 seconds to power-on; Press and hold the round button for 5 seconds to power-off.

###### 2. Pairing (First Use):

Turn on the wireless feature on your mobile phone. Turn on the charging box. Search for the wireless device named "CW61 FanYe" and click to connect.

##### How to Use

###### Play/Pause:

Click the round button when the video is playing.

Volume Up: Double-click the round button to increase the volume when the video is playing.


Take a Photo: When the camera is on, double-click the round button to capture a picture.

Video Recording Start/Pause: When recording, double-click the round button to start/pause.

Previous Video/Next Video: When the video is playing, short press the square button to play the next video.

Like: When the video is playing, double-click the square button to like the video.

iPhone Usage Tutorial: Settings --> Accessibility --> Touch --> AssistiveTouch --> Enable AssistiveTouch --> Adjust the tracking sensitivity to the middle position. Refer to the images below for guidance:

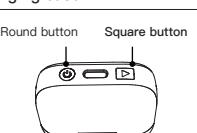

Step 4:   
Step 5:

\*After completing step 4, scroll down the page to locate a progress bar that tracks sensitivity. Adjust it to the middle position, if possible, for optimal usage. If turning the page normally becomes challenging, fine-tune the sensitivity to the left or right as needed. After the adjustment, close the AssistiveTouch feature. Reopen AssistiveTouch to apply the changes. Note: Apple system iOS13 or iOS14 and other older versions do not have tracking sensitivity display. The progress bar with tracking sensitivity must be operated according to step 5.

##### How to Charge

###### Charging the Charging Case:

Use a low-power charger below 5V~1A to charge. When charging, the red light flashes. When fully charged, the red light stays steady.

###### Charging the Earphones:

Place the left and right earphones correctly in the charging case. Close the charging case, and the red light on the headset will illuminate. When fully charged, the red light turns off. The earphones take about 1.5 hours to fully charge. A fully charged charging case can provide about 3 cycles of charging for the earphones.

###### Low Battery Indication:

When the earphone battery is low, a voice prompt of "Battery low" will occur once every minute. Note: If there is no display on the charging box's light, it indicates that the power has been completely exhausted. Please use this product after a full charge.

##### Certificate of Quality

###### Product level:

###### Grade A

###### Grade B

###### Grade C

###### Grade D

###### Grade E

###### Grade F

###### Grade G

###### Grade H

###### Grade I

###### Grade J

###### Grade K

###### Grade L

###### Grade M

###### Grade N

###### Grade O

###### Grade P

###### Grade Q

###### Grade R

###### Grade S

###### Grade T

###### Grade U

###### Grade V

###### Grade W

###### Grade X

###### Grade Y

###### Grade Z

###### Grade AA

###### Grade BB

###### Grade CC

###### Grade DD

###### Grade EE

###### Grade FF

###### Grade GG

###### Grade HH

###### Grade II

###### Grade III

###### Grade IV

###### Grade V

###### Grade VI

###### Grade VII

###### Grade VIII

###### Grade IX

###### Grade X

###### Grade XI

###### Grade XII

###### Grade XIII

###### Grade XIV

###### Grade XV

###### Grade XVI

###### Grade XVII

###### Grade XVIII

###### Grade XVII