

vibesonly.com

Hole Size: 1.5" x 1.2" Diameter unstretched

Weight: 65g

Materials: Medical-grade silicone & ABS

Battery: Lithium Ion

Charging Time: 2 hrs

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Vibes Only™

Richard Ring

Instruction Manual

Take this “Dick” and elevate your pleasure to the next level...

With a firm-but-comfortable grip, the Richard is designed to help penises stay harder for longer by slowing blood flow. It is uniquely shaped to add stimulation to the wearer's testicles while simultaneously vibrating on their partner's clitoris for mutual pleasure. (Pro tip: It can also be worn during oral sex.)

Why you'll love the Richard ring:


- Connects to the Vibes Only app
- Stretches to 3 inches across in any one direction (one size fits most)
- Features a snug, yet flexible fit
- 3 levels of vibration
- 3 intensity levels
- Water resistant

How to wear:

Lubrication is essential! The easiest way to reduce friction and ensure your ring glides on smoothly (and doesn't snag any hairs) is to liberally apply water-based lube. We can't recommend our Juiced Up lubricant enough!


Slide the ring down to the base of the penis, with the power button facing the wearer's stomach.

The Richard ring is designed to go around the base of the penis. While it is possible to stretch it over the scrotum, it is not recommended.

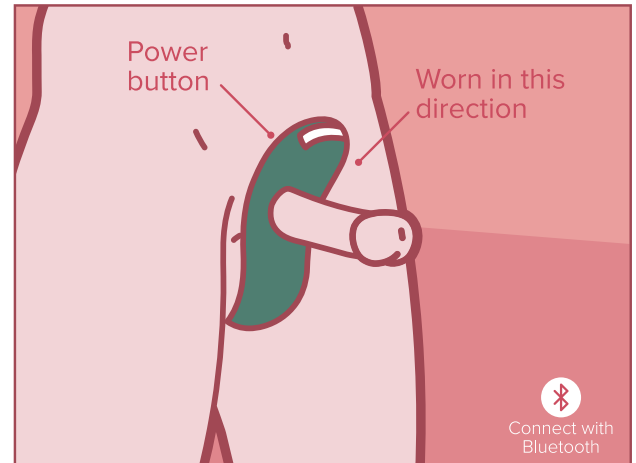

Get connected

Scan this code to download the Vibes Only app on your phone.

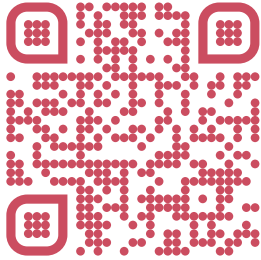

Inside the app:

Custom controller so you can control your vibrator with your phone, plus more patterns and intensities (free feature)

Battery estimator so you always know what kind of juice your device has (free feature)

Our Long Distance Lover feature which allows someone else to control your vibrator from anywhere in the world (subscription feature)

Extensive library of erotic audio stories which you can opt to connect your vibrator to, then it will vibrate in tandem with the pace of the story (subscription feature with some sample stories for free)

Start vibing

This vibrator comes partially charged. To get it all the way up, charge before use.



On your device, hold down the power button for two seconds to turn on.

Your Bluetooth will be enabled when the device turns on. The light will flash to indicate it is discoverable.

The app will detect your device. Select it, and your vibrator is synced!



To adjust intensity and patterns manually:
Click the buttons to enjoy various sensations.

Power your vibrator

Charging instructions

If your vibrator is feeling a little lowkey, it may be time for a charge.

Due to the unique design, each Vibes Only model charges slightly differently.

First, plug your USB cord into a standard charging block (high-power charging blocks may damage the battery).

Insert the DC jack (long skinny piece) into the small circle opening (tight hole) on the side of your vibe. Be gentle, but firm, until it's in as deep as it can go.

The light on your vibrator will flash to indicate that it's charging.

When it is fully gassed up (approx. 2 hrs) the light will change to a steady glow



Care for your vibrator ...and it will love you back!

Care instructions

We can't recommend using a water-based lubricant enough, such as Vibes Only Juiced Up. Avoid using a silicone-based lubricant as this could kill your vibrator. If you must use a silicone-based lubricant, perform a patch test first.

After every use, clean with warm water and antibacterial soap or toy cleaner. Dry thoroughly with a clean towel or air dry. Store in a cool, dry place and keep your vibrator away from toys made of other materials. Remember to charge periodically to maintain the battery life.

What NOT to do

- Use with oil-based massage oils or lubricants as it may damage the silicone.
- Leave your vibrator in direct sunlight or ever expose it to extreme heat.

Troubleshooting

Your vibrator's light does not pulse when the charger is connected? This could be why:

- Battery is fully charged (go off!)
- Battery is drained and will require several minutes to recognize that it is being charged.
- Charger is not properly connected. Check your charging block and charging cable.

Your vibrator does not connect with your phone when the button is pressed?

- Battery is drained and your device requires charging.
- Make sure you give Vibes Only permission to access Bluetooth in your phone settings.
- The Bluetooth on your phone is not enabled. Make sure to enable, or reset your phone if needed.
- You have exceeded the 10 seconds required for your vibrator to 'find' a device. Reset both your vibrator and your phone by turning off, waiting 30 seconds, then turning on. Now try again making sure your phone has fully restarted, with the Bluetooth switched on.

If you experience any other problems with your Vibes Only product or have any questions regarding operation, visit www.vibesonly.com or please contact: help@vibesonly.com.

What's your vibe?

Discover more:



@VibesOnly



vibesonly.com



Available on the
App Store



GET IT ON
Google Play

