




**TimeVocalist**  
Speaking Time. Simplifying Life!

# Instruction Manual

TimeVocalist Talking Clock Button / Model OSTC01

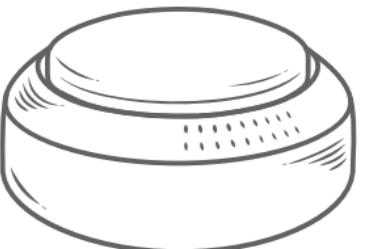

Notes: Please review this manual and keep it safe so that you can refer to it at any time before operation.



## Installation

Two batteries have been installed, please remove the insulation sheet before use.

## Setting the language

Press the bottom button, you will hear "Language setting".

Press the upper button as many times as necessary until reach the desired language.

Wait a few moments until you hear a short beep. This beep confirms that the language settings have been entered.

## Setting the time

Press the bottom button, you will hear "Hour setting".

Press the upper button as many times as necessary until the time is set correctly.

Confirm with the bottom button. You will then hear "Minute setting". Press the upper button as many times as necessary until the minutes are set correctly.

Wait a few moments until you hear a short beep. This beep confirms that the hour and minute settings have been entered.

## Setting the year, month and date

Press the bottom button until you hear "Year setting", "Month setting" or, "Day setting" depending on what you want to set.

Each time, press the upper button to select the desired date, month and year. Confirm with the bottom button or wait a few moments until the confirmation beep sounds.



## Setting the alarm clock

The alarm time is set in the same way as for setting the time. Press the bottom button until you hear "Alarm hour setting", or "Alarm minute setting". Press the upper button as many times as necessary until the desired hour or minute setting is obtained.

Wait a few moments until you hear a short beep. This beep confirms that the alarm settings have been entered.

## Usage format

Press the upper button once to hear the time. Press again to get the current date.

## When the alarm sounds

If the alarm is activated, a ring tone will sound at the programmed time.

Press the upper button to stop the alarm. It will sound again 24 hours later, unless you decide to turn it off.

## Turn on/off alarm

The switch on the back allows you to turn on or turn off the alarm.

## Standby mode

The device is equipped with a standby mode. If you press the upper button for 3 seconds, the watch emits a series of beeps and goes into standby mode. Simply press it again for 3 seconds to reactivate it. When the button is in standby mode, it no longer reacts to short button presses.

## RESET

Use a needle to press the reset hole at the bottom of the device to restore factory settings.





## TimeVocalist App

You can use TimeVocalist App to access more features.



### 1. Install TimeVocalist App

[ 1 ] Your Smartphone operating system must meet the following minimum requirements:

iOS: iOS version 10.0 or above; Android: Android version 9.0 or above.

[ 2 ] Download the TimeVocalist App from the App Store (iOS devices) or Google Play (Android devices).

### 2. The TimeVocalist App connects to devices

[ 1 ] Turn on the Bluetooth on the phone(Android device users should turn on location services).

[ 2 ] Open the TimeVocalist App, click the "Add Device" button on the first page, and follow the App page to complete connecting the device.

### 3. Change the alarm sound source

You can change the alarm sound source through the TimeVocalist APP. There are two types of sources: Ringtones and Voice Reminders. Please see APP for details.

### Customer service

If you have any difficulties with your talking button, please contact us via [cs@timevocalist.com](mailto:cs@timevocalist.com)

We only want satisfied customers! We care about you.

### FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC exposure limits set forth for an uncontrolled environment.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.

