

# World Tag

## User Manual

Model: World Tag



### Index

#### 01 Getting Started

#### 02 Add Your World Tag

#### 03 Locate Your World Tag

#### 04 Notifications

#### 05 When Your World Tag Is Lost

#### 06 Resetting World Tag

#### 07 Extras

#### 08 The Fine Print

#### 09 About Apple Find My

#### 10 Battery

### 01 Getting Started

#### 01.1 Power On / Off:

Press the World Tag Function Button once to turn it on. It should beep once to indicate that it is powered on.

To power off, hold the same button for at least three seconds. You will hear two beeps to indicate that your World Tag is powered off.

#### 01.2 Check For Updates:

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

### 02 Add Your World Tag

#### 02.1 Start The App

Open Find My app on your supported iPhone. It should open the Find Items app on your Apple Watch.

Tap on your World Tag from the list.

#### 02.2 Connect Your World Tag

Press the function button once to power on your World Tag.

Tap "Play Sound" to make your World Tag beep.

Tap "Stop Sound" to stop the beeps once you find.

### 03 Locate Your World Tag

#### 03.1 Find World Tag When It's Nearby:

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

Tap on your World Tag from the list.

#### 03.2 Connect Your World Tag

Under "Notifications", enable the "Notify When Left Behind" toggle.

You will receive a notification when you leave your World Tag behind and it's no longer in range of your device.

### 04 Notifications

#### 04.1 Enabling "Notify When Left Behind":

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

Tap on your World Tag from the list.

#### 04.2 Enabling "Notify When Found":

Under "Notifications", enable the "Notify When Found" toggle.

When your World Tag is seen by another Find My network device, you will receive a notification of its location.

### 05 When Your World Tag Is Lost

#### 05.1 Enabling "Lost Mode":

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

Tap on your World Tag from the list.

#### 05.2 Enabling "Notify When Lost":

Under "Lost Mode", tap "Enable".

A screen detailing Lost Mode will pop up, tap "Continue".

Enter your phone number or email address and tap "Next".

You may enter a message that will be shared with the person that finds your item.

Tap "Activate" to enable Lost Mode.

Note: When Lost Mode is enabled, "Notify When Found" is automatically enabled.

Note: When Lost Mode is enabled, your World Tag is locked and cannot be paired to a new device.

## 06 Resetting World Tag

06.1 Remove The World Tag From Find My App:  
Open Find My app and select the "Items" tab.  
Tap on your World Tag from the list.  
please ensure "Lost Mode" is disabled.  
Scroll to the bottom of the screen and tap "Remove Item".  
A summary will open, tap "Remove" to confirm.

06.2 Factory Reset Your World Tag:  
After successfully removing the World Tag from Find My app, press the World Tag's function button four times rapidly and then hold it a fifth time until you hear a ringing chime.  
The World Tag is now reset and ready to be paired to a new Apple ID.

## 07 Extras

07.1 Unwanted tracking:  
If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:  
1. If you have an iPhone, iPad, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.  
2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.

These features were created specifically to discourage people from trying to track you without your knowledge.

Just a reminder: If you're using the Find My app to track your child, make sure they're old enough to understand what's happening.

It's also a good idea to keep your child's information up-to-date in the Find My app.

Finally, always use the Find My app to track your child's location, not the Find My network.

That's it for now! We hope you found this guide helpful.

Stay tuned for more tips and tricks in the future!

## 08 The Fine Print

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.

World Tag contains a coin cell battery. The battery may need to be replaced during the life of the product. Replace only with the same type (CR2032) and rating of battery, observing the correct polarity.

To replace the battery:  
1. Use your fingernail or a small tool to open the cover.

2. Use a paperclip to remove the battery and replace with new one. Close the plastic terminal.

3. Close the battery cover by pulling the hole. There is a risk of fire or electric shock if the battery is replaced by an incorrect type. Important: Dispose of used battery according to local environmental laws and guidelines.

Keep batteries away from children. Do not ingest battery. If ingested or placed inside body seek medical attention immediately. Licking can cause severe chemical burns. Just two hours can result in serious injury or death. If the battery compartment does not close securely, stop using the device and keep away from children.

## 08 The Fine Print

The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My app on your iPhone, iPad, or Mac. Simply pair your compatible product with the Apple Find My app to view it right alongside your Apple devices. If your item ever goes missing, you can put it in Lost Mode to display a message and contact information for anyone who might find it. The Find My network is encrypted and anonymous, so no one else, not even Apple or the maker of your personal item, can view its location.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Keep batteries away from children. Do not ingest battery. If ingested or placed inside body seek medical attention immediately. Licking can cause severe chemical burns. Just two hours can result in serious injury or death. If the battery compartment does not close securely, stop using the device and keep away from children.

## 09 About Apple Find My

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

World Tag contains a coin cell battery. The battery may need to be replaced during the life of the product. Replace only with the same type (CR2032) and rating of battery, observing the correct polarity.

To replace the battery:  
1. Use your fingernail or a small tool to open the cover.

2. Use a paperclip to remove the battery and replace with new one. Close the plastic terminal.

3. Close the battery cover by pulling the hole. There is a risk of fire or electric shock if the battery is replaced by an incorrect type. Important: Dispose of used battery according to local environmental laws and guidelines.

Keep batteries away from children. Do not ingest battery. If ingested or placed inside body seek medical attention immediately. Licking can cause severe chemical burns. Just two hours can result in serious injury or death. If the battery compartment does not close securely, stop using the device and keep away from children.

## 10 Battery

World Tag contains a coin cell battery. The battery may need to be replaced during the life of the product. Replace only with the same type (CR2032) and rating of battery, observing the correct polarity.

To replace the battery:  
1. Use your fingernail or a small tool to open the cover.

2. Use a paperclip to remove the battery and replace with new one. Close the plastic terminal.

3. Close the battery cover by pulling the hole. There is a risk of fire or electric shock if the battery is replaced by an incorrect type. Important: Dispose of used battery according to local environmental laws and guidelines.

Keep batteries away from children. Do not ingest battery. If ingested or placed inside body seek medical attention immediately. Licking can cause severe chemical burns. Just two hours can result in serious injury or death. If the battery compartment does not close securely, stop using the device and keep away from children.

## 10 Battery

**! WARNING:** Do not ingest battery. Chemical burn hazard.

**Choking hazard:** World Tag's battery compartment door, the battery and case may present a choking hazard or cause other injury to small children. Keep these items away from small children.

To replace the battery:  
1. Use your fingernail or a small tool to open the cover.

2. Use a paperclip to remove the battery and replace with new one. Close the plastic terminal.

3. Close the battery cover by pulling the hole. There is a risk of fire or electric shock if the battery is replaced by an incorrect type. Important: Dispose of used battery according to local environmental laws and guidelines.

Keep batteries away from children. Do not ingest battery. If ingested or placed inside body seek medical attention immediately. Licking can cause severe chemical burns. Just two hours can result in serious injury or death. If the battery compartment does not close securely, stop using the device and keep away from children.