


1. Product Introduction

(The product will be continuously upgraded and improved, everything will be based on the actual product)

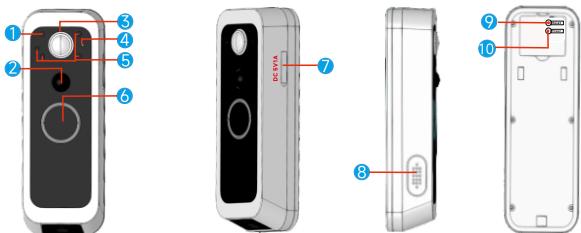

(Doorbell)

1.IR Sensor
2.PIR Human Detection
3.Lens
4.Microphone
5.IR Leds
6.Doorbell Button
7.7.5V-1A Charging Port
8.Speaker
9.Pairing Button
10.Power ON/OFF



A.TF Card Slot
B.5V1A Charging
C.Power On/off
D.TF Card Slot
E.Signal Indicator
F.Date&Time
G.Microphone
H.Answer Button/
Long Press Intercom
I.Indicator light(red
charging,black-full,
blue-working)
J.Home Button to
View
K.Video Playback
L.RX Display Battery Level
M.TX Doorbell Battery Level
N.Display screen
O.Intercom Indicator
P.Volume+/Up Button
Q.Menu Button/OK Button
R.Volume-/Down Button

Note:

- 1.The product does not support fast charging. Do not use fast charging adapter to avoid burning out the product,please use a 5V1A adapter.
- 2.The product has been paired at the factory and can be used directly. If you need to pair again, please refer to the pairing operation.

2. Product Pairing

(Factory default pairing and can be used directly)Please note:

- 1.Use a screwdriver to remove the anti disassembly screw at the bottom of the doorbell, as indicated by the arrow in Picture 1 (if the screw is not installed on the new machine, it can be removed directly).
- 2.Move the doorbell host and the fixed backboard in the opposite direction (indicated by the arrow in Picture 2) to remove the fixed backboard.
- 3.After separating the backboard and doorbell, find the reset button on the back of doorbell (indicated by the arrow in Picture 3) and press&hold for 3-5 seconds.
- 4.The doorbell indicator light (indicated by the arrow in Picture 4) flashes alternately, the doorbell is pairing mode.
- 5.Turn on the display and press&hold the volume+ (indicated by the arrow in Picture 6) for 3-5 seconds. The indicator light will turn on (indicated by the arrow in Picture 5), after the indicator light flashes alternately, and then release, the display shows device pairing, and then press the volume+ button, it will automatically enter pairing mode.



3. Function settings

Press the OK(menu) button on the right to enter the settings page, and move the up and down buttons to select the appropriate option,press the OK button or answer button to access the individual function settings.

Menu page (Enter by pressing the menu page)

1.PIR
2.Ring
3.Time
4.SDCard
5.Language
6.Volume
7.Brightness
8.ColorMode
9.Watch
10.Version
Back

2.Ring set (Set ringtone as needed)

Doorbell: Ring 1 Ring 2
Ring 3 mute
Alarm: Ring 1 Ring 2
Ring 3 mute

Move the cursor up and down, press the confirm key to select settings, Return button to return to the main menu

Black

1.PIR Setting

Enable: On/Off
Default Time: 150 seconds
Sensitivity: 0/1/2/3
The blue background and white dots indicate the set functions, while the white dots indicate the pending options. Once set, press the down button to select the function, press the confirm button to confirm the setting, and then press the up and down key to set other values. Once set, press the confirm to set all values, and then return to the main menu
Black

3.Time setting

YYYY MM DD hh mm
1970 01 01 00 23
Press the confirm button and move the up and down buttons to adjust the value. Once set, press the confirm button again to confirm the setting, and then press the up and down key to set other values. Once set, press the confirm to set all values, and then return to the main menu
Black

5.Language settings (Set language as needed)

English
简体中文
Move the cursor up and down, select the desired language, and press the confirm button/Save settings, return key to main menu
Black

6. Volume Setting

Volume: 5

Press the OK button and move the cursor up and down to adjust the sound volume. Press The confirm button saves the selection, and the return button returns to the main menu

Black

8. Color settings

ColorMode: Auto
 Day
 Night

Move the cursor up and down and press the confirm key to select the desired mode. Save selection, use the back button to return to the main menu

Black

4.FAQ:

4.1.1. Usage (Press and hold the power button for 3 seconds to turn it on or off)

1. Intercom function (the doorbell and display screen need to be separated by a certain distance when intercom, otherwise there will be whistling noise that interferes with the intercom experience)

When press the outdoor doorbell button, the indoor display screen will ring with an image. At this time, press the answer button on the display screen, you can see the outdoor video and sound. Press and hold the answer button, and a microphone image will appear in the lower right corner of the display screen, you can communicate with outdoor visitors.

2. Home button function(wake up)

When the product is in sleep mode, press the home button on the display screen to wake up the outdoor doorbell to view or face to face communication.

3. Video playback function (please use a high-speed monitoring dedicated card in FAT32 format, inferior cards will affect the normal use of the device)

When the product is turned on, please click the playback button on the display screen, you can view the captured video playback.

4. After the setting is completed, the parameters will only take effect after pressing the doorbell to start the device or waking up the device once

7. Brightness setting

Brightness: 5

Press the OK button and move the cursor up and down to adjust the brightness value. Press The confirm button saves the selection, and the return button returns to the main menu

Black

9. Monitoring Settings

Always on screen

Press the confirm button to select or cancel, save the selection, The return button returns to the main menu

Black

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.