

Wireless headset
instructions

© Disney

Specification of Earbuds

Wireless version : 5.3
Protocol: Supports HFP 1.7, HSP 1.2,
AVRCP 1.6,SPP 1.2 and PBAP 1.0
Speaker Diameter : 6mm
Working distance: 10m
Call Time: 5-6H (1 time full charged)
Play Music Time: 5-6H (1 time full charged)
Battery type: 3.7V
Charging Time: 1-2H
Working Temperature: -10°-55°

Specification of charger case:

Input current: 5V—0.4A
Battery type: 3.7V
Charging time:1-2H

Serious warning:

Do not use this product while charging. Please use the acadapter specified by the manufacturer to charge the product. Do notdi sassemble the built-in lithium battery. Do not let the metalcont act ar short the electrode.Do not touch or squeeze thebattery to avoid Place in a humid or hot (> 60 C) environment.

Fitting

The left ear

The right ear

Instructions:

1. Ensure that the charging cabin is charged. If the charging cabin is out of power, please fully charge the charging cabin. (Pick up the two earphones and put them back on the cover. If the indicator light of the charging bay is on, it means there is electricity, and if it is not on, it means there is no electricity.)
2.Take the two earphones out of the charging cabin and putthem on the left and right ears respectively. The earphones will be powered on automatically and paired automatically. (Voice prompt: power on, left channel, right channel, waiting for connection)
③ Mobile phone connection operation: open bluetooth search of mobile phone, and click the link in the device name that is found to have the model of the machine (S880). The left and right channel earphones voice prompt "Connection successful" and the mobile phone display: connected, ready to use.

Warning remain

For the first time to use the earbuds or for a long time to no use, please charge the charging case and earphones before,Please keep it in an unobstructed and effective environment within 10meters. Otherwise, it may be stuck and disconnected.
Up and down operation: double click to touch the multi-function button next or previous song
Hold for 3 seconds to turn on/off
Click Pause/Play

Double click/Next or previous

Increase or decrease (+/-) Volume operation: Tap and touch the volume "+" or volume "-" of the multi-function button three times in a row, or directly adjust the volume by using the volume key on the mobile phone

Three strikes/volume "+" or volume "-"

Single Earbud Mode:

When the main earbud (L) and the secondary earbud (R) are not connected, taking out one of any of the earbuds separately from the charging case.The earbud prompts "turn on" . then for 3 seconds, the blue light flashes—the red and blue lights flash alternately, open the mobile phone Bluetooth function, search for the Bluetooth device and Click Connect, the "Bluetooth Connected " will be displayed in the upper right corner of the phone screen, and the earbud will prompt "Connected", or the manual operation of a single earbud will repeat the above operation.
Dual mode operation:
continuously tap the headset to touch the position for 4 times to switch the game mode

Operation for more than two times:

Connect with the used mobile phone - turn on the bluetooth of the mobile phone and take out the earphone in the charging bin at the same time. It will automatically connect with the mobile phone without any operation. If you use a different mobile phone for more than two times, follow the instructions before using it.

Safety guidance:

1.please use the standard 5V charger (4.9-5.5V)
2.Do not place the charging case and the Bluetooth earbudsnext to the flammable explosives.
3.Do not disassemble the charging case and Bluetooth earbuds,or insert other items into the product to avoid damage to thep roduct or even cause harm to you.
4. Please do not give the headset to children to play, so as to avoid accidental eating by children!

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet generalRF exposurere quirement. The device can be used in portable exposure condition without restriction.

型号	S800-S880-S808(迪士尼双语说明书)
尺寸	60*46mm
工艺材质	80克书写纸