



<p>3. Safety Guidelines</p> <p>Please read and adhere to the following guidelines to enhance product longevity and ensure safe operation:</p> <ul style="list-style-type: none"> Ensure that the computer's ventilation openings are unobstructed to prevent overheating. Avoid applying excessive pressure to the display. Place the notebook on a stable, level surface. Do not use the computer in extremely hot or cold environments. Do not operate the laptop in harsh environmental conditions. Keep the laptop away from magnetic fields and direct sunlight. Avoid using the laptop in extreme temperatures or exposing it to moisture. Do not drop the laptop. Do not tamper with the battery, and keep it out of reach of children. Do not use the laptop near water or liquids. Do not force the laptop screen open or use the display to the limit of the device. Do not spill liquids directly onto the display. Do not use the laptop in extremely cold or hot environments. Extreme temperatures may pose a risk of explosion. <p>4. Troubles Shooting:</p> <p>If you encounter issues with the laptop, follow these steps:</p> <ol style="list-style-type: none"> Check if the power adapter is properly connected to the computer and the power outlet. Ensure that the AC power adapter is connected to the computer and the power outlet. Verify that all external devices are properly connected or disconnected them to eliminate potential sources of error. Wait for the computer to cool down. If it has been off for at least 10 seconds, and check if the boot sequence is normal. 	<p>5. Packing List:</p> <p>Your package includes:</p> <ul style="list-style-type: none"> User Manual (x1) AC Power Adapter (x1) Notebook Computer (x1) <p>6. Warranty Information</p> <p>The product is covered for a period of 2 years from the date the product was sold to the consumer. The date of the first use, certified by the proof of purchase issued by the seller.</p> <p>During the warranty period, Nimo service center will repair or replace defective parts or products free of charge if the failure occurs under normal usage. Replacement products or parts may be refurbished, and the remaining warranty period will be extended by the same period of time as the original product has been discontinued, modified, or replaced without Nimo's substitution.</p> <p>The warranty does not cover damage caused by intentional or accidental neglect, misuse and damage to:</p> <ul style="list-style-type: none"> Use non-specified specifications. Cracked or broken screen. Damaged housing, cover, bottom, pins, or connectors. Water damage (as indicated by internal liquid contact indicators). 	<p>For warranty support or repair, contact Customer Care:</p> <ul style="list-style-type: none"> Phone: +86 10 5855 0000 Email: service@nimo.com Website: www.nimo.com <p>7. Safety Information</p> <p>Please carefully review this safety information to ensure safe use of your device.</p> <ul style="list-style-type: none"> Child Safety: Avoid leaving children alone as near the device. The device has small, detachable parts that could pose a choking hazard. Hearing Protection: Avoid prolonged exposure to high volume when using headphones, as this may lead to hearing damage. It is recommended to use the headphones at a low volume. Seat Driving: For your safety, do not use the device while driving. Maintaining full attention on the road is crucial to minimize the risk of accidents. RF Exposure: The device complies with the limits for a Class B digital device, as set out in the International Commission on Non-Ionizing Radiation Protection (ICNIRP) guidelines and in the European Council Directive 2004/108/EC. The device provides reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that this interference will not occur. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver. Connect the equipment to an outlet on a circuit different from the one to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for assistance. 	<p>temperature power limit: 5°C, above 40°C.)</p> <p>8. Shock and Impact Resistance: Handle the device with care to prevent damage from shocks or impacts. Avoid dropping the device or applying excessive force to the screen.</p> <p>9. Electrical Safety: Do not attempt to disassemble the device, as this could result in electric shock or fire.</p> <p>10. Maintenance: Clean the device using a dry cloth. Avoid using solvents, such as benzene or alcohol, as they may damage the device.</p> <p>11. RF Interference: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>12. RF Exposure Information:</p> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the user and the body.</p>	<p>2. Instructions For Use:</p> <ul style="list-style-type: none"> • Press the power button when the device is connected to an AC power adapter or that the battery level is sufficient. Briefly press the power button to set the computer to sleep mode. • During use, pressing the power button briefly will suspend, resume, or shut down the computer, according to the system settings. <p>2.1 Function Keys:</p> <p>The product includes 12 function keys (F1-F12), each assigned to specific computer functions to be used in combination with the 'Fn' key. Below is a summary of their functions:</p> <ul style="list-style-type: none"> • F1 Decrease Screen Brightness • F2 Increase Screen Brightness • F3 Volume Up • F4 Volume Down • F5 Media/Multimedia Touchpad • F6 Media/Multimedia Audio • F7 Decrease Volume • F8 Increase Volume • F9 Display Panel Backlighting • F10 Open Screen Cover (Equivalent to Win + Shift + S) • F11 Open Camera (Equivalent to Win + C) • F12 Enable/Disable Touchpad <p>2.2 Power Supply and Charging:</p> <p>This section can be followed using a power adapter or an AC power adapter. Upon unpacking, connect the AC power adapter to charge the computer before first use.</p> <ul style="list-style-type: none"> • Make sure the device does not have a 'Memory effect', as they can be exchanged at any time without waiting for complete discharge. • Charging times may vary depending on the computer, as well as the battery. • To protect battery life, the battery will charge when the power line is below 90% of the total capacity. The battery will not charge when the power line is above 90% of the total capacity. • When the battery is low, a warning prompt will appear on the screen. This message will appear again when the battery level is very low. At this point it may shut down, potentially causing unsaved data loss. Please charge the battery promptly. • Always use the original power adapter to avoid potential damage to the computer. • Lithium batteries contain toxic and harmful substances. Please recycle the battery in accordance with local environmental regulations and avoid disposing of it improperly to prevent environmental pollution. <p>2.3 Cleaning, Maintenance and Storage:</p> <p>Before cleaning the product, turn off the system and unplug the adapter.</p> <ul style="list-style-type: none"> • Clean the products exterior with a damp cloth and dry it when it is dry. • Avoid using abrasive materials to clean the device. • Avoid immersing the product in water or other liquids. • After cleaning, store it in a dry, flat environment.
--	---	---	--	--

说明书: 105*147MM 158G双铜纸