


WC010A

Multi-functional music player
Manual Instruction

MULINO™

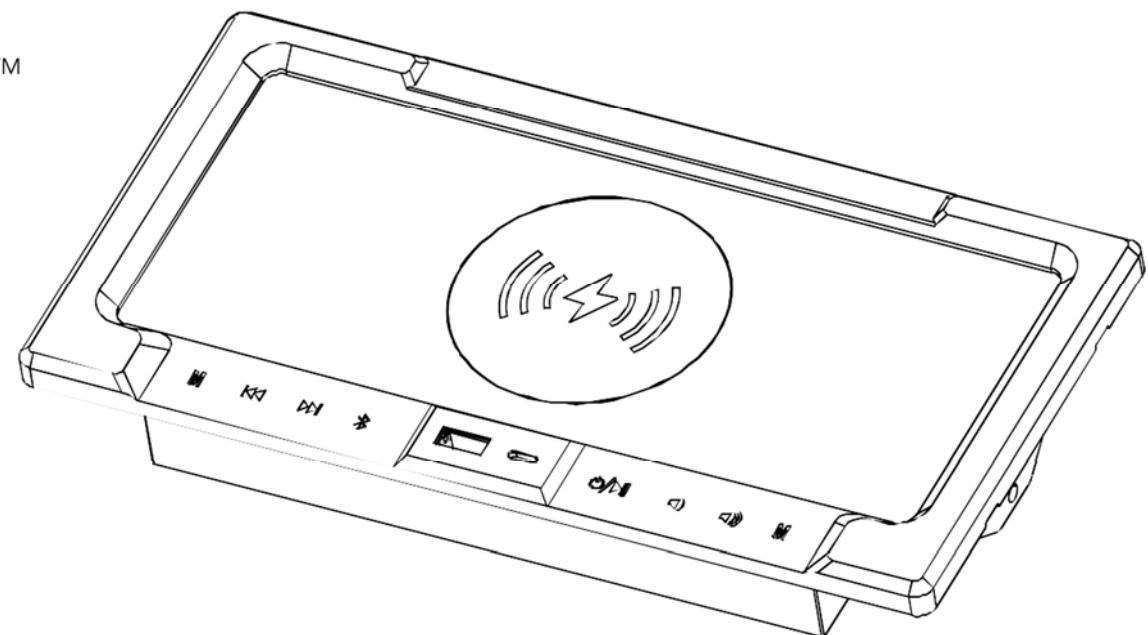

Contents

Safety Regulations	1
Specification Parameter	2
Packing List	3
Equipment Overview	4
Basic Operations	5
Warranty	6
Warning	7
Troubleshooting	8
Statement	9

● Safety specification

Please read the instructions before using this product

Do not place this product in wet or near water.

Do not place this product in fire or near fire source.

Connect all the wires before connecting the power supply

This product is only applicable to AC 110V-240V voltage environment, please shut down before power outage

Do not expose this product to the sun or in a high temperature environment lasting more than 35°C

Do not wipe this product with a wet towel

Do not come into contact with chemicals

Please take this product to professional repair, do not repair yourself.

Please do not insert foreign matter into this product

● Specification parameter

This product can charge mobile phones

Input parameter DC 24V 2A

Wired output

(USB-A) 5V==2A MAX

(Type-C) 5V==2A MAX

(USB A & C) 5V==2A MAX

Wireless output power 5 W MAX

USB-A output power 10W MAX

Type-C output power 10W MAX

Total output power 15W MAX

● Packing list


Multi-function music player ----- 1 pc
(without speakers)

Mounting base ----- 1 pc

Extension cable ----- 1 pc

Manual instruction ----- 1 pc

● Equipment overview

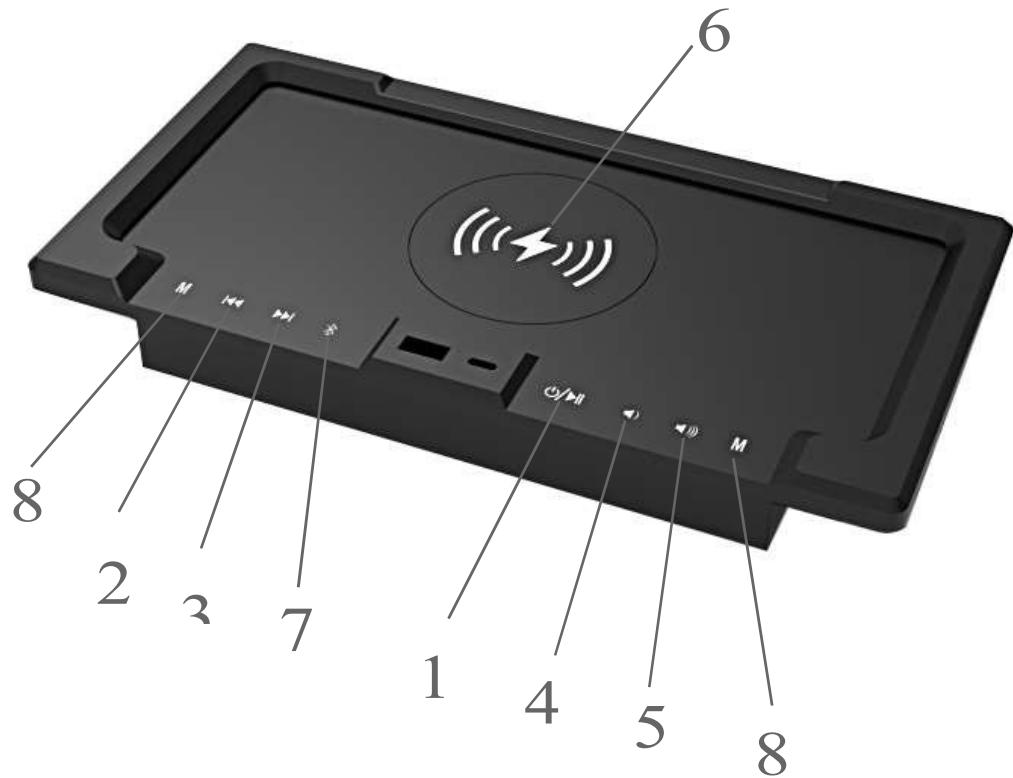

Number	Design	Function
1	▶/	Power on/off (long touch for 3 seconds) Play/Pause(touch)
2	◀◀	Previous song (Touch to switch)
3	▶▶	Next song (Touch to switch)
4	🔉)	Volume reduction (Touch to decrease, long touch to decrease continuously)
5	🔉))	Volume up (Touch to increase, long touch to increase continuously)
6	((◀))	Wireless charging area
7	Bluetooth	Bluetooth networking, master/slave switchover
8	Ⓜ	Rhythm vibration (Green) massage vibration (Red) Vibration off (Off)

● Basic operation

Connect the power adapter

Connect the DC plug of adaptor to the power plug of this product, and then connect the AC plug of adapter to the 110V-240V AC power.

1. When performing the above operations, ensure that your hands are dry.
2. If this product is not used for a long time, the product should be disconnected from the power supply.
3. Do not pull the power cord to remove the power supply.

Bluetooth mode

After the player is turned on, open the Bluetooth pairing interface of the phone and search for Mulin Audio WC010A for pairing. Once paired, the song can be played through the phone's Bluetooth.

Attention:

Bluetooth only supports 1-to-1 connection. When a device connects to this product through Bluetooth, other devices cannot be connected.

Incoming calls

When the music is playing, the player will pause the music playback when there is an incoming call, but will not play the phone ring tone and call content.

Vibration mode

When the music is playing, you can turn on the rhythm mode to enjoy the Vibroacoustic Therapy. To enjoy to massage experience, you can choose "vibration massage" mode when turn on the device.

● Warranty

The warranty period of this product is 12 months from the date of purchase.

Accessing products that are not compatible with this product will result in you losing your warranty rights. This product is damaged due to personal negligence and is not covered by warranty.

● FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

● Troubleshooting



Before calling for service on this product, please review the following answers to find the possible cause of the problem you are experiencing. Some simple checks or minimal adjustments you can make may solve the problem and restore normal operation. If you have any questions about certain inspection points, or if the problem cannot be solved, please leave it to professional maintenance personnel for repair.

Problem	Possible causes and solutions
Unable to boot	<ol style="list-style-type: none">1. The power supply is not connected2. The cable is disconnected3. Equipment damaged, please contact the dealer to replace
No response to touch	<ol style="list-style-type: none">1. Reconnect 15 seconds after disconnect the power and try again2. Equipment damaged, please contact the dealer to replace
Bluetooth connection failure	<ol style="list-style-type: none">1. Shut down other devices that are paired with it and reconnect them2. Restart the product and reconnect it3. Please do not connect more than 8 meters away from the product4. Please do not attempt to connect the product through obstacles5. The distance between master and slave should not be greater than 20 m
No sound	<ol style="list-style-type: none">1. The volume has been adjusted to the minimum level. Please increase the volume and try again.2. The wire is not connected properly, please reconnect the wire and try again3. The speakers are damaged, please contact the dealer to replace it
USB/TYPE-C cannot be charged	<ol style="list-style-type: none">1. The port is not properly connected. Reinsert the port and try again2. The interface is damaged, please contact the dealer to replace it

The serial number of this product is affixed to the last page of the manual.
If you have any other questions, please contact us by email:

China

groupsales@mlmotor.cn

America

Moncef@mulinelectric.com

Vietnam

1072490136@qq.com