

ALEXA VOICE REMOTE

USER MANUAL



If your remote isn't working. Here are several ways to pair your Fire TV Stick remote manually, and how you can use the [smartphone](#) as remote instead.

Option 1 How to pair an Fire Stick Remote

Without old remote

To quickly pair an Fire TV Stick remote, press and hold the Home Button for 10 seconds or until the light at the top of your remote starts blinking quickly. You will see an on-screen message or the light on your remote will flash blue three times when it has been paired.



If the remote doesn't work, try resetting the remote according to the below steps :

1. Unplug your Fire Stick from the power outlet for 60 seconds.
2. Then press and hold left, menu, and back on your remote for 12 seconds.
3. Next, wait five seconds and remove the batteries from your remote.
4. Then plug your Fire stick back into the power outlet and wait 60 seconds.
5. Next, insert the batteries in your remote.
6. Finally, push the home button on your remote.

Note: It might take a minute for your remote to pair with your Fire TV. If it still doesn't pair after a few minutes, try to hold down the Home Button for 10 seconds.



Opcion 2 How to pair a Replacement remote to Your Fire TV

With old remote

If you're trying to pair a new and replacement remote, you can use the old remote to add it into your fire stick manually. Here's how:

To pair a replacement remote for your Fire Stick, [go to Settings > Controllers & Bluetooth Devices > Amazon Fire TV Remotes > Add New Remote](#). Then hold the Home Button on your **new** remote for 10-15 seconds and select the new remote's name with your **old** remote to confirm.

Opcion 3 How to pair a Replacement remote to Your Fire TV

With smartphone

If you don't have a Fire TV remote that works, you can also use your smartphone to add and remove remotes. Firstly you have to download the " Amazon Fire TV " APP and connect to remote. Then follow the steps of **Opcion 2**.

Kindly Attention:

If you find the [power button](#), [Volume +](#), [Volume -](#) and [Mute](#) doesn't work with your TV, you may need to use your remote to learn and program through your Fire Stick or Fire TV System.

Please follow the instructions as below:

[Setting](#) [Equipment Control](#) [Management Equipment](#) [TV](#) [Change TV](#)

Then choose your Brand of TV.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.