

AFFVER[®] A4

Dual Channel 4K Dash Cam

USER MANUAL



WARRANTY



**REGISTER WITHIN THE FIRST
30 DAYS**

**Scan the QR code to register the
product warranty**

WATCH GUIDE VIDEOS

WATCH GUIDE VIDEOS

Thank you for choosing an Affver Dash cam.


The more familiar you are with your dash cam, the better effect you will have on the road. We therefore strongly suggest you watch our guide videos.

1 Scan the code with your cellphone



2 Visit the following link in your computer's browser

<https://www.youtube.com/playlist?list=PLUKmX2ADhfG-GuxWx9z-4FPvOe1Pp7gile>

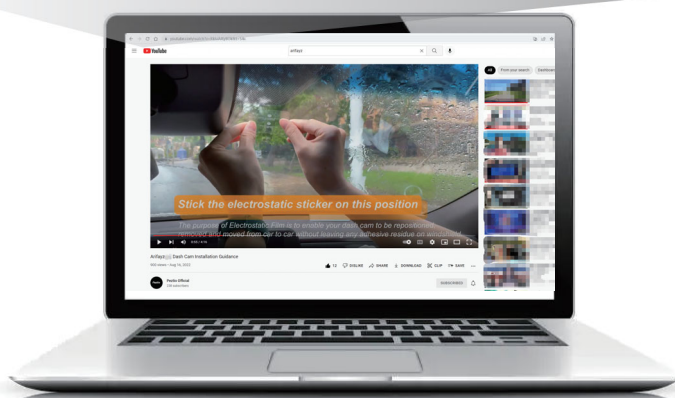

NOT SATISFIED / NEED SUPPORT?

Dear customer,

If you are not satisfied with our product or have issues while using our product, please feel free to contact us before you return the product to us, we will try our best to help you!

CONTACT US HERE

OUR EMAIL ADDRESS:

support@affver.com

Scan the code with your
cellphone and you can email us
directly!



OUR WhatsApp

Scan the code with your
WhatsApp and chat with our
support right now!



**Typically we will reply to you in 24 hours on
business days!**

MUST READ

MOST IMPORTANT

- 1 Keep the A4 dash cam connected to the provided cigarette lighter charger for daily use, as it doesn't have a built-in battery. If your car lacks a cigarette lighter port, contact us for a compatible USB Type-C cable. Ensure the power source provides a 5V/2A output to avoid issues with this 2-channel dash cam.

- 2 Free 64GB SD card has been pre-installed into the camera SD card slot. If you receive the camera without an SD card, please get in touch with us promptly to receive one.

If you find the provided memory card's capacity too small, you can consider getting a larger one from Amazon. We suggest inserting a SAMSUNG / PNY Class 10 U3 speed micro SD card (up to 256GB) into this A4 dash cam. To make a purchase, simply search for B09WB3D5GQ on Amazon.



- 3 To connect the camera using the Peztio app, ensure that the camera's WiFi hotspot is enabled. The A4's WiFi hotspot name and default password are provided below:

WiFi Name: Peztio-A4_****

Default Password: 12345678

- 4 We will offer you a type C hardwire kit if you need to use the 24 hours parking monitor function. Please kindly email or text us via email address or WhatsApp.



INDEX

Tips before Use	1	Video Settings	30
Package Contents	4	24H Parking Mode	32
Product Overview	5	System Settings	34
Buttons Functions	6	Reset the Camera	37
Screen Overview	8	Playback Videos	38
Installation	9	Specifications	41
Insert/Remove an SD Card	10	FAQ	42
Format the SD Card	11	Thank You	43
Mount A4 on Windscreen	12	Contact Us	43
Connect Power Cable	13		
Install Rear Camera	14		
Final Adjustment	16		
WiFi Connection	20		
Download Peztio App	21		
Authorize App Permission	21		
Connect to WiFi	23		
Start to Use App	26		
App Introduction	27		
Live Video Interface	27		
Camera File Interface	28		
Get Support from App	29		

READ BEFORE USE



For your quick start and make sure your A4 dash cam works properly, please read the following notice carefully.



Camera repeatedly power on and off

This situation may be caused by the SD card being full, please format the SD card first (see page 11 of this booklet). Also, please ensure that you are using the original cigarette lighter power cord and the CLASS 10, U3 Speed memory card. If the issue persists, please contact us at our email address for further assistance.



No GPS Signal?

When powering on for the first time or after a long period of inactivity, the GPS signal search may take longer than usual. Please be patient while waiting for the GPS signal to be located.



Rear camera doesn't display? Or shows a black image?

Please make sure the socket is completely inserted into the main camera, if you have not completely insert the plug into the main camera, the rear image will show black screen, contact us if it still not working.



Drain My Car's Battery?

Some customers(using the provided car charger) may find the A4 dash cam will drain their cars' battery after they park the car for a whole night, this issue happens when your car does not cut the power supply after you shut down the car (while other models do). So we recommend you connect the dashcam charger with another port from your car that can cut the power after your key is off in this situation. If there is no ideal port from your car, please contact us for a hardwire kit as this kit can cut the power to the dash cam when it detects the battery voltage drop and retain enough power for the next start.

 Glue pad falls off from windshield.

Please stick the electrostatic film on windshield firstly, then stick a new glue pad on electrostatic film. When applying the glue pad, please press the sticky pad firmly to ensure that it completely adheres to the electrostatic film.

 Parking monitor is not available?

To enable the 24-hour parking monitoring function on this dash cam, you will require a USB hardwire kit (NOT included in the package). You can find the recommended kit on Amazon by searching for B0DCNSYCF9. If you prefer to get a hardwire kit from us by joining the promotion, please feel free to reach out to us via WhatsApp or email.

 Failed to connect the camera WiFi?

- (1) Make sure the VPN on your phone is turned off.
- (2) This issue may happen to iOS Carplay / Android Auto users- by default, the mobile phone prioritizes the connection with Carplay or Android Auto, making it challenging to establish a connection with the camera. To successfully connect the camera, please follow these steps:
 1. Disable your mobile phone's Bluetooth.
 2. Disconnect from any existing WiFi connections.
 3. Turn off your car and ensure your mobile phone is no longer linked to Carplay or Android Auto.

Generally, it's advisable to maintain the priority connection with Carplay or Android Auto. The dash cam will continue recording automatically without needing to connect to your cellphone's WiFi, functioning as long as it has a power source.

READ BEFORE USE



No internet on you phone after connect the camera WiFi?

Once you connect to Peztio-A4-**** WiFi, it will say 'No internet connection', which is fine and please select 'Keep trying wifi'. But you can not use the internet data at this moment, if you want to use the phone network,(for music, navigation etc.) just disconnect the camera WiFi. The camera will continue to record even when it is not connected to your cellphone. In other words, you don't need to connect to the dash cam WiFi all the time.



Video Miss?

- (1) A4 dashcam has a Loop Recording function, it will delete the oldest files and record newer files when the SD card is full except for the locked video files. We recommend you single press **M** BUTTON to lock the video manually when an event happens in case the event does not trigger the Gravity Sensor from locking, A4 will prompt 'Video Locked' when it does.
- (2) For the event video lock by you manually or by the Gravity Sensor, it will be saved in the folder named 'Lock', please pay attention to that as you can not find the event videos from normal recording folder.

Find us here for any issues, we will reply in 24 hours!



support@affver.com

Scan the code with your
cellphone and you can email




Scan the code with your
WhatsApp and chat with our

PACKAGE CONTENT




A4 Dash Cam

4K(F)+1080P(R)

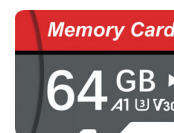

64GB SD Card Included

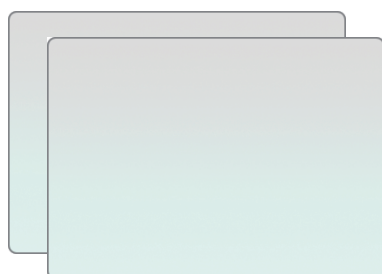


Electrostatic Film



Car Charger



Rear Camera

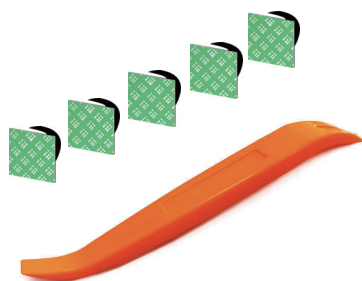

Wiring Tools



User Manual




Warranty Card



1. Free 64GB SD card has been pre-installed into the camera SD card slot. If you find the provided memory card's capacity too small, you can consider getting a larger one from Amazon. We suggest inserting a SAMSUNG / PNY Class 10 U3 speed micro SD card (up to 256GB) into this A4 dash cam. To make a purchase, simply search for B09WB3D5GQ on Amazon.
2. If there is no cigarette lighter port in your car, please email us support@affver.com to get a USB C cable from us.

PRODUCT OVERVIEW

PRODUCT OVERVIEW

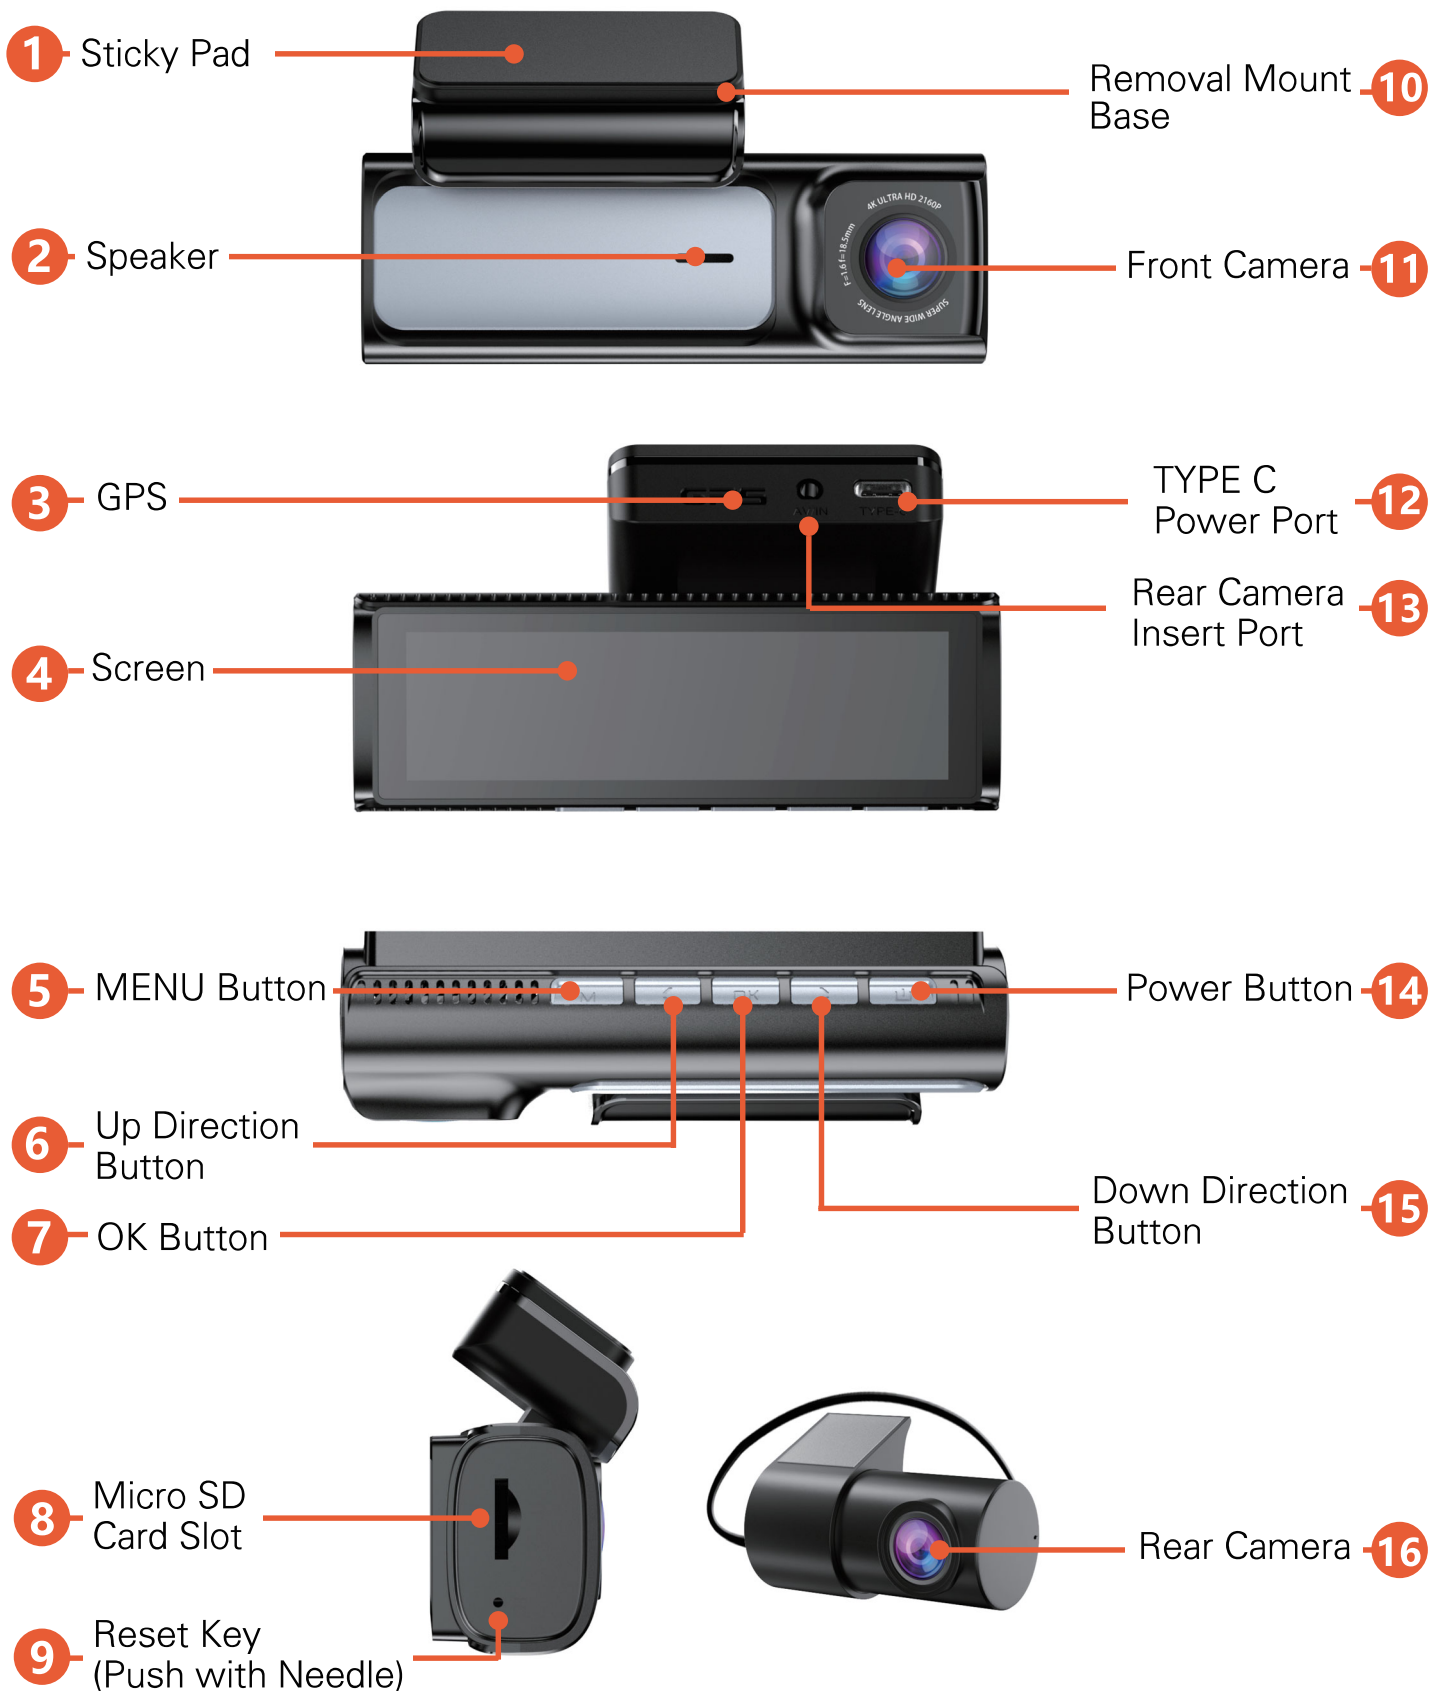

UNDERSTANDING BUTTONS


	MENU BUTTON 1 (1) Short press while recording - to lock the current video. (2) Short press while stop recording - to enter menu setting. 2 Short press while on menu setting mode - to return to the recording screen. 3 Short press while on menu setting mode/video list mode/play-back mode - to return to the previous page.
	UP DIRECTION BUTTON 1 (1) Short press while recording/stop recording - to turn on/off sound recording. (2) Long press while recording/stop recording at single front or rear preview image - to move the preview vision downward. 2 Short press while on menu setting mode - to move the selector leftward. 3 Short press while on setting mode - to move selector upward. 4 (1) Short press while on video list mode - to move selector upward. (2) Long press while on video list mode - to pop up the lock/unlock prompt. 5 Short press while on playback mode - to play the previous file.
	MENU BUTTON 1 Short press while recording/stop recording - to start/stop recording. 2 Short press while on menu setting mode/setting mode/video list mode - to enter / confirm the selection.

BUTTON FUNCTION


	3 Short press while on playback mode - to Play/Pause Current Video.
	4 Long press while the WiFi hotspot is turned off  - to turn on the WiFi hotspot signal. 
	DOWN DIRECTION KEY
	1 (1) Short press while recording/stop recording - to switch the screen display from 2 lens (front/rear) while recording. (2) Long press while recording/stop recording at single front or rear preview image - to move the preview vision upward.
	2 Short press while on menu setting mode - to move the selector rightward.
	3 Short press while on setting mode - to move selector downward.
	4 (1) Short press while on video list mode - to move selector downward. (2) Long press while on video list mode - to pop up the video delete prompt.
	5 Short press while on playback mode - to play the next file.
	POWER BUTTON
	1 (1) Short press while recording/stop recording - to turn on/off screen saver. (2) Long press while recording/stop recording - to turn on/off camera.
	2 Long press while on menu setting mode/setting mode/video list mode/playback mode - to turn on/off camera.

SCREEN OVERVIEW

MAIN SREEN OVERVIEW

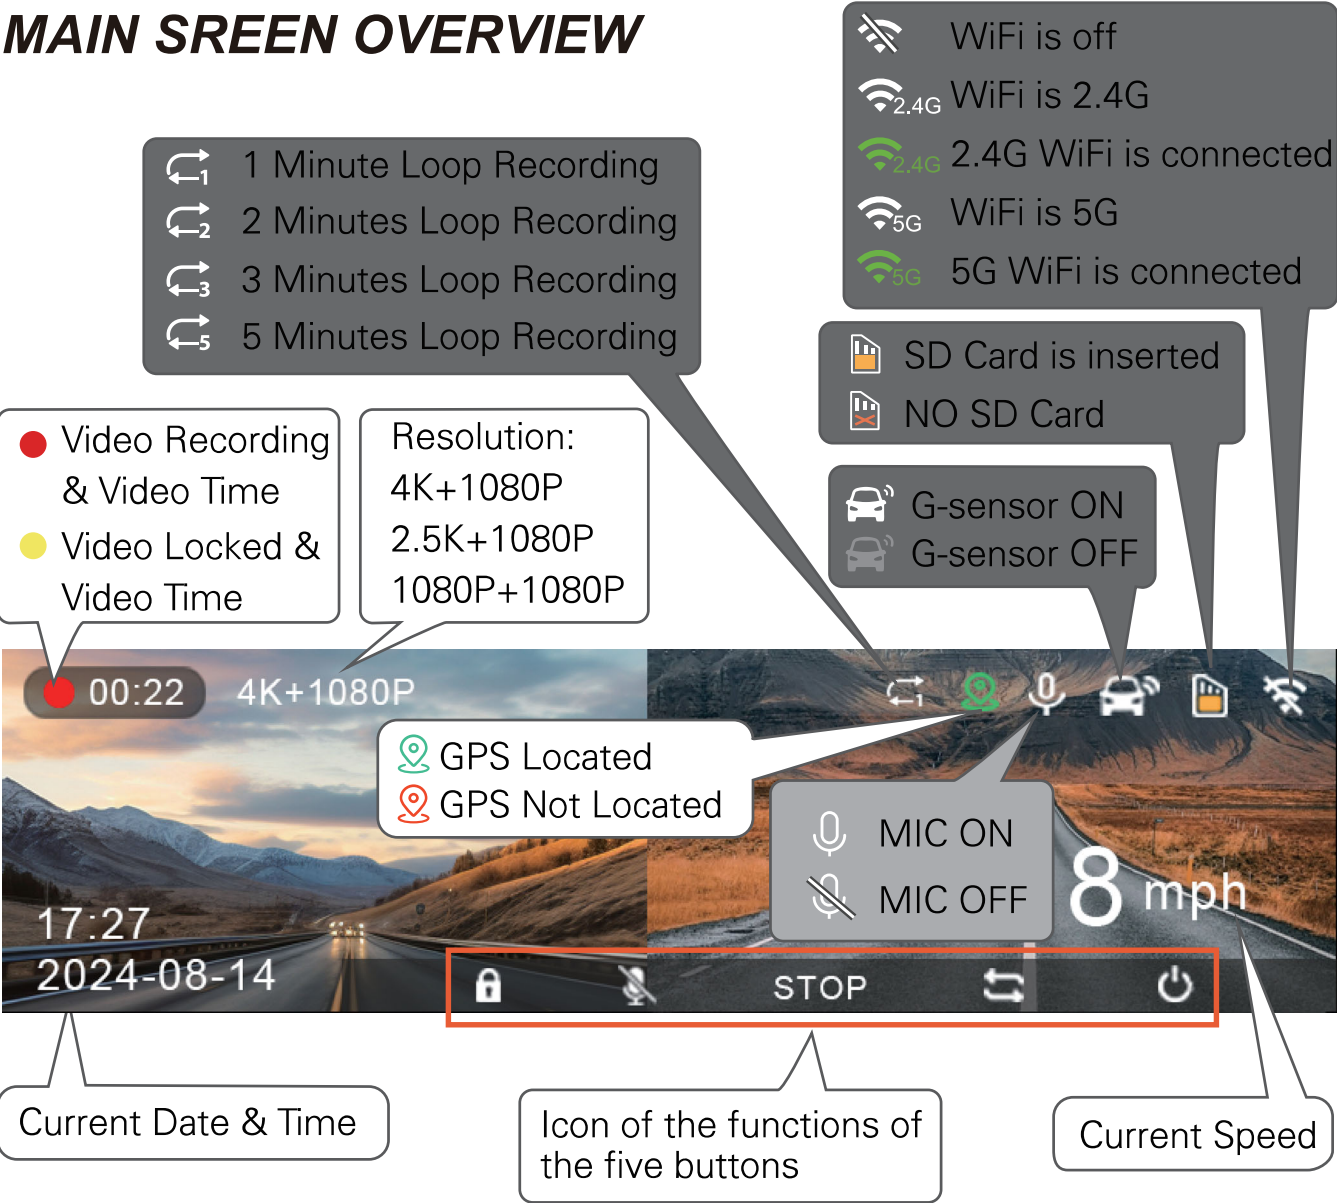

SCREEN SAVER OVERVIEW

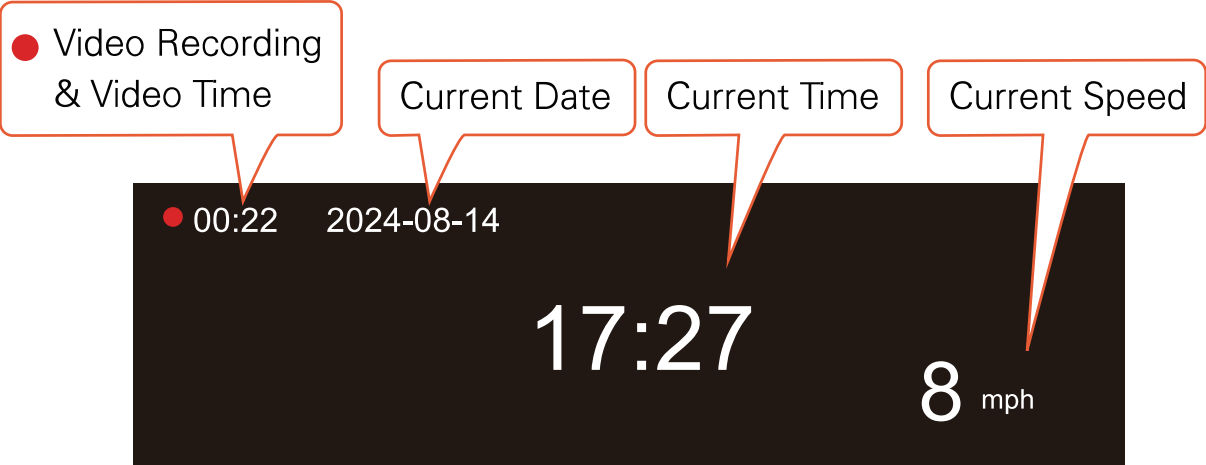

INSTALLATION - FRONT CAMERA



POWER REQUIREMENT

As this A4 dashcam is a 2-channel system with a high resolution of up to 4K 2160P, along with WiFi and GPS function, it requires a more powerful power source to drive this system(compared to a normal 5V/1A). **We strongly recommend you use the cigarette lighter power cord that comes with this package.** If your car does not have a cigarette lighter port, please **contact us** to get a TYPE C cable and insert it into a 5V/2A USB port. If you use a normal 5V/1A port to power this camera, issues may occur.

INSTALLATION




Our default settings of the A4 dashcam allow you to use the camera as soon as you get it without modifying any settings. You can also scan the code on the right to watch the installation video guidance for your A4 dashcam(will redirect to YouTube).




1 SD Card Installation / Removal

Free 64GB SD card has been pre-installed into the A4's camera SD card slot, so you can skip this step directly. If yours does not have an SD card, please **reach us** for an SD card replacement.

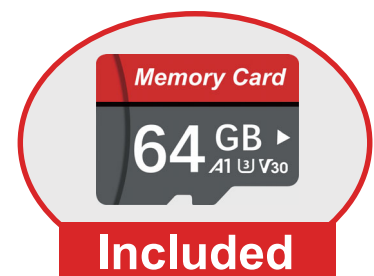

1 *Install the SD Card*

Turn off the A4 dashcam before inserting the SD card. Aligning the brand logo of the card facing towards the screen of the camera. Then push the memory card into the card slot, until a "click" sound is heard in the card slot, indicating that the memory card is inserted properly.

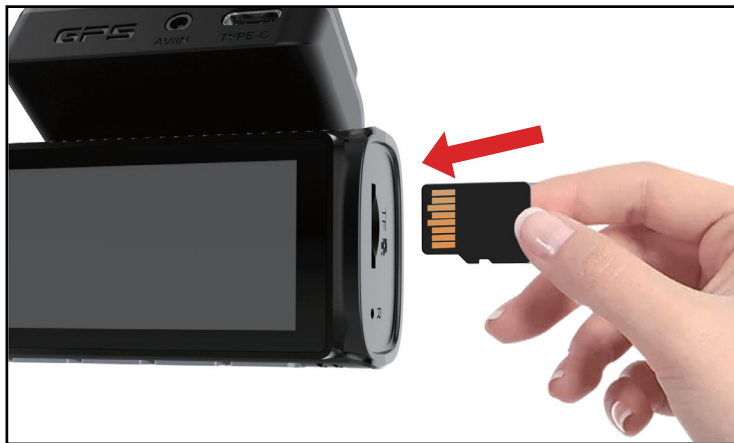

2 *Remove the SD Card*

To remove the SD card, please gently push its edge inward until it clicks first, after it pops out, please pull it out of the slot.



1. Never remove the SD card while the camera is on, the camera will shut down immediately and may cause video damage.
2. Please note that every SD card has its life span, when your A4 keeps turning on/off frequently and the videos are not saved, your SD card may reach its life span, please replace a new SD card.


MEMORY EXTENDING / FORMAT REMINDER



MEMORY EXTENDING

If you consider the provided SD card's capacity is too small, you can extend the memory with a larger one from Amazon. This A4 dashcam can support up to 256GB memory. We recommend you select a SAMSUNG brand, Class 10, U3 speed Micro SD card. We recommend you search **B09WB3D5GQ** on Amazon.

RECOMMENDED

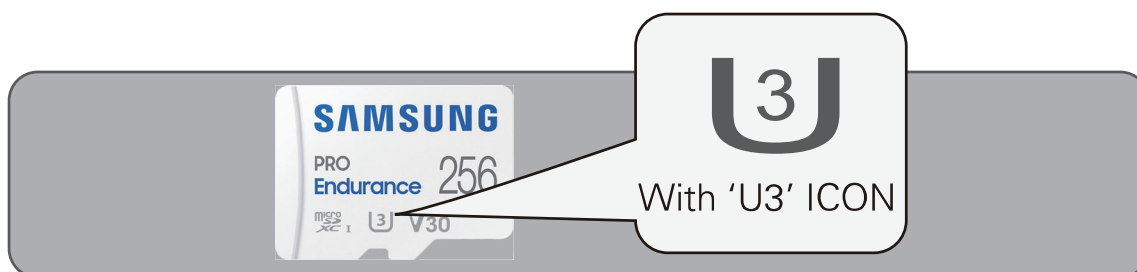

FORMAT REMINDER

For the SD card inserted into the A4 dashcam for the first time(or the first time boot up you just take it out from the package), the A4 dashcam will ask you to format the SD card, please press OK BUTTON **OK** then the A4 dashcam will process the format itself and start recording automatically.

Tip

Please format the card for the first time use.

Yes



Slow card or card error

- For most situations, the A4 dashcam will auto-start recording after it finishes the SD card format. But if you insert a low-speed card that can not reach Class 10 U3 speed, the A4 dashcam will prompt a 'Low speed card' notification. Please replace an SD card that works well and reaches Class 10, U3 speed(256GB Max) in this situation.
- If you insert a defective card, the A4 dashcam will prompt a 'Please insert an SD card' notification constantly. Please also replace a working-well SD card.
- If you have no idea how to get this error resolved, please **contact us** for ***support@affver.com***

Low speed card

3 Stick the Main Camera to the Front Windscreen

1 Installation Area

Most of our customers choose to install their A4 dashcam next to the rear view mirror and close to the passenger side. Park your car in a safe and well-lit area before you start the installation.



INSTALLATION - FRONT CAMERA


2 **Clean the Area & Stick the Electrostatic Film**

Please use wet & dry tissues to repeatedly wipe the place you choose to install the recorder in order to clean the dust particles on the windshield and the grease evaporated. Then stick the electrostatic film on the place.

3 **Connect the Power Cable**

Use the power cord to connect the TYPE C Power Port of the product to the car's cigarette lighter socket with the package to run the cable through the A-Pillar. The cigarette lighter port usually is in the glove box of your car. You can use the wiring straps to help you run your cable on the front windscreen.

Stick it on the windscreen, and fasten the wire harness underneath.

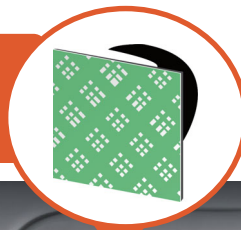

FOR YOUR SAFETY

- For the car has side curtain airbags, please run the cable along the window carefully. Please make sure your cable won't obstruct the airbags take effect.

4 Rear Camera Installation



Please note that the rear camera of this A4 dashcam is not waterproof / dustproof, so it can be only installed on the back windscreen of your car.

1

Installation Area

Please install the rear camera in the upper middle of the rear windshield in the car. This will make it easier to arrange the wiring harness and will not obstruct you from viewing the rear through the rearview mirror.



2

Clean the Area & Stick the Electrostatic Film



Please use wet & dry tissues to repeatedly wipe the place you choose to install the recorder in order to clean the dust particles on the windshield and the grease evaporated. Then stick the electrostatic film on the place.

3

Stick it in Place

Remove the film of the glue then you can stick it in the mounting area you desire. **Please keep the sticky pad upward, otherwise, the rear videos you record will be upside down.**



INSTALLATION - REAR CAMERA

4 *Connect the Rear Camera to Main Camera*

Run the rear camera cable as in the picture below, the rear camera cable will go through the C-pillar, B-pillar, and A-pillar of the car body, and finally reach the main lens. You can use the included crowbar to tuck the wire into the interior sealing strip to hide the wire. The wiring straps to help you run your cable on the rear windscreen.



i Please fully insert the rear camera socket into the 'AV' port from the main camera to ensure the videos from rear camera can be received.




i ***ABOUT ELECTROSTATIC STICKER***

(1) We design the electrostatic sticker to attach to the windshield first, then stick the bracket with 3M Adhesive on the electrostatic sticker. You can easily readjust location by sticking the 3M Adhesive on electrostatic sticker and peel it off.

(2) Re-sticking may weaken the adhesive strength of the tape and cause it to fall off. If you need more accessories, please CONTACT US.

4 Wiring Effect

Congratulations, you have now completed the wiring of the A4 dashcam. Please refer to the picture below to confirm again whether your wiring is correct.

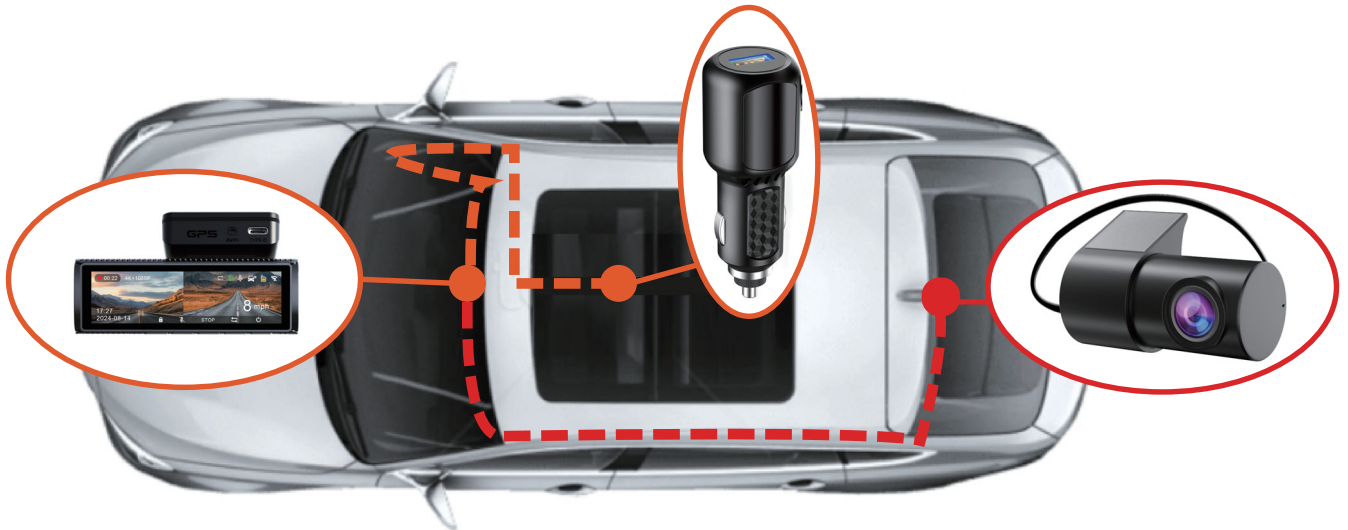

5 Final Adjustment and Test

1 Start the Ignition

Start the ignition of your car, and see if the A4 dash cam boots up normally. For the first time boot up the SD card format a reminder will prompt up, just press OK BUTTON **OK** , and this A4 dashcam will format the SD card itself and start recording. You will see the front and rear images shown on the screen simultaneously.



If your A4 dashcam can not power on normally or have 'Memory error' issue, please contact us for help:

Our email:
support@affver.com




OUR WhatsApp

FINAL ADJUSTMENT


2 Adjust the angle

Adjust the angle of the front and rear camera to make sure that the camera can capture the full image and is not obstructed by window tint or any other objects.

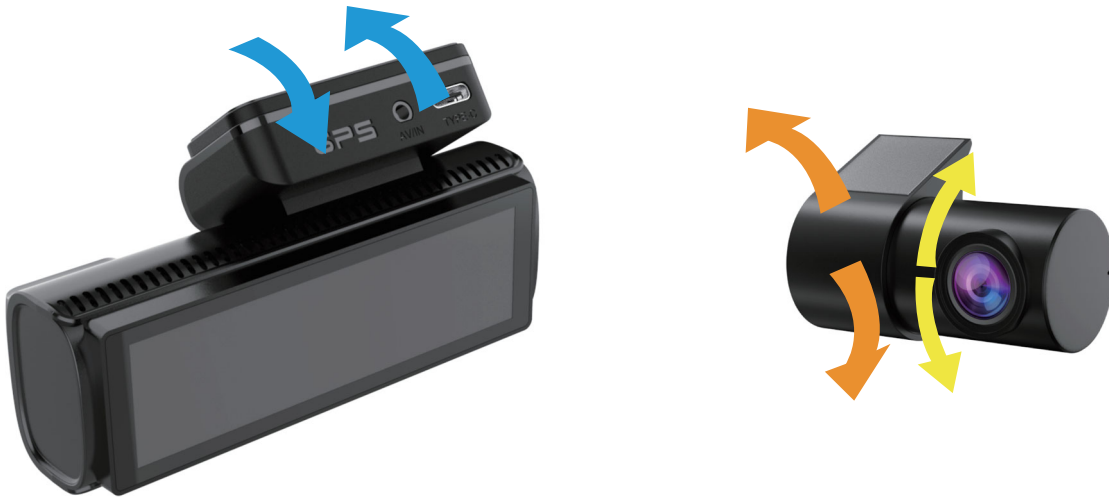

ABOUT PREVIEW IMAGE

- ▶ To achieve discreet and compact design, the A4 dash cam screen has a limited size. To see the full area being captured, please refer to the video of your cell phone or PC!
- ▶ You can long press UP/DOWN BUTTON at single front or rear preview image - to move the preview vision upward or downward. **This operation cannot be performed while on the front and back dual-screen preview screens, because it is already showing the full preview image.**

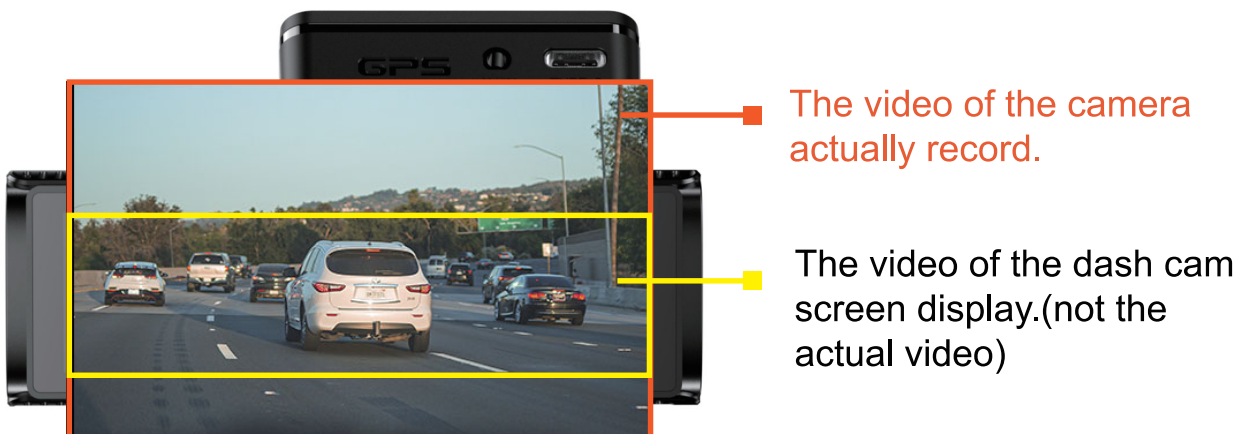

The video of the camera actually record.

The video of the dash cam screen display.(not the actual video)

3 Remove A4 from Your Car

For the situation when you want to remove the A4 dash cam from the windshield, please hold the camera and disassemble it from the mount.



4 Date & Time Settings

After you successfully connect your cellphone with the dashcam via WiFi, A4 dashcam will auto sync the time with your cellphone, and you don't need to set the time via the dash cam yourself.

5 Adjust the Screen Display Mode

A4 dashcam will show the videos from 2 channels by default, you can Single Press the DOWN DIRECTION BUTTON  to change the screen to display the front camera only and the rear camera only.

3 Check GPS Signal

After the A4 dash cam is turned on, it will automatically search for GPS signals, and the screen will display after successfully searching for signals. This signal searching time may different when your car is in different environments.



No GPS Signal



With GPS Singal





ABOUT GPS

- ▶ GPS trackers may fail to search the GPS signal when the car is driven into underground parking lots, indoors and tunnels, and dense forests, because of obstructions on the roof.
- ▶ When turning it on for the first time or for a long period of time without turning on it, it may take longer than usual for the GPS to search for a signal.
- ▶ If the interval between two starts of the A4 dash cam is short, the time for the A4 to search for a signal will be short.
- ▶ Please make sure the GPS icon on dashcam is turned to green and located successfully before you connect the dash cam to the app, otherwise your location information won't show on the app.
- ▶ In cruel weather, the GPS signal may be affected and reduced, heavy rain, snow, thunderstorm and etc.

5 *Format SD Card Regularly*

To keep the SD card clean and smooth operation, we recommend you format the SD card via the dashcam app every 2 weeks. Steps are below:

- > Power on the A4 dash cam and press OK BUTTON  to stop recording.
- > Short Press MENU BUTTON  to enter menu setting page.
- > Short Press DOWN BUTTON  to select System Settings.
- > Short Press OK BUTTON  enter System Settings.
- > Scroll downward until you find the option 'Format', press OK BUTTON  to process.