



M47 User Manual

Getting Started

Thank you for choosing M47, it will provide you a high-speed 4G and WiFi 6 experience.

Note
This guide briefly describes the appearance, using procedures and how to set the management parameters of M47.

Getting To Know Your Device

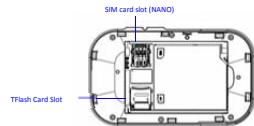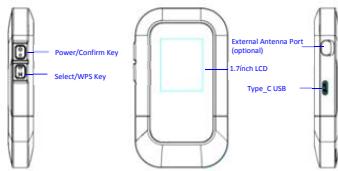

How to use

1. Insert SIM card (Nano) and turn on the device. It will connect to the network automatically.


Press Power key for 6s to turn on device, LCD will display "MiFi is starting up" when device is turning on.

2. Connect M47 via Wi-Fi or USB.

A. Wi-Fi connection:

① Select the Wi-Fi network (SSID) of this device. The default SSID is displayed on the LCD menu "SSID/Password", or you can find it on gift box and device label.

② Input the Wi-Fi password. The default password you can see from the LCD SSID/Password menu, and also printed on the gift box and device label. You can input password strings directly, or scan 2D code with your smartphone. Below 2D code is reference only, it is unavailable.

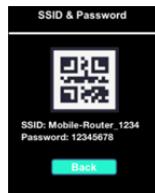

B. USB connection:

① Connect the device to a PC by USB cable.
② The PC can connect to the mobile network without having to install any drivers.

C. Connect to Wi-Fi via WPS:

If your device supports WPS(Wi-Fi Protected Setup), it can be connected to M47 without having to use the password.
Press the WPS button on this device to activate the WPS function for 2 minutes.

3. To use the storage function, please insert MicroSD card into

the slot.
Note: Supports MicroSD Cards up to 32GB.

Device management

This device can be managed with signing in the WebUI(192.168.8.1),
where settings can be configured to your preference.

The default password is "admin" that are printed on the device's label.

How to Charge

1. Charge by power adapter.
2. Charge by PC's USB port or by power bank.


Note:

- ①There is no power adapter included with M47 default packaging, please purchase one separately.
- ②Please use a suitable power adapter(5V/1A) to charge M47.
- ③Please ensure that M47 is charged in an environment within the temperature range of 0 to 40°C.

Restore Factory Setting

If you forgot your sign-in or need to reconfigure the Wi-Fi settings of the device, there are 2 ways you can restore its factory settings.

1. Turn on M47, open rear cover and press the Reset button once, to restore factory settings.

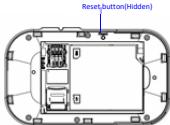

2. Turn on M47 and connect to it, then sign into the WebUI(192.168.8.1), and go to Admin Settings > Factory Default Settings.

FAQ

1. What should I do if M47 doesn't turn on?

Please ensure battery is not exhausted, charge M47 and try again.
Please make sure to charge M47 at 0°C~40°C.

2. What should I do if the Internet cannot be accessed?

① Check whether SIM card is installed correctly, and check whether there's a signal in the area M47 is being used in.(Please refer to network status).
② Ensure that the mobile data balance of the SIM card is sufficient.
③ If the issue persists, please contact after sales.

3. What should I do if I cannot connect M47 via Wi-Fi?

① Ensure that the SSID and password are correct (case sensitive).
② Ensure that MAC address filtering is disabled.
③ If the issue persists, please press the reset button to restore the factory settings.

4. What should I do if I forgot the Wi-Fi's SSID or password?

Press the Reset button to restore the device's factory settings. The default SSID and password are printed on the device's label.

5. What should I do if M47 doesn't charge?

Check whether the power adapter and USB cable function properly. It is recommended to use a power adapter with an output of 5V/1A in combination with the original USB cable.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The SAR limit of USA(FCC) is 1.6 W/kg averaged over one gram of tissue. Device types LTE MiFi Router with M47 (FCC ID: 2BEPN-M47) has also been tested against this SAR limit. The highest reported SAR values for body - worn is 0.600W/kg. The Max simultaneous SAR is 0.712W/kg. This device was tested for typical body - worn operations with the back of the handset kept 10mm from the body. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.