 


◆ Panel switch

Click the status bar downward with two fingers to open the Panel switch. Tap the panel switch to switch ON/OFF of the function or setting.

1 Flick the status bar down with two fingers

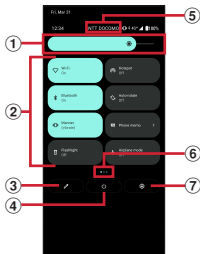

① Screen brightness level

Slide the slider to adjust the brightness.

② Panel switches

Tap each panel switch to ON/OFF of the function or setting. Touch and hold the panel switch to open the corresponding setting menu.

- Wi-Fi : →P133
- Hotspot : →P139
- Bluetooth : →P179
- Auto-rotate : →P147
- Manner : Set/cancel Manner mode.
- Phone memo : →P87
- Flashlight : Turn on/off the light.
- Airplane mode : →P138

- FAST App Drive : →P160
 - FAST FingerLauncher : →P156
 - Dolby Atmos : Turn on/off Dolby Atmos.
 - Clear Font : →P160
 - Loupe : Activate Loupe (Out-camera) so that you can magnify text, etc. by holding over. Pinch-in or out the screen to change the magnification, or set on/off of the light.
 - Blue Light cut mode : Set whether to cut down blue light emitted from the screen.
 - Extra dim : →P150
 - Nearby Share*1 : Share files with devices near this terminal.
 - Location data : →P124
 - Screen Cast : Show videos and images by connecting the terminal to a Wi-Fi Miracast device.
 - Battery Saver : →P145
 - Dark theme : →P146
 - Glove touch : →P151
 - Device control : Control a smart home device (commercially available), etc. connected to the terminal.
 - Internet*2 : Display the setting screen for internet connection.
 - Do Not Disturb*2 : →P149
 - Alarm*2 : →P126
 - Screen Record*1*2 : Record the screen of the terminal.
 - Invert colors*2 : →Turn on/off color inversion.
 - Data Saver*2 : Restrict background data communication by applications.
 - NFC/Osaifu-Keitai*2 : →P181
- You cannot switch ON/OFF of this function in Europe and north America while charging the terminal in these areas, as this function is not available.

- Mic access : →P159
- Camera access : →P159
- Storage*2 : →P177
- Focus mode*2 : Pause distracting apps.
- Bedtime mode*2 : Pause distracting notifications during bedtime or make the screen monochrome.
- TV Remote*2*3 : You can use the terminal as a remote controller when watching Google TV.
- group messages*2 : Switch ON/OFF of group notification setting in +Message.

*1 This displayed item may be different depending on your usage condition.

*2 To use, add it to the Panel switch. →P65

*3 Appears when starting Google TV.

③ Edit

Touch and hold the panel switch and then drag it to delete or add. To reset the edited content,  in the edit screen→ [Reset].

④ Power menu

Display operation menus such as turning power off, restarting the terminal, making an emergency call, etc.→ P37

⑤ Network operator

⑥ Indicator

Indicates the number of Panel switch pages and the which page you are in.

⑦ Settings

Display the settings menu.→P132

✓INFORMATION

- To close the Panel switch, flick the Panel switch upward or tap  (Back).

◆ Using Slide-in function

You can call out Slide-in launcher by sliding your finger from the slide spot (start point for sliding) at the corner of the screen.

- For setting of the Slide-in function, refer to "Slide-in function".→P161

❖ Slide-in launcher

Activate an application from a shortcut saved in Slide-in launcher.

1 Slide your finger from the slide spot to the center of the screen, then release the finger at a shortcut in Slide-in launcher

- When Slide-in function is set to ON, Slide-in launcher is set in the slide spot at the upper right of the screen.
- You can set the Slide-in function by releasing your finger at the position of , which is called up at the same time as the Slide-in launcher.

2 Perform an operation

✓INFORMATION

- Touch and hold the slide spot and slide it up/down along the right end of the screen (left end when the slide spot is at the left side) to move the slide spot position.

❖ Capture & Draw

Capture displayed screen to edit as an image or share with other application.

- Some screens may not be captured.

1 Slide your finger from the slide spot to the center of the screen, then release the finger at  in Slide-in launcher

2 Select a target operation

Editing image : Tap tools and edit→[Save]

- You can check the image in Photos (→P113), etc.
- With drawing tools, you can write texts or draw pictures on an image by handwriting, crop or zoom in/out.

Sharing with another application : [Share]→Select an application→Follow the on-screen instructions

- You can also activate an application by tapping an app icon displayed next to [Share].

❖ Highlight & Copy

Text strings selected by tracing on the screen with your finger can be copied or shared with another application.

1 Slide your finger from the slide spot to the center of the screen, then release the finger at  in Slide-in launcher

2 Trace text strings you want to copy with your finger

Recognized texts are marked and displayed in preview.

- Tap the preview to display the keyboard to edit the texts.
- Selected texts may not be recognized properly depending on the text strings or due to background images.

3 Perform an operation

Copying texts : [COPY]

- Tap  /  to display/hide preview. Tap [CLEAR] to cancel selecting texts.

Sharing with another application : Select an application to paste

- Displayed applications differ depending on the selected texts.

Task manager

If you stop operating application by tapping  (Home), etc., the application may remain active in the background. Also, 2 or more applications may be running depending on the operations. This function allows you to check running applications, switch the display, or exit applications.

(History)

The recently used applications appear.

- Flick the screen left or right and tap a thumbnail to display application, or flick down to switch applications.
- Flick a thumbnail up to exit the application. To exit all applications, flick the screen right and then tap [CLEAR ALL].
- You can also save a screenshot of recent apps displayed by thumbnails by tapping [Screenshot]→P53
- Tap [Application pinning] to display the setting screen for pinning the app displayed as a thumbnail, and tap [Use] to pin the app. Press Power key to cancel application pinning.

✓INFORMATION

- When [Application pinning] (→P158) is set to ON, you can pin an application so that other applications cannot be used by tapping the application icon on the thumbnail→[Pin]→[GOT IT].

Magnifying the screen display

The terminal has magnification features so that the screen display can be easily viewed. Use according to your purpose.

■ Clear Font

Adjust the size of character or icon automatically so that they are always seen clearly.

Timing of magnifying : When the setting is enabled

Setting steps→P160

Split screen

Split the screen in two and operate two different applications at the same time in each screen.

- Activate an application to display beforehand.
- If the application does not support the split screen, it cannot be displayed with this function.

1 (History)

The recently used applications appear.

2 Tap the icon to display the application → [Split screen]

3 In the lower screen, tap a thumbnail of application

- If the application thumbnail is not displayed, tap  (Home) to activate the application to display.

✓INFORMATION

- The split screens can be displayed upper and lower in the vertical screen and left and right in the horizontal screen.
- The application displayed in the lower screen (right in the horizontal screen) can be switched.
To switch applications, tap  and select the thumbnail in the recently-used applications, or tap  (Home) to activate the application to be displayed.
- To end the split screen, drag  in the center of the screen to the upper part or lower part of the screen (left end or right end in landscape view).

SuguApp

Perform settings for "SuguApp", which enables you to start the application quickly by shaking the smartphone.

1 From the Home screen, → [Settings] → [XXXXX service/cloud]

2 [SuguApp]

3 Set each item

SuguApp : Specify the application to start them by shaking the terminal.

Also, you can set to display other application icons on the screen of an application started by shaking the terminal.

- Shake 1-time : Specify the application to start by shaking the terminal once.
- Simultaneous display of icons (Shake 1-time): Specify the application to display on the screen simultaneously when using the Shake 1-time function.
- Shake 2-times : Specify the application to start by shaking the terminal twice.
- Simultaneous display of icons (Shake 2-times): Specify the application to display on the screen simultaneously when using the Shake 2-times function.
- SuguApp Operation Deterrence : Specify the application to avoid starting by SuguApp.

✓INFORMATION

- In the following cases, SuguApp does not work correctly.
 - When you are lying
 - While running or going up and down stairs

- By default, "d払い (d payment)" is set for Shake 1-time.
- You cannot use SuguApp while the screen is OFF or locked.
- If you place the terminal in a bag or pocket with the screen ON, in rare cases, SuguApp may recognize the action as a motion and the application may start.
- When SuguApp is available, the notification icon appears. You can check detailed information about notifications from the status panel.
- For details of SuguApp, refer to XXXXX website.
- Depending on the application you assigned as Shake 1-time or Shake 2-times, icons may not appear simultaneously.

Emergency buzzer

You can sound a buzzer at a loud volume in case of emergency. When you sound the buzzer, you can make a call automatically or notify where you are by the GPS function.

- Make settings for the emergency buzzer beforehand. → P164

1 Power key (1 sec. or more)

2 [Security tools] → [Emergency buzzer]

The buzzer sounds at a loud volume.

Turning off the buzzer : Tap [STOP BUZZER SOUNDING]

- You can also turn off the buzzer by Power key (1 sec. or more) → [Security tools].

■ If automatic phone call is set

When the buzzer sounds, the terminal makes a phone call to the specified contact automatically (→ P164). When the other party answers the call, the buzzer turns off and the voice guidance saying "緊急通話です (This is an emergency call)" is heard three times. When the voice guidance finishes, the buzzer sounds again. Note that the other party's voice cannot be heard.

- The terminal repeats phone calls in order until one of the registered contacts answers the call.
- Your phone number is notified to the other party regardless of the setting of caller ID notification.
- Tap  to cancel making a call or to finish the voice guidance or call.

■ If automatic SMS transmission is set

When the buzzer sounds, an SMS is sent to the specified contact automatically. (→ P164)

■ If location providing is activated

You can make a setting to send the location providing request when the buzzer sounds (→ P164). When the terminal receives the request, location information is measured and the measurement result will be sent.

✓ INFORMATION

- During international roaming, the GPS function of the emergency buzzer is not available.
- When the PIN code is locked, the buzzer sounds, but the terminal does not make a call or provide location information.
- When the security lock is set and if the terminal has not been unlocked since it started, the buzzer sounds, but the terminal does not make a call or provide location information.

- If the nano SIM card is not installed, the terminal does not make a call or provide location information.
- You cannot adjust the volume of the emergency buzzer. The buzzer sounds at a loud volume, so please be careful.
- The emergency buzzer sounds even in Manner mode.
- When the silent mode is set, the mode is deactivated temporarily while the buzzer is sounding.
- If automatic phone call is performed, you cannot mute/hold on the call or cannot perform additional operations.
- When a phone call arrives while the emergency buzzer is sounding;
 - If automatic phone call is set, you can receive a call from the registered contacts only. (The terminal answers to it automatically.) Calls from other than those will be rejected and it will be recorded as a missed call.
 - If automatic phone call is not set, you can receive a call from anyone. (The terminal does not answer to it automatically.)
- If the other party does not answer after about 30 seconds, the call will be suspended. If multiple contacts are registered, the terminal continues to make a call to them according to the order of registered numbers.
- The emergency buzzer is intended to draw attention of surrounding persons, not to prevent crime or guarantee your safety. XXXXX assumes no responsibility for any loss due to using this function.

Imitation call

Imitation call is a function which allows you to pretend that you are receiving or making a call.

- As no communication is done by imitation call, you can use it regardless of the radio wave condition and no call fee is charged.

1 Power key (1 sec. or more)

2 [Security tools]→[Imitation call]

The ringtone sounds and the display like an incoming screen appears.



The ringtone stops, the display like a voice call screen appears, and then you hear the guidance of imitation call from the earpiece.



Imitation call ends.

✓INFORMATION

- When you use imitation call, the ringtone sounds even though the earphone is inserted into the terminal.
- The ringtone sounds even in Manner mode.
- The ringtone to sound is fixed as the default ringtone.
- No buttons other than the button to end imitation call can be operated, as they are dummies.
- The following operations ends imitation call.
 - When you receive or make an actual call
 - When the emergency buzzer sounds

Home screen

Switching the home applications

Change the screen (Home screen) displayed by tapping  (Home). "XXXXX LIVE UX", "arrows Home" and "Simple Home" home apps are available in the terminal.

1 From the Home screen,  → [Settings] → [Homescreen selector]

 
2 Select a home application to switch to
✓INFORMATION -----

- The wallpaper for the lock screen may be changed by switching the home application depending on the home application.

Home screen

In the Home screen, you can activate applications or use widgets. All applications are stored in the application list. Application icon shortcuts are placed on the Home screen.

- Flick left or right to switch pages on the Home screen.
- A dot or number may appear on the upper right of the icon or folder when you have a notification from the application.

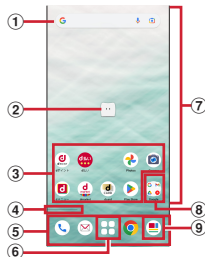

① Widget

- Activate widget (Google Search).
- Depending on a widget, touch and hold to display the shortcut menu where you can perform specified operations.

② Machi-Chara

- Tap to ask something you want to know through dialog.



- ③ **Application icon shortcut**
 - Tap to activate the application.
 - Touch and hold to display the shortcut menu where you can perform specified operations or check the application information. When  is displayed, touch and hold and then drag it to any location to add a shortcut of specified operation to the Home screen.
- ④ **Indicator**
 - Indicates the number of pages of the Home screen and which screen you are in.

* Appears only when flicking the screen.
- ⑤ **Dock**
 - Displayed even if the home screen page is changed.
- ⑥ **Application list button**
 - Displays all applications. Search applications and use "Osusume Apps" (recommended applications) (→P78).
- ⑦ **Customize area**
 - You can locate applications, widgets, and folders.
- ⑧ **Folder**
 - Stores multiple application icons etc.
- ⑨ **My Magazine button**
 - Display My Magazine. →P79

Managing the Home screen

◆ Moving application icon etc.

- 1 In the Home screen, touch and hold the icon or widget to move
- 2 Drag it to a position you want to locate
 - Drag to the edge of the home screen to go to the next page.

◆ Adding application icon

- 1 In the Home screen,  Touch and hold the icon to add on the Home screen
- 2 [Add to Home screen]
 - Drag to the edge of the home screen to go to the next page.
 - Multiple same icons can be pasted.

◆ Deleting application icon from the Home screen

- 1 In the Home screen, touch and hold the application icon to delete
- 2 Drag to [Remove] on the top of the screen
 - Icon is deleted from the Home screen, but the application is not uninstalled.

◆ Removing widget etc.

- 1 In the Home screen, touch and hold the widget etc. to remove
- 2 Drag to [Remove] or [x] on the top of the screen

◆ Uninstalling application

- 1 In the Home screen, touch and hold the application icon to uninstall
 - To uninstall the application in a folder, tap a folder and then touch and hold the application to uninstall.
- 2 Drag to  on the top of the screen→[OK]
 - For applications that cannot be uninstalled,  does not appear.
 - If you uninstall the application, it is also deleted from the application list.

◆ Renaming folder

- 1 In the Home screen, select the folder
- 2 Tap the folder name
- 3 Enter a folder name
 - Tap  displayed in the keyboard.

◆ Setting the Home screen

- 1 Touch and hold an area of the Home screen where no icons, etc.→[Home settings]
- 2 Select an item

Notification dots : Set ON/OFF of a dot to indicate the app notification.

Add icons to home screen : Select whether to automatically paste the icon of newly installed application on the Home screen, or to display the icon on the application list only.

* By default, installed apps are displayed on the last row of the application list.

Add home settings icon : Set ON/OFF of  on the Home screen.

Wallpapers : Change the wallpaper of the Home screen and lock screen.

Machi-Chara : Set ON/OFF of Machi-Chara, or set the Machi-Chara settings such as changing the character.

Osusume Apps settings : Set the display setting of "Recommendations" that appears on the application list screen.

Display my daiz NOW : Perform display setting for my daiz NOW on the left end of the Home screen.

My Magazine : Set ON/OFF of My Magazine activation by flicking up.

Get started : Check the tutorial on the Home screen.

Help : Check the details about how to use the Home screen.

Application list screen

Displayed by tapping  on the Home screen. On the application list screen, you can sort applications, create folders, or search an application by an application name. You can also pick out the applications recommended for you right now.



- ① **Search apps bar**
Tap to search applications by text entry.
- ② **Osusume Apps**
Display up to four recommended applications.
- ③ **See more**
Move to Osusume Apps (→P78).
- ④ **All apps**
Display all the applications installed in the terminal. Tap to activate the application.

◆ Application list

- For some applications, you can check the functions, operations etc. from the Help.
- Use of some applications may require separate subscriptions (charged).

Preinstalled applications are as follows.

 **+Message** : A messaging application which allows you to send and receive text messages to/from a mobile phone number. You can send images, videos, stamps, etc. other than text. →P93

 **Adobe Acrobat** : Use Adobe Acrobat.

 **Adobe Express** : Use Adobe Express.

 **Adobe Scan** : Use Adobe Scan.

 **Amazon Shopping** : An official application of Amazon which allows you to conveniently shop with good prices in Amazon online.

 **arrows passport** : Register and manage authentication information such as your ID (account) or password. →P157

 **arrowsポータル (arrows portal)** : Obtain tips information to use the terminal better or use services to support your ethical activity. If you register to the La Member's member service and log in to the service, you can enjoy more services such as using La Point.

 **Chrome** : Browse web pages in the same way as PCs. →P100

 **Disney DX** : Disney DX is an app which offers exclusive benefits and lots of contents to make Disney Plus more enjoyable.

You can use all functions by joining Disney Plus from XXXXX.

 **Duo** : Make video calls. Starting this app adds Meet.

 **dcard** : An application for checking usage details of d card, saved d points, entries of good value information easily. Also, you can set up "iD" offered by XXXXX.

 **d払い (d payment)** : An application to use "d払い (d payment)", the payment service provided by XXXXX. You can do your shopping simply, convenient and with good bargain just by showing a bar code displayed on the application in the target stores.

 **dphoto** : A service for backing up photos or videos on your smartphone or PC to cloud "up to 5GB for free". To use "Print service function", by which you can create photo books using photos you have taken, separate subscription and installing the dphoto printing app are required.

 **dポイント (d POINT)** : An application for confirming, collecting or using d points.

 **dmarket** : Various services including selling digital contents such as music, videos, books, and shopping sites are provided. →P114

 **dメニュー (dmenu)** : An application shortcut for "dmenu". With dmenu, you can easily access the websites recommended by XXXXX or convenient applications. →P114

 **Facebook** : Facebook allows you to strengthen relationship with friends, family, colleagues and classmates, and know what is happening in the world today.

 **FAST AR Size Checker** : This is an app which enables you to experience the feeling of sizes of various objects using the camera. →P121

 **FAST Wallet** : An application which allows you to make payments at a shop or to use an application smoothly.

 **FAST Share** : Still images/videos you shot can be shared easily and quickly without installing a specific application. →P122

 **FAST Memo** : This is an app which enables you to take memos (text or voice) or pictures quickly. →P121

 **Files** : This is an app for managing data in the terminal, microSD card, etc. →P177

 **Gmail** : You can use email provided by Google or other general providers. →P99

 **Google** : Search for the terminal or web pages. →P129

 **Google TV** : Purchase or rent movies, etc. to watch. You can download movies to watch anytime you want.

 **iDアプリ (iD application)** : An application for using electronic money "iD" provided by XXXXX. You can enjoy shopping just by holding Osaifu-Keitai with "iD" set over an IC card reader in stores. →P118

 **Kindle** : An e-books reader application for reading e-books purchased in Amazon.

 **Lightroom** : Use Lightroom.

 **Meet** : Make video calls.

 **my daiz** : It is a service with which you can search information such as weather forecast or train delay according to your time to leave just by speak to the terminal. Deliver preferred information at optimum timing.

 **Photoshop Express** : Use Photoshop Express.

 **Play Store** : Use Google Play. →P114

 **radiko+FM** : A radio broadcasting service that broadcasts terrestrial radio sound in real time to the corresponding service areas of the radio stations. FM radio is also supported. →P118

 **ULTIAS Feature select** : Set Keyboard selection, Smartphone input (flick) learning mode, ATOK Keyword Express (Enable, Select genres, Notify updates, Receive right away, Auto receive, Interval, Auto receive on Wi-Fi only), and OTHER ULTIAS SETTINGS. →P58

 **YouTube** : You can play YouTube™ video.

-  **YT Music** : You can play music of YouTube Music.
-  **How to wash** : An application for checking how to wash the terminal.
-  **Anshin Security** : An application for security measurement against dangerous websites, dangerous Wi-Fi, nuisance calls, etc. or for dark web monitoring, as well as the free antivirus function.
-  **Osaifu-Keitai** : An application that allows you to display multiple registered Osaifu-Keitai services in the list. This application also allows you to sign up for recommended services, check the balance and points on the registered services. →P116
-  **Osusume Apps** : Make settings for Osusume Apps. →P78
-  **Feature select** : Make settings for Simple mode, Diagnostic support, FAST Wallet, Online communication manager, Nuisance call countermeasure function, etc.
-  **カボニューレコード (Caboneu Record)** : An application to use "Caboneu Record" offered by XXXXX. By using your d ACCOUNT, this application visualizes how much CO2 you have reduced or your contribution for environment from your daily activity data.
-  **Camera** : Shoot still images or videos. →P104
-  **Calendar** : View calendar and register schedule.
-  **Easy data transfer support** : You can transfer various data such as phonebook, schedule, photos, and videos to the terminal by using a microSD card. →P131
-  **かんたん電話 (Easy phone)** : An application for using phone or making phone settings. →P81
-  **かんたん電話帳 (Easy phonebook)** : An application for using the phonebook. →P89
-  **Game Zone** : Perform settings for playing games comfortably and use the launcher/gallery function. →P166

-  **Disaster kit** : An application for using "Disaster Message Board", Early Warning "Area Mail", "Disaster and evacuation information anywhere", and "Recovery Area Map". →P99
-  **Schedule** : An application for creating/managing schedules whose data is shared with Memo application. →P125
-  **Sheets** : Create, edit, and share spreadsheets.
-  **スマホ診断 online (Online diagnosis for smartphone)** : If you notice anything wrong with your smartphone or tablet such as "Battery runs out faster", you can check easily if your smartphone or tablet has any problems anytime, anywhere. Based on the diagnosis result, this app offers you suggestions for better usage, as well as the procedure for your needs.
-  **Slides** : Create, edit, and share slides.
-  **Settings** : Make settings for the terminal. →P132
-  **Call Settings** : Set for calling. →P88
-  **Data Copy** : An application that allows you to transfer data when changing the model, or back up to/restore from a microSD card. →P129
-  **データ保管BOX (Data Storage BOX)** : An application for using data saving box. Data Storage BOX is a service which allows you to upload files to easily manage them in the cloud.
-  **Calculator** : Perform calculations such as addition, subtraction, multiplication and division. →P128
-  **Phone** : An application for using phone or making phone settings.
-  **Docs** : Create, edit, and share documents.
-  **Clock** : You can use the alarm, clock (world clock), timer, stopwatch, and bedtime. →P126
-  **XXXXX phonebook** : A phonebook application supplied by XXXXX. The phonebook data of XXXXX account can be managed in the cloud.

 **XXXXX mail** : An application for using XXXXX mail address (@XXXXX.ne.jp) to send/receive mails. Additionally, with d ACCOUNT, you can send, receive and read mail on multiple devices such as a tablet and PC browser using the same mail address.→P3

 **Drive** : Upload photos or videos saved in the terminal to the Google Drive so that they can be accessed from two or more devices. Documents can be created to share or to edit.

 **Instruction Manual** : Instruction Manual for the terminal (in Japanese only). You can start function directly from the description.

 **News** : A popular news application. You can read newspapers, magazines, and entertainment news free of charge and get various coupons.

 **JSpeak** : An application that translates the speaker's language into the partner's language. You can enjoy communication with people in different languages by using Face-to-face translation, Phone translation, Image translation, and Common phrase.

 **Photos** : View or edit photos. Photos can also be saved to Google cloud.

 **マイマガジン (My Magazine)** : My Magazine is a safe and secure news app for free which allows you to access the latest information and surprise daily.→P79

 **Maps** : View your current location, find other locations and calculate routes.→P125

 **Memo** : An application for creating/managing memos whose data is shared with Memo application.

 **Lalasia Connect** : You can manage your mental and body health with this application based on your data such as steps/speed of walking, heart rate, hours of sleep, and blood pressure.→P119

❖INFORMATION

- The pre-installed applications are displayed in the Home screen or the application list by default.
- For some pre-installed applications, uninstallation may be possible. Some uninstalled applications may be downloaded again on Play Store.→P14
- For some pre-installed applications, installation may be required by accessing Play Store or XXXXX's site for the first activation.

❖ Application list screen

❖Moving application icon etc.

1 In the application list screen, touch and hold the application icon to move

2 Drag it to a position you want to locate

❖Renaming folder

1 In the application list screen, select the folder

2 Tap the folder name

3 Enter a folder name

- Tap  displayed in the keyboard.

Using Osusume Apps

Recommend applications or services according to your usage condition.

1 From the Home screen, 

2 [Tools]→[Osusume Apps]

- When using for the first time, the use confirmation screen appears. Tap [ENABLE] to the explanation screen appears. In the explanation screen, tap [おすすめアプリ一覧へ (To Osusume apps list)] to display the list of Osusume apps with the notification turned on.

3 Select the application or service

- An introduction screen for the application or a service page appears.

✓INFORMATION

- In the Osusume App list, tap  →  /  of each setting to switch ON/OFF of the setting.
- When you have agreed the terms of use of Osusume Apps, tap  in the Home screen to display the extract version of Osusume Apps. To see more recommended applications, tap [See more].

Searching applications

It is a function which allows you to search an application in a list by an application name.

1 From the Home screen, 

2 Enter an application name in the application search bar

3 Select the application

The application activates.

My Magazine

My Magazine is a safe, secure news application to view contents such as news or articles concerned, articles reflected with your own hobbies and tastes, valuable coupons, or cartoons suitable for killing time. It helps to set search words based on your tendency of articles to read or profile information to bring them closer to your preference. You can also customize application settings such as genres or notifications to show, your star sign, or region to show the weather.

◆ Viewing articles

1 From the Home screen,

- When the initial screen appears, tap [規約に同意してはじめる (Agree to terms and start)].
- The list screen divided by genres appears.
- Flick left or right to switch genres.

2 Tap the article you want to read

- Tap the article on the article list to read its details.

◆ Adding display category

1 From the Home screen,

The list screen divided by genres appears.

2 ≡→[ジャンル追加 (Adding display category)]

- Tap a genre to add from the genre list to add them to the article list.

◆ Deleting/sorting display category

1 From the Home screen,

2 ≡→[ジャンル削除・並べ替え (Deleting/sorting display category)]

- You can delete or sort genres from the genre list.

my daiz NOW

my daiz NOW is a service which delivers convenient information according to your preference or behavior. You can readily check information which is convenient for daily life such as weather, traffic, or gourmet. (In Japanese only)

◆ Screen layout



◆ Display setting

- 1 Touch and hold an area of the Home screen where no icons, etc. → [Home settings]
- 2 Set ON/OFF of [Display my daiz NOW]

1 In the Home screen, flick right

- To switch cards, swipe up or down.
- Flick left to go back the Home screen.

2 Tap the card you want to read

- Tap the card to view more detailed information.
- Tap my daiz (character) appeared at the upper left of the screen to ask something you want to know through dialog.

Phone/Phonebook

Making a call

1 From the Home screen, → [arrows] → [かんたん電話 (Easy phone)]

The dial input screen is displayed.

- When the call history appears, tap [ダイヤル (Dial)].
- When you activate Easy phone for the first time, the screen to set Easy phone as a default phone app appears. You can use Easy phone by tapping [設定する (Set)] → Select [かんたん電話 (Easy phone)] → [SET AS DEFAULT].

2 Enter a phone number

- To correct phone number, tap [削除 (Delete)].
- Tap [電話帳を開く (Open phonebook)] without entering a phone number to display the contact list of かんたん電話帳 (Easy phonebook).
- Tap [メニュー (Menu)] with a phone number entered to perform the operations of [電話帳に登録 (Registering in the phonebook)], [通知で電話する (Calling with caller ID)], [非通知で電話する (Calling without caller ID)], [国際電話をかける (Making an international call)], and [通話アカウント (Calling accounts)].

3 [電話をかける (Make a call)]

4 When a call is ended,

✓INFORMATION

- With VoLTE, you can make high-quality voice calls. To use VoLTE, both parties must meet the following requirements.
 - Both terminals support VoLTE
 - Both parties are in a VoLTE service area
 - "Preferred network type" in "Mobile network" is set to "5G/4G/3G/GSM" or "4G/3G/GSM".
- * To set, operate from the Home screen,  → [Settings] → [Network & internet] → [Mobile network] → [Preferred network type].
- With VoLTE (HD+), you can use voice call in higher sound quality than VoLTE. To use VoLTE (HD+), it requires that both your terminal and the other party's terminal support VoLTE (HD+) in addition to the conditions for use of VoLTE.
- If your face etc. comes close to the proximity sensor during a call, the display goes out. It is redisplayed by moving away from the sensor.
- When the earphone is inserted into the terminal or while calling with the speakerphone, the proximity sensor stops. Because of this, the display remains on even when the face etc. comes close to the sensor.
- If you put the ear to the earpiece over the hair, etc. the proximity sensor does not work normally and the call may be interrupted.
- You can set to show/hide caller ID all at once in [Caller ID notification] (→P86).
- For details on sending touch-tone signals during a call, see "Operation during a call". →P86

◆ Emergency call

Emergency call	Phone number
Police call	110
Fire and emergency rescue	119
Coast guard	118

- This terminal supports "Emergency call location notification". If you use the terminal to place a call to emergency numbers such as 110, 119, or 118, the information of a location where you are calling from (location information) is automatically notified to the Emergency call acceptance organization such as the Police Station. The Emergency call acceptance organization may not be able to figure out your exact location depending on the location where you place a call or radio wave condition. When location information is notified, name of Emergency call acceptance organization you are calling to will appear. If you dial by adding "184" in front of your number to hide your caller ID, your location information and phone number are not notified. However, if the agency you called considers your location information and phone number necessary for important purposes such as life saving, the agency can retrieve your accurate location information regardless of your mobile settings.
Note that the areas/time for which the "Emergency call location information" is ready to be used vary depending on the preparatory state of each Emergency call acceptance organization.

- When you call the Police (110), Fire/Ambulance (119), or Maritime rescue (118) from the terminal, clearly indicate that you are calling from a mobile phone, then give your present location and mobile phone number. Also, make a point to call in a stationary position to prevent the call from being dropped. Do not power off the terminal for at least 10 minutes after the emergency call just in case the Police or Fire/Ambulance may have to get in contact with you.
- Alternatively, Power key (1 sec. or more)→Tap [Emergency] to make an emergency call.
- Note that you may not connect to the local Fire Department or Police Station depending on where you are calling from.
- In Japan, if the nano SIM card is not inserted, emergency calls 110, 119 and 118 cannot be made on the PIN code entry screen, during PIN code lock/PUK lock or while updating software.
- If you dial 110, 119, or 118 overseas, an emergency call screen may appear but the call is normally sent.
- If you make an emergency call with Reject call settings enabled, Reject call settings will be disabled.
- For some network operators, emergency calls via VoLTE may not be available. In that case, set [4G Calling] (→P136) to OFF.
- Emergency call may not be available via some networks.
- The terminal does not support an emergency call using W-CDMA.

◆ Showing/hiding call ID by each call

Set whether to notify your phone number to the other party's terminal when making a call.

- Your caller ID is important personal information. So, take care when notifying people of it.

- 1 From the Home screen, →[arrows]→[かんたん電話 (Easy phone)]**
- 2 Enter a phone number**
- 3 [メニュー (Menu)]→[通知で電話する (Calling with caller ID)]/[非通知で電話する (Calling without caller ID)]→[電話をかける (Make a call)]**

◆ Calling with additional code

You can enter the phone number and additional code at once when entering the code additionally during a call for bank balance inquiries, ticket reservation services, etc.

Tap and hold "#" to enter ";" (wait), and tap and hold "*" to enter "," (2-sec pause).

- Wait ";" : When the phone number is dialed, the phone will wait automatically and a confirmation message for sending additional code appears.
When you tap [YES], the additional code is sent.
- 2-sec pause "," : When the phone number is dialed, 2-second pause will be automatically inserted and then additional code will be sent.

- 1 From the Home screen, →[arrows]→[かんたん電話 (Easy phone)]**
- 2 Enter a phone number→wait ";" (touch and hold "#")/2-sec pause "," (touch and hold "*")
→Enter the additional code**
- 3 [電話をかける (Make a call)]**
 - When wait ";" is entered, tap [YES] when the call starts to send the additional code.

✓INFORMATION -----

- To display the dialpad and enter the phone number during a call, [Add call] on the calling screen→Enter the additional code.

◆ International call (WORLD CALL)

WORLD CALL is a service which allows you to make international calls with your XXXXX terminal in Japan.

- For details of WORLD CALL, refer to XXXXX website.

1 From the Home screen, [十字]→[arrows]→[かんたん電話 (Easy phone)]→+ (Touch and hold "0")→Enter "Country code-Area code (City code) omitted prefix 0 and phone number"→[電話をかける (Make a call)]

 
- In some countries and areas such as Italy, "0" is required.
- When selecting from the country list to enter "+ country code", enter the area code (city code) and phone number, [メニュー (Menu)]→[国際電話をかける (Making an international call)]→Select a country.

Receiving a call

◆ Receiving a voice call

<Example> When a call is received in sleep mode

1 A call is received

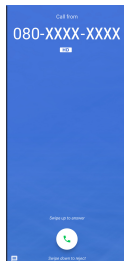

Incoming call screen for voice call

The incoming call screen (full-screen) appears.

- Press Power key or volume key to stop ringtone or vibration.

2 Swipe up

- Starting a call displays  on the upper right of the call screen for a few seconds.

Declining call : Swipe  down

Rejecting a call and sending SMS : Swipe  → Select the message

Recording phone memo : Swipe  up

 
3 When a call is ended,

✓INFORMATION

- When receiving a call while the Home screen is displayed or application is activated, the incoming call screen is displayed at the top of the screen. After you accept and end call, the previous screen is displayed. Tap a caller's name or phone number on the incoming call screen, the incoming call screen (full-screen).
- When Phone memo is ON, up to 10 items can be saved. When there is incoming call with 10 items already saved, it is recognized as a normal call reception and Phone memo does not activate.
To activate Phone memo, delete unnecessary phone memo messages (→P87) from the list of Phone memos.
- When you could not answer a call, a notification icon (→P61) appears on the status bar. Open the Notification panel (→P63) to check missed calls, dial or send SMS.

◆ Answering call during operation

When a call is incoming while the Home screen is displayed or application is activated, the incoming call pop-up screen appears in the upper part of the screen.

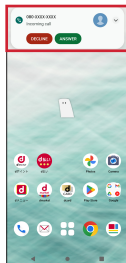

- Tap a caller's name or phone number in the incoming call screen to display the incoming call screen (full-screen).
- After you answer and end the call, the previous screen before the call reappear.

Operation during a call

The following operations are possible in the screen during a call.

- You can adjust call volume with the volume key while dialing/during a call.



Voice call screen

- ① **Name or phone number of the other party**
- ② **Show the dialpad for dial input**
Send touch-tone signals (DTMF tones).
- ③ **Set Mute to ON/OFF**
 - Set Mute to ON to make your voice not be heard by the other party.
- ④ **Add call**
Add a second call using the Call waiting service.
- ⑤ **Slowly Voice**
Switch ON/OFF of Slowly Voice.
- ⑥ **Call time**

- ⑦ **Your phone number**
- ⑧ **Set speaker phone to ON/OFF**
 - When connecting a Bluetooth device, tap to switch voice output devices.
- ⑨ **Hold**
Hold a call*/Cancel hold.
 - * To activate the call on hold function, subscription to the Call waiting service is required.
- ⑩ **Mask Call Mode**
Switch ON/OFF of Mask Call Mode.
- ⑪ **End call**

✓INFORMATION

- If [Slowly Voice] is ON, the other party's voice is made slow so that it can be easy to hear.
- For subscribers of Call waiting, tap [Add call] during a voice call to make a second call.
- When speaker phone is ON, you can talk handsfree using the speaker.
- If [Mask Call Mode] is ON, the voice is made easy to hear even when the other party is wearing a face mask.

Recent calls

You can check call history.

- 1 From the Home screen, [] → [arrows] → [かんたん電話 (Easy phone)]
- 2 [履歴 (Call history)]



- ① **Name or phone number**
Detailed screen appears. You can make a call, registering an entry to the phonebook, and send a message from the detailed screen.
- ② **History icon**
☎ for outgoing call history, ☎ for incoming call history, and ☎ for missed call history are displayed
- ③ **Type of caller**
Outgoing call, incoming call, and missed call history are displayed
- ④ **Delete all call history**

- ⑤ **電話帳を開く (Open phonebook)**
Tap to display the contact list of かんたん電話帳 (Easy phonebook).

◆ Deleting call history

- 1 In the call history screen, [全ての履歴を削除する (Delete all call history)]
- 2 [削除する (Delete)] → [OK]

Phone memo

Set phone memo or play/delete recorded phone memos.

- 1 From the Home screen, [] → [arrows] → [Call settings] → [Phone memo]

2 Set required items

Enable phone memo : Set ON/OFF of Phone memo.

- If number of saved phone memos exceeds the saving limit, the terminal does not answer calls with Phone memo even when the setting is enabled.

Phone memos : Display a list of recorded phone memos. Select a phone memo → Tap ▶ to play the message.

- To delete a message, touch and hold a phone memo → [1 memo delete] → [YES]. When a message notifying that there is no phone memo is displayed, tap [OK].
- To delete all the messages, in the phone memo list, tap ⋮ → [Delete all] → [YES] → [OK].

- For maximum recording time per one or savable numbers, of Phone memo, refer to "Main specifications". →P202

Set answer time : Set a time to answer.

✓INFORMATION

- When an incoming call is answered with Phone memo, the guide message tells the caller that you cannot answer the call right now and prompts to leave a message within 60 seconds after beep tone.

Call settings

Make various settings for XXXXX network services, call and Internet call.

1 From the Home screen,  → [arrows] → [Call settings]

2 Set each item

Settings for network services/roaming/Extension Line service : Set XXXXX network service, actions during international roaming, and Office Link.

- Network service : The following XXXXX network services are available.
 - Voicemail service : Start/stop the service, or set call time, etc.
 - Call forwarding service : Start/stop the service, change forwarding number, etc.
 - Call waiting : Start/stop the service, or check the settings.

- Caller ID notification : Set notification or confirm settings.
- Nuisance call blocking service : Register, remove, check registered numbers or the Advanced settings.
- Caller ID display request service : Start/stop service, or check the settings.
- Call notification : Start/stop the service, or check the settings.
- English guidance : Set or check the settings.
- Remote operation settings : Start/stop the service, or check the settings.
- Public mode (power OFF) settings : Start/stop the service, or check the settings.
- Roaming settings : Setting steps → P189
- Extension line service setting* : Set the Office Link holding and forwarding line service and make settings related to the prefix.
- Transmission of User Information : Set whether to permit the terminal to send user information.

Phone memo : Setting steps → P87

Voice memo : Play back/start/stop voice memo or make settings for it.

Quick responses : Check or edit a message sent when you cannot answer the incoming call.

Blocked numbers : Set incoming calls you want to block.

Auto adjust of call voice : Switch ON/OFF of Mask Call Mode.

Mask Call Mode : The voice is made easy to hear even when the other party is wearing a face mask.

Call time alarm : Set to notify the call time by an alarm when you make a call.

Power button ends call : Set to end call by pressing Power key during a call.

International dial assist : Set to add the country code (+81) when making a call from overseas.

Nuisance call countermeasure : Set whether to notify the other party that the call will be recorded if it comes from the number not listed in your contacts.

* The Office Link is an extension line service for corporate customer.

✓INFORMATION

- You can set for sounds such as call volume or ring volume, operate from the Home screen, [Home]→[Settings]→[Sound].→P149
- From the Home screen, [Home]→[arrows]→[Call settings]→[Quick responses] to edit the SMS to use when receiving a call.
- From the Home screen, [Home]→[arrows]→[Call settings]→[Blocked numbers] to block a call from the number not listed in your contacts, private number, pay phone, and unknown number. For the numbers you registered, a call and SMS can be blocked.
- Mark [Power button ends call] to enable to end a call by pressing Power key. When the screen goes into sleep mode during a call, press Power key to cancel the sleep mode and then press Power key to end the call.

Phonebook

You can register phone numbers, email addresses, etc. to the phonebook. You can contact registered parties through simple operation.

- Activate XXXXX Data Copy application and back up or restore the phonebook entries or other data collectively. For details, see "Backing up/Restoring" in "XXXXX Data Copy".→P130

1 From the Home screen, [Home]→[arrows]→[かんたん電話帳 (Easy phonebook)]



① Register

Register a new contact.

② Name

Detailed screen appears. You can perform operations such as making a call, sending an email and SMS, changing the registered information from the detailed screen.

③ Menu

You can display groups and search the phonebook entries.

④ Index

Displays the index.

◆ Registering an entry to the phonebook

Register a contact.

1 From the Home screen,  → [arrows] → [かんたん電話帳 (Easy phonebook)]

2 [新規登録 (Register new contact)]

3 Enter the name → [次へ (Next)]

4 Enter furigana (phonetic characters of the name in Kana) → [次へ (Next)]

- Furigana for the entered name is already input. If correction is not necessary, tap [次へ (Next)].

5 Enter a phone number → [次へ (Next)]

6 Enter an email address → [次へ (Next)]

7 [この内容で登録する (Register this contact)] → [OK]

- To register the address or memo, tap [追加 (Add)] on each item.

✓ INFORMATION

- Tap [省略 (Skip)] on each item to skip to the next operation without setting the item
- To register a contact from the outgoing/incoming call history, from the Home screen,  → [arrows] → [かんたん電話 (Easy phone)] → [履歴 (Call history)] → Select the history to register → [メニュー (Menu)] → [電話帳に登録 (Register in phonebook)] → [電話帳に新規登録 (Register new contact in phonebook)]/[電話帳に追加登録 (Additionally register in phonebook)] → Set each item → [この内容で登録する (Register this contact)] → [OK].

◆ Editing contacts

Edit the registered contacts.

1 Select the contact to edit in the contact list → [修正する (Edit)]

2 Set required items

- You can edit the name, phone number, etc.

3 [この内容で登録する (Register this contact)] → [OK]

◆ Deleting contacts

Delete the registered contacts.

- 1 Select the contact to delete in the contact list
- 2 [メニュー (Menu)]→[削除する (Delete)]→[削除する (Delete)]→[OK]

✓INFORMATION

- If you register contacts in the speed dialing of the Simple Home, these contacts are not deleted automatically even by deleting the contacts from the phonebook. Delete the contacts in the following procedure.
Touch and hold the speed dialing icon→[Cancel home placement]→[OK]

◆ Searching contacts

Search contacts.

- 1 In the contact list, [メニュー (Menu)]→[検索する (Search)]
- 2 Enter a keyword→[検索する (Search)]

◆ Displaying phonebook entries by group

You can display the contacts by the group.

- 1 In the contact list, [メニュー (Menu)]→[グループ表示する (Display by group)]→Select the group to display

❖ Creating a new group

You can create a group to register contacts.

- 1 In the contact list, [メニュー (Menu)]→[グループ表示する (Display by group)]
- 2 [メニュー (Menu)]→[グループを編集する (Edit group)]→[グループを追加 (Add group)]
- 3 [一覧から選ぶ (Select from list)]→Select the group→[この内容で登録する (Register this group)]→[OK]

Enter and add : [直接入力する (Enter directly)]→Enter the group name→[決定 (Enter)]→[この内容で登録する (Register this group)]→[OK]

Your phone number

You can check your own phone number. You can also enter or edit your own information.

1 From the Home screen,  → [Settings] → [Passwords & accounts] → [My profile] → Select the application

- Tap [修正する (Correct)] ( for XXXXX phonebook) to edit the My profile information such as your name and mail address.
- Tap [メニュー (Menu)] → [共有する (Share)] ( [Share] for XXXXX phonebook) on the profile screen to perform sharing operation.

Mail/Browser

XXXXX mail

Send/receive mails using XXXXX mail address (@XXXXX.ne.jp).

Sent/received mails are saved in XXXXX mail server. You can transfer mail data easily when the terminal is lost or you change the model. Additionally, with d ACCOUNT, you can send, receive and read mail on multiple devices such as a tablet and PC browser using the same mail address.

For details of XXXXX mail, refer to XXXXX website. https://www.xxxxx.ne.jp/service/xxxxx_mail/ (in Japanese only)

1 From the Home screen,

- After that, follow the on-screen instructions.

+Message

You can send/receive images, videos, stamps, etc. as well as text message in chat format using a mobile phone number as a recipient. In addition, you can exchange messages not only on one-to-one, but also among multiple people as group messages.

If the other party is not a +Message user, you can send/receive messages via Short Message Service (SMS) with +Message application.

 
You can also send/receive messages with companies by using official accounts.

For details on +Message, from the Home screen, [+Message] → [MyPage] → [How to use] → [Use guide] to see the guide, or refer to XXXXX website.


https://www.xxxxx.ne.jp/service/plus_message/ (in Japanese only)

1 From the Home screen, [+Message]

- Tap [Contacts] from the menu on the bottom of the screen to display the contacts list screen, and tap [Message] to display the message list screen.

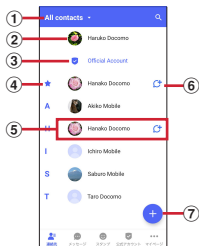

Contacts screen

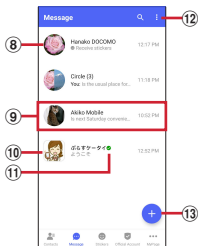 

Message list screen

① **Switch tab**

Tap to switch between displaying all contacts and only +Message users (contact with icon) to display.

② **My profile**

Your profile is displayed. Tap to display/edit My profile.

③ **Official Account**

Tap to open the official account store.

④ **Favorite contacts**

Contacts set as Favorites are displayed in the upper part, just below [Official Account].

⑤ **Contacts**

Tap to check detail of the contact.



The icon indicates a +Message user. You can exchange group messages, photos, stamps, etc. among contacts marked with this icon.



Tap to add a contact.

⑧ **Profile image**

The profile image of the other party is displayed. A profile image registered by the other party takes precedence over the one you registered to a contact.

⑨ **Message**

Tap to open the message screen.

⑩ **Official account**

Account run by a company. Icons of official accounts are squared with rounded corners ().



This certification mark indicates that the account has passed the examination by XXXXX.



Display the submenu.

- Read all : Mark all unread messages as read.
- Sort messages : Sort messages.



Create a new message or new group message.

◆ Sending a message

- 1 From the Home screen, [+Message]
- 2 From the menu on the bottom of the screen, [Message] → + → [New message]/[New group message]

 
- Group message is a function which allows you to exchange messages among +Message service users (contacts with + mark).

3 Select a recipient

- To send to a recipient who is not registered to Contacts, tap [Enter name and phone number] and then enter a phone number directly.
- For group message, select recipients and then tap [OK].

4 Tap the message field and enter a text →

- When a recipient is a +Message user, you can send photos, videos, or stamps.

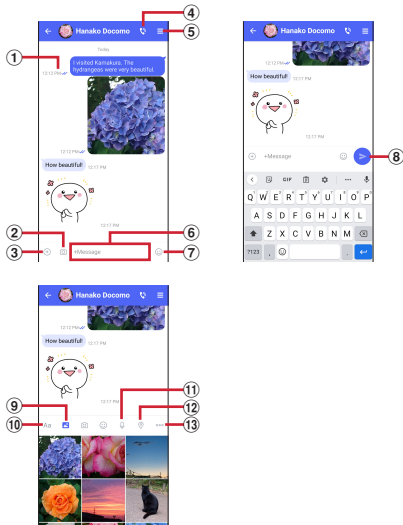

5 Delivery status

Display message delivery status.

✓ : The other party have read message.

- Reading status can be checked only when "Use message read function" of both a sender and receiver are set to ON.

✓ : Message is received on the other party's device
(no icon) : Message is sent to the server

✗ : Sending message failed

② 

Tap to activate the camera. Touch and hold to take a photo and then send it.

③ 

Display the sharing menu to send photos, stamps, location information, etc.

- From the sharing menu, you can use functions such as sending images or recording voice.

④ 

Activate a phone application to make a call.

⑤ 

Display the submenu.

- Register a contact, change notification setting, etc.

⑥ **Message field**

Enter a message.

⑦ 

Switch to the stamp selection screen.

⑧ 

Send an entered message.

⑨ 

Switch to the image selection screen.

⑩ 

Switch to the text entry screen.

⑪ 

Switch to the voice input screen.

⑫ 

Switch to the map screen.

⑬ 

Select Contacts/Sketch/File sharing.

✓INFORMATION

Short Message Service (SMS) information

- SMS can be also sent to or received from the parties using overseas network operators. For countries and overseas network operators available, refer to XXXXX website. To send
- to users of overseas network operators, enter "+", "Country code" and then "the recipient mobile phone number". Enter a phone number omitting a leading "0", if any. Alternatively, enter "010", "Country code" and "the recipient mobile phone number" to send messages.
- You cannot send an SMS message to recipients with " # " or " * " included.
- You cannot send an SMS message to a recipient whose phone number with 184/186 prefixed.

+Message information

- To use +Message application via international roaming, set Enable +Message service while roaming to ON (it is set to OFF by default).
Also, set Data roaming in the terminal to ON.
- Before receiving messages, activate "+Message" application and agree with the +Message terms of use, etc. even if you have used +Message on the previous terminal before model change or MNP transfer.

◆ Reading a message

Sent/received messages are displayed in thread by recipient/sender.

- 1 From the Home screen, [+Message]
- 2 From the menu on the bottom of the screen, [Message]→Select a thread including the message you want to read
 - For functions used when replying message, refer to "Sending a message"→P95

◆ Forwarding a message

- 1 From the Home screen, [+Message]
- 2 From the menu on the bottom of the screen, [Message]→Select a thread
- 3 Touch and hold the message to forward→
- 4 Select a recipient and enter a message→

◆ Deleting a message

- 1 From the Home screen, [+Message]
- 2 From the menu on the bottom of the screen, [Message]→Select a thread
- 3 Touch and hold the message to delete→→[Delete]
 - Only messages on the terminal can be deleted. You cannot delete messages on the recipient device. Note that deleted messages cannot be restored.
 -  may not be displayed when selecting images, etc. In that case, operate →[Delete]→[Delete] in the order.

◆ Deleting a thread

- 1 From the Home screen, [+Message]
- 2 From the menu on the bottom of the screen, [Message]→Touch and hold a thread to delete
- 3 →[Delete]
 - If you delete a thread of group message, you will be left from the group.

◆ Setting +Message

- 1 From the Home screen, [+Message]
- 2 From the menu on the bottom of the screen, [MyPage]→[Settings]
- 3 Set each item
 - Message** : Set for messaging, Backup/Restore, etc.
 - Official Account** : Set the notification sound for official accounts.
 - Photos and videos** : Set for file attachment, etc. such as photos or videos when sending/receiving.
 - Screen display** : Set theme color or background image of message screen.
 - Notification** : Set for notifications.
 - Privacy** : Set passcode, block, etc.
 - Others** : Set transfer of user information, or initialize +Message service, etc.

◆ Using official account

- 1 From the Home screen, [+Message]
- 2 From the menu on the bottom of the screen, [Official Account]
- 3 Tap the account to use on the official account screen
- 4 Place a check mark on "I have read and accepted the Terms and conditions and will use this Official Account"
- 5 [Start]

Gmail

You can use email provided by **Google** or other general providers.

- If Google account or email account is not set, follow the on-screen instructions.

◆ Displaying Gmail

1 From the Home screen, [Google]→[Gmail]

A list of message threads is displayed in the inbox.

- For details on Gmail, tap ≡ or flick right the left end of the screen→Tap [Help & feedback] to see Help.

Early warning "Area Mail"

Area Mail is a service which allows you to receive earthquake early warning or tsunami warning, emergency warning related to weather etc. delivered by the Meteorological Agency, and disaster/evacuation information delivered by the national government or local governments without being influenced by congestion.

- Area Mail is a free service and subscription is not required.
- Area Mail cannot be received in the following case.
 - When the power is off
 - During international roaming
 - In Airplane mode
 - While updating software
 - When PIN code entry screen is displayed
 - While making a voice call (except VoLTE voice calls)

◆ Receiving Early warning "Area Mail"

When Area Mail is received, the notification screen appears and you are notified by the dedicated buzzer sound or dedicated ringtone and vibration.

- The buzzer sound and the ringtone cannot be changed.

1 Receive Area Mail automatically

2 When it is received, the buzzer or beep tone sounds, the icon appears on the status bar, and the message of the Area Mail is displayed

❖ Checking received Area Mail later

1 From the Home screen,  → [Tools] → [Disaster kit] → [Early Warning "Area Mail"] → [Area Mail]

2 Select an Area Mail from the Area Mail list

❖ Deleting Area Mail

- Deleted Area Mails cannot be recovered.

1 From the Home screen,  → [Tools] → [Disaster kit] → [Early Warning "Area Mail"] → [Area Mail]

2 Touch and hold an Area Mail from the Area Mail list

3 [Delete] → [Delete]

Chrome™

You can view websites like on a PC by using "Chrome" application.

You can use "Chrome" application via packet communication and Wi-Fi network with the terminal.

◆ Operation while viewing website

■ Switching web pages to portrait/landscape view

Tilt the terminal lengthwise or sideways to switch to portrait/landscape view.

■ Scrolling/Panning the screen

Scroll the screen up or down / left or right, or pan in every direction (→P52) to show a part where you want to view.

■ Zooming out/in web pages

Pinch-out or in : Zoom-out or zoom-in.

◆ Activating Chrome and displaying website

1 From the Home screen, 

The web page set as homepage is displayed.

- Slide the screen downward to display the address bar at the top part of web page. Enter URL or a keyword in the address bar.

◆ Opening a new tab

You can open multiple tabs to switch web pages quickly.

1 When a web page is displayed, slide the screen down to display the top of the screen → *

* The number varies according to opened tabs.

2 +

A new tab opens and a web page is displayed.

Switching : Tap a tab you want to display

Closing : × of tab

✓INFORMATION

- Alternatively, when a web page is displayed, slide the screen down to display the top part of the web page →  → [New tab] to open a new tab.

◆ Displaying web pages in incognito tab

You can browse web pages without viewing history and search history.

1 When a web page is displayed, slide the screen down to display the top of the screen →

2 [New incognito tab]

A web page is displayed in incognito tab.

- Enter a URL or keyword to the address bar.
- When the incognito tab is activated,  appears on the status bar. Also, while viewing in the incognito tab, the area around address bar is displayed in gray.

- To close an incognito tab, when a web page is displayed, slide the screen down to show the top part of the web page → * → Tap  of the incognito tab.
 - * The number varies according to opened tabs.

✓INFORMATION

- Web pages opened with incognito tab are not displayed in the history. If you close the incognito tab, any record such as Cookie is also cleared. However, downloaded files or bookmarked web pages are saved.

◆ Displaying a web page from history

1 When a web page is displayed, slide the screen down to display the top of the screen → → [History]

2 Select a history of web page

◆ Adding a bookmark to view the web page

❖ Registering a bookmark

1 When a web page is displayed, slide the screen down to display the top of the screen → → ☆

◆ Displaying web pages from bookmarks

- 1** When a web page is displayed, slide the screen down to display the top of the screen → → [Bookmarks]
- 2** Select a bookmark
 - Tap in the right of bookmark to edit or delete.

◆ Web page link operations

You can open a link displayed in website with a new tab, copy an address or text, or download files.

- 1** When a web page is displayed, touch and hold a link
- 2** Select a target operation from the menu

✓ INFORMATION

- To check downloaded files, use "Files" application (→P177), or When a web page is displayed, tap → [Downloads].

◆ Downloading images of websites

- 1** When a web page is displayed, select an image (Touch and hold) → [Download image]
 - To check downloaded images, use "Photos" application (→P113), or when a web page is displayed, tap → [Downloads].

◆ Highlighting and copying text on web page

- 1** When a web page is displayed, slide your finger from the slide spot to the center of the screen, then release the finger at in Slide-in launcher
- 2** Trace the text with your finger
 - For operation after this step, refer to "Highlight & Copy". →P66

◆ Printing web pages

You can print the displayed web pages using a Wi-Fi supported printer. Set up the connection to a printer in advance. →P182

- 1** When a web page is displayed, slide the screen down to display the top of the screen → → [Share...] → [Print]
 - For operation after this step, refer to "Printing". →P183

◆ Setting Chrome

You can set the search engine, privacy, etc.

1 When a web page is displayed, slide the screen down to display the top of the screen → ⋮ → [Settings]

2 Set required items

Turn on sync : Sign in to Chrome with your Google account and set synchronizing between terminals.

Google services : Set Google services.

Search engine : Set the search engine to be used for search web pages.

Passwords : Set whether to save passwords entered to web pages.

Payment methods : Set payment method.

Addresses and more : Set addresses, phone number, etc.

Privacy and security : Make settings for safety or convenience.

Safety check : Check whether you are kept safe from data breaches or unsafe websites, etc.

Notifications : Set for notifications for newly arrival information.

Theme : Set the theme.

Homepage : Set a home page.

Accessibility : Make settings of the screen display such as font size or zooming.

Site settings : Make sites settings such as Cookie or JavaScript.

Languages : Set the display language. Web pages can be displayed in set language if the language display is available.

Downloads : Set the saving location for downloading files.

About Chrome : Check information about Chrome such as version of the application.

Camera

Camera

◆ Cautions on shooting

- Although the camera is manufactured using extremely high-precision technology, it may contain dots or lines that are always lit or do not light. When shooting under low light conditions, in particular, white lines or random color dots are likely to appear as noises. This is not a malfunction.
- When activating the camera, white stripes may appear on the screen. This is not a malfunction.
- When the terminal is in high temperature state for a long time, the camera may not be available. Wait until the terminal cools down to use again.
- When the battery is low, the camera may not be available. Fully charge the terminal before using the camera.
- The captured images may be different from actual objects for color and brightness.
- If you try to shoot an object in an environment with intense light source like the sun etc., the images may be dark or noisy.
- Fingerprints or body oil on the lens can affect images. Wipe with a soft cloth before shooting.
- The battery is consumed quickly when using the camera.
- When the battery is low, lighting volume for flash may be limited.

- If you do not operate for approximately 2 minutes during stand-by, the camera is exited and  appears on the status bar.
- When you are approximately 10cm or more away from an object, the camera automatically focuses on the object according to the set scene mode.

Copyrights and portrait rights

Avoid reproducing, altering, or editing taken or recorded pictures or sounds using the terminal without the copyright holders authorization, because, except for personal use etc., they are prohibited by the Copyright law. Avoid using or altering pictures of others without their consent, because they may infringe on portrait rights.

Note that taking photos or recordings at some demonstrations, performances or exhibitions may be prohibited even when only for personal use. Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones

If you cause the public any trouble using the terminal, you may be punished under law or regulations (for example, Anti-Nuisance Ordinance).