

operation.

## E-book Page Flipper

### User Manual





Receiver

Remote Control

Model: QXS-002

#### Product Introduction:

This product mainly consists of a remote control and areceiver, designed to enhance your digital reading experience. When reading on a Kindle e-book reader, you can attach the receiver to the right side of your device with the built-in clip, and then control the page turning with the remote. Meanwhile, when using a smartphone for reading or watching short videos, you can connect the remote to your phone via Bluetooth to control the page turning of your e-books, or even scroll through videos/ like or shoot, and many more.



Silicone

Type-C port

Button

Indicator Light

#### Operating Instructions:

1. **Button:** Click power on, the blue light will flash . Longress to power off and the blue light will go out.

2. **Clip:** The silicon part at the top of the clip should contact the Kindle screen.

3. **Charging Port & Indicator Light:** Charge via the Type -C port. When the battery is low, the red light will flash. While charging, the red light will stay on. Once the device is fully charged, the red light will go out.

4. The receiver needs to be used in conjunction with the remote controller and cannot be used independently.



Button

Type-C port

Lanyard hole

Phone key (Kindle)

#### Operating Instructions:

**Mode Switching:**  
**Switch upward: key (Kindle) mode.** Corresponds to the blue light flashing, when connected to the receiver, the light stays on for 10 seconds and the light flashes once after pressing the button.  
**Switch downward: Phone mode.** Corresponds to the blue light flashing, when connected to the mobile phone the light stays on for 10 seconds, and the light flashes once after pressing the button.

| Button                                                                              | Phone Mode                                                                                 | Key Mode                |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|-------------------------|
|  | <b>Click:</b> Next video<br><b>Double-click:</b> Swipe left<br><b>Long press:</b> Turn off | <b>Click:</b> Turn page |
|  | <b>Click:</b> Pause<br><b>Double-click:</b> Like<br><b>Long press:</b> Take a photo        | <b>Click:</b> Turn page |

**Click:** Previous video  
**Double-click:** Swipe right  
**Long press:** Take a photo

**Click:** Turn page

#### Low Power Status:

When the receiver and the remote control battery are at a low power state, the red light flashes, and it remains on while charging, then goes out when fully charged. The charging time is approximately 1.5 hours

#### Usage Instructions:



**Key(kindle) Mode:** Switch the remote control to key mode. After the remote control and receiver are powered on, the blue light flashes. When connected successfully, the blue light remains on, and each key press lights up the blue light once. Fix the receiver's clip on the Kindle screen, ensuring that the silicone on the clip contacts the screen for remote page flipping.

**Phone Mode:** Switch the remote control to Phone mode Turn on 'Bluetooth' » 'Search for Bluetooth' on your phone or tablet » Find device named 'QXS-002' » Click to connect device » Complete Bluetooth connection , and you can control phone short videos and flip ebooks.

#### Instructions for Using the iOS System:

1.Ensure that iOS system is version 14.8 or higher.

2.To open "Accessibility", refer to the operation in the following diagram.

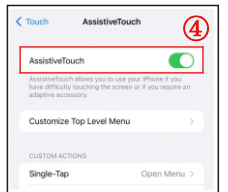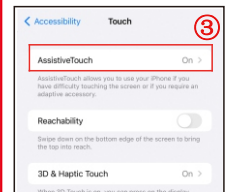

#### Common Questions:

**Q1: About taking photos and recording videos**  
**A:** In phone mode, only those that support volume key photo-taking or video recording can be used.

**Q 2: Ebook reading page turning in Android or Apple system**  
**A:** When the remote control is in phone mode, you can achieve left and right page flipping by double-clicking keys 1 and 3. Some apps that do not support this feature need to select 'Simulation' in the E-book reading interface settings.

**Q 3: Can I use a foldable screen phone?**  
**A:** Yes, you can. Foldable screen phones need to be unfolded and used in vertical screen mode. If it doesn't work, you can try restarting the phone once.

**Q 4: What if IOS system can't be used normally after opening touch and restarting the phone?**  
**A:** Firstly, press key to confirm whether the cursor (small black dot) has shifted from the default position, which is usually at the center of two-thirds of the screen. If it deviates too far, it can be adjusted to the correct position by adjusting the 'tracking sensitivity slider'. You need to press the remote control key to confirm the cursor position for each adjustment. And make sure 'Perform Touch Gestures' is switched on.

Touch

AssistiveTouch

The AssistiveTouch menu will be hidden when a pointer device is connected.

Perform Touch Gestures

On

Use Game Controller

Off

Allow AssistiveTouch to be controlled by Game Controllers.

Learn more...

TRACKING SENSITIVITY

Drag to adjust sensitivity

Dwell Control

Off

Fallback Action

Off

Movement Tolerance

#### Specification Parameters:

**Remote Controller:**  
Wireless Version: Wireless 5.3  
Transmission Frequency: 2.4GHz—2.48GHz  
Communication Distance: 10 meters  
Battery Capacity: 180mAh  
Charging Duration: 1.5 hours

**Receiver:**  
Wireless Version: Wireless 5.3  
Transmission Frequency: 2.4GHz—2.48GHz  
Communication Distance: 10 meters  
Battery Capacity: 180mAh  
Charging Duration: 1.5 hours

6. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

1