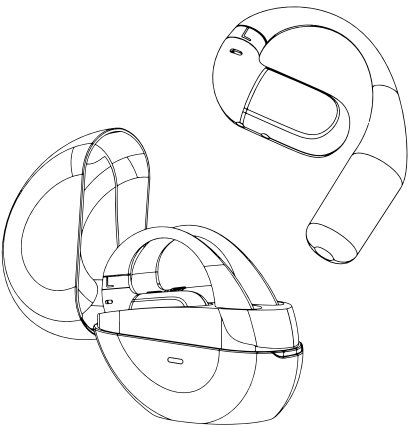
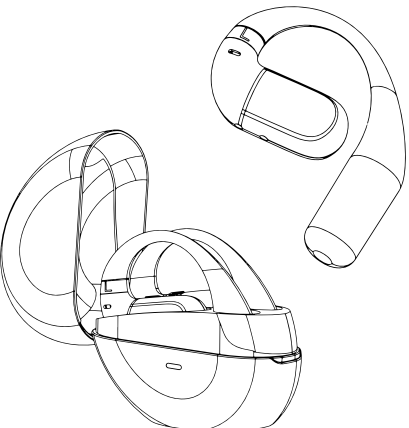


OPEN WEARABLE STEREO 开放式立体声蓝牙耳机  使用指南 User Guide	● 开机/关机 开机: 耳机离开充电仓耳机自动开机进入配对状态,(手动开机)长按按键约 3 秒,白蓝灯快闪 200ms,连接后熄灭,语音提示“开机”。 关机: 耳机放入充电仓进入充电状态自动关机断开连接,(手动关机)长按按键约 5 秒,白蓝灯快闪3下后熄灭,语音提示“关机”。 ● 蓝牙配对 1.配对状态下,耳机 L 和 R 同时白蓝灯快闪 200ms 2.配对成功后,可在手机页面连接设备,左耳灯灭,右耳白蓝灯快闪,连接手机成功后灯灭,语音提示“配对成功”。 3.与手机连接后, 语音提示“蓝牙已连接”。 4.配对超时,开机未连接手机时,3分钟后自动关机。	● 功能操作 1.接听:任意单击左右按键, 语音提示“接听”。 2.挂断:任意双击左右按键,语音提示“挂断”。 3.通话时音量加/减:长按左耳按键约1秒后,音量开始减;松手停/长按右耳按键约1秒后,音量开始加;松手停;语音提示“高”。 4.听歌/暂停:任意单击左右按键,语音提示“滴”。 5.上/下一曲: 三击 L 耳按键(上一曲)/三击 R 耳按键(下一曲)。 6.音量加/减:双击 L 耳按键音量-/双击 R 耳按键音量+,语音提示“滴”。 7.语音助手: 任意长按左右按键约 3 秒松开进入语音助手,单击退出。语音提示“滴”。 8.来电报号:报来电号码后鸣铃。 9.来电拒接:任意长按左右按键约2秒。 10.语音切换: 开机未连接手机情况下,白蓝灯闪烁任意双击左右边按键,语音提示“中文模式”。 11.重低音模式/HIFI音乐模式: 任意四击左右按键,“嘟嘟”进入重低音音乐模式;再次4击,“嘟”退出,进入HIFI音乐模式,(耳机关机再次开机时保留的是关机前的模式)。 12.复位耳机:任意长按左右按键约8秒,进行复位,复位成功后白蓝灯快闪。 13.游戏模式: 任意五击左右按键进入游戏模式, 再次五击退出。	● LED 指示状态 1.耳机放入充电盒,耳机蓝灯长亮,充电盒蓝灯长亮。 2.耳机拿出充电盒,白蓝灯交替闪。 3.耳机配对,副耳灯灭,主耳白蓝灯闪烁。 4.耳机与手机配对成功,耳机灯灭。 5.给充电盒充电,蓝灯单闪,充满蓝灯常亮。 6.耳机放入充电盒充电,充电仓灯长亮,耳机充满灯灭,盒子灯灭。 ● 注意事项 ● 切勿使用具有腐蚀性的清洁剂清理本产品。 ● 切勿让本产品加热或靠近火源, 如煮食炉。 ● 切勿让本产品长时间受强光直接照射。 ● 切勿将本产品弃置于火中, 避免发生爆炸。 ● 切勿尝试拆开本产品作出任何修改, 因为它并不包含任何维修组件。 ● 切勿在雨中使用本产品。 ● 如果长时期内不打算使用本产品, 请您将它储存在干燥的环境中, 并每月至少为耳机充电一次以延长寿命, 避免极端的温度和灰尘。
---	---	---	--

OPEN WEARABLE STEREO OWS HEADSET  User Guide	● Power on/off Power on: After leaving the compartment, the machine will automatically turn on and enter the pairing state. (Manual power on) Press and hold the button for about 3 seconds, the white and blue lights will flash quickly for 200ms, and then turn off after connecting. Power off: Put the headphones into the charging compartment and enter the charging state. The headphones will automatically shut down and disconnect. (Manual shutdown) Press and hold the button for about 5 seconds, and the white and blue lights will flash three times before going out. ● Earphone pairing 1. In pairing mode, the white and blue lights of the earphones L and R flash quickly for 200ms at the same time 2. After successful pairing, you can connect the device on the phone page, with the left ear light off and the right ear white blue light flashing quickly. After connecting the phone, the light goes off and the voice prompt "Pairing successful" appears. 3. After connecting to the phone, the voice prompts "Bluetooth connected". 4. Pairing timeout, if the phone is not connected after powering on, it will automatically shut down after 3 minutes.	● Function operation 1. Answer: Click the left and right buttons at will, and the voice prompt "answer" will appear. 2. Hang up: Double click the left and right buttons, and the voice prompt "Hang up" will appear. 3. Volume increase or decrease during a call: Press and hold the left ear button for about 1 second before the volume begins to decrease. Release and stop/Press and hold the right ear button for about 1 second, and the volume starts to increase. Release and stop. Voice prompt "DI". 4. Listening/Pause: Click the left and right buttons at will, and the voice prompt will be "DI". 5. Previous/Next Song: Three clicks on the L ear button (previous song)/Three clicks on the R ear button (next song) 6. Volume increase/decrease: Double click on the L ear button for volume +/Double click on the R ear button for volume -, and the voice prompt will be "DI". 7. Voice Assistant: Press and hold the left and right buttons for about 3 seconds to release and enter the voice assistant. Click to exit, and the voice prompt will be "DI". 8. Caller ID: Ring after calling the number. 9. Call rejection: Press and hold the left and right buttons for about 2 seconds. 10. Voice switching: When the phone is not connected when turned on, the white and blue lights flash. Double click the left and right buttons, and the voice prompt "Chinese mode" will appear. 11. Subwoofer mode/HIFI music mode: Press any of the left and right buttons four times to enter the subwoofer music mode. Press again four times to exit and enter HIFI music mode. (When the headphones are turned off and turned on again, the mode remains the same as before). 12. Reset the headphones: Press and hold the left and right buttons for about 8 seconds to reset. After successful reset, the white and blue lights will flash quickly 13. Game mode: Enter the game mode with any five clicks of the left and right buttons, and exit with another five clicks.	● LED indicating status 1. Place the earphones in the charging box, and the blue light of the earphones will remain on, while the blue light of the charging box will remain on. 2. Take out the charging case of the earphones, and the white and blue lights flash alternately. 3. Pair headphones, with the auxiliary ear light off and the main ear white and blue light flashing. 4. Successfully paired the earphones with the phone, but the earphone light is off. 5. Charge the charging box with a single blue light flashing and a constant blue light when fully charged. 6. Place the earphones into the charging box for charging. The charging compartment light remains on, the earphone fully charged light goes out, and the box light goes out. ● Matters needing attention ● Do not use abrasive cleaners to clean this product. ● Do not allow this product to be heated or close to a fire source, such as a cooking stove. ● Do not expose the product to direct sunlight for a long time. ● Do not discard this product in fire to avoid explosion. ● Do not attempt to disassemble this product to make any modifications, as it does not contain any maintenance components. ● Do not use this product in rain. ● If you do not plan to use this product for a long time, please store it in a dry environment and charge the headset less once to prolong its life and avoid extreme temperature and dust.
--	--	---	---

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.