

MINI PRINTER

Instruction manual



iPrint


1. For overseas Android phones, first download the Google Play App store, then scan the QR code and jump to Google Play to download the iPrint App
For an iPhone, scan the code and go to AppStore to download the iPrint App
2. Apple store or Google search: Tiny Print installed APP to use.

Brief Introduction:

Welcome and thank you for choosing our products, in order to understand and use our products more quickly, it is recommended that you read this manual carefully before use, and keep it properly for future reference. Warnings and precautions in the instruction manual should be complied with. If there is any reference error, we hope that users will understand that the design content will be changed without notice.

This product is a unique shape, exquisite design, easy to operate children's digital printer, designed for children's digital products, so that children in use to learn more imagination play, experience the fun of nature.

Key/Interface Specification:

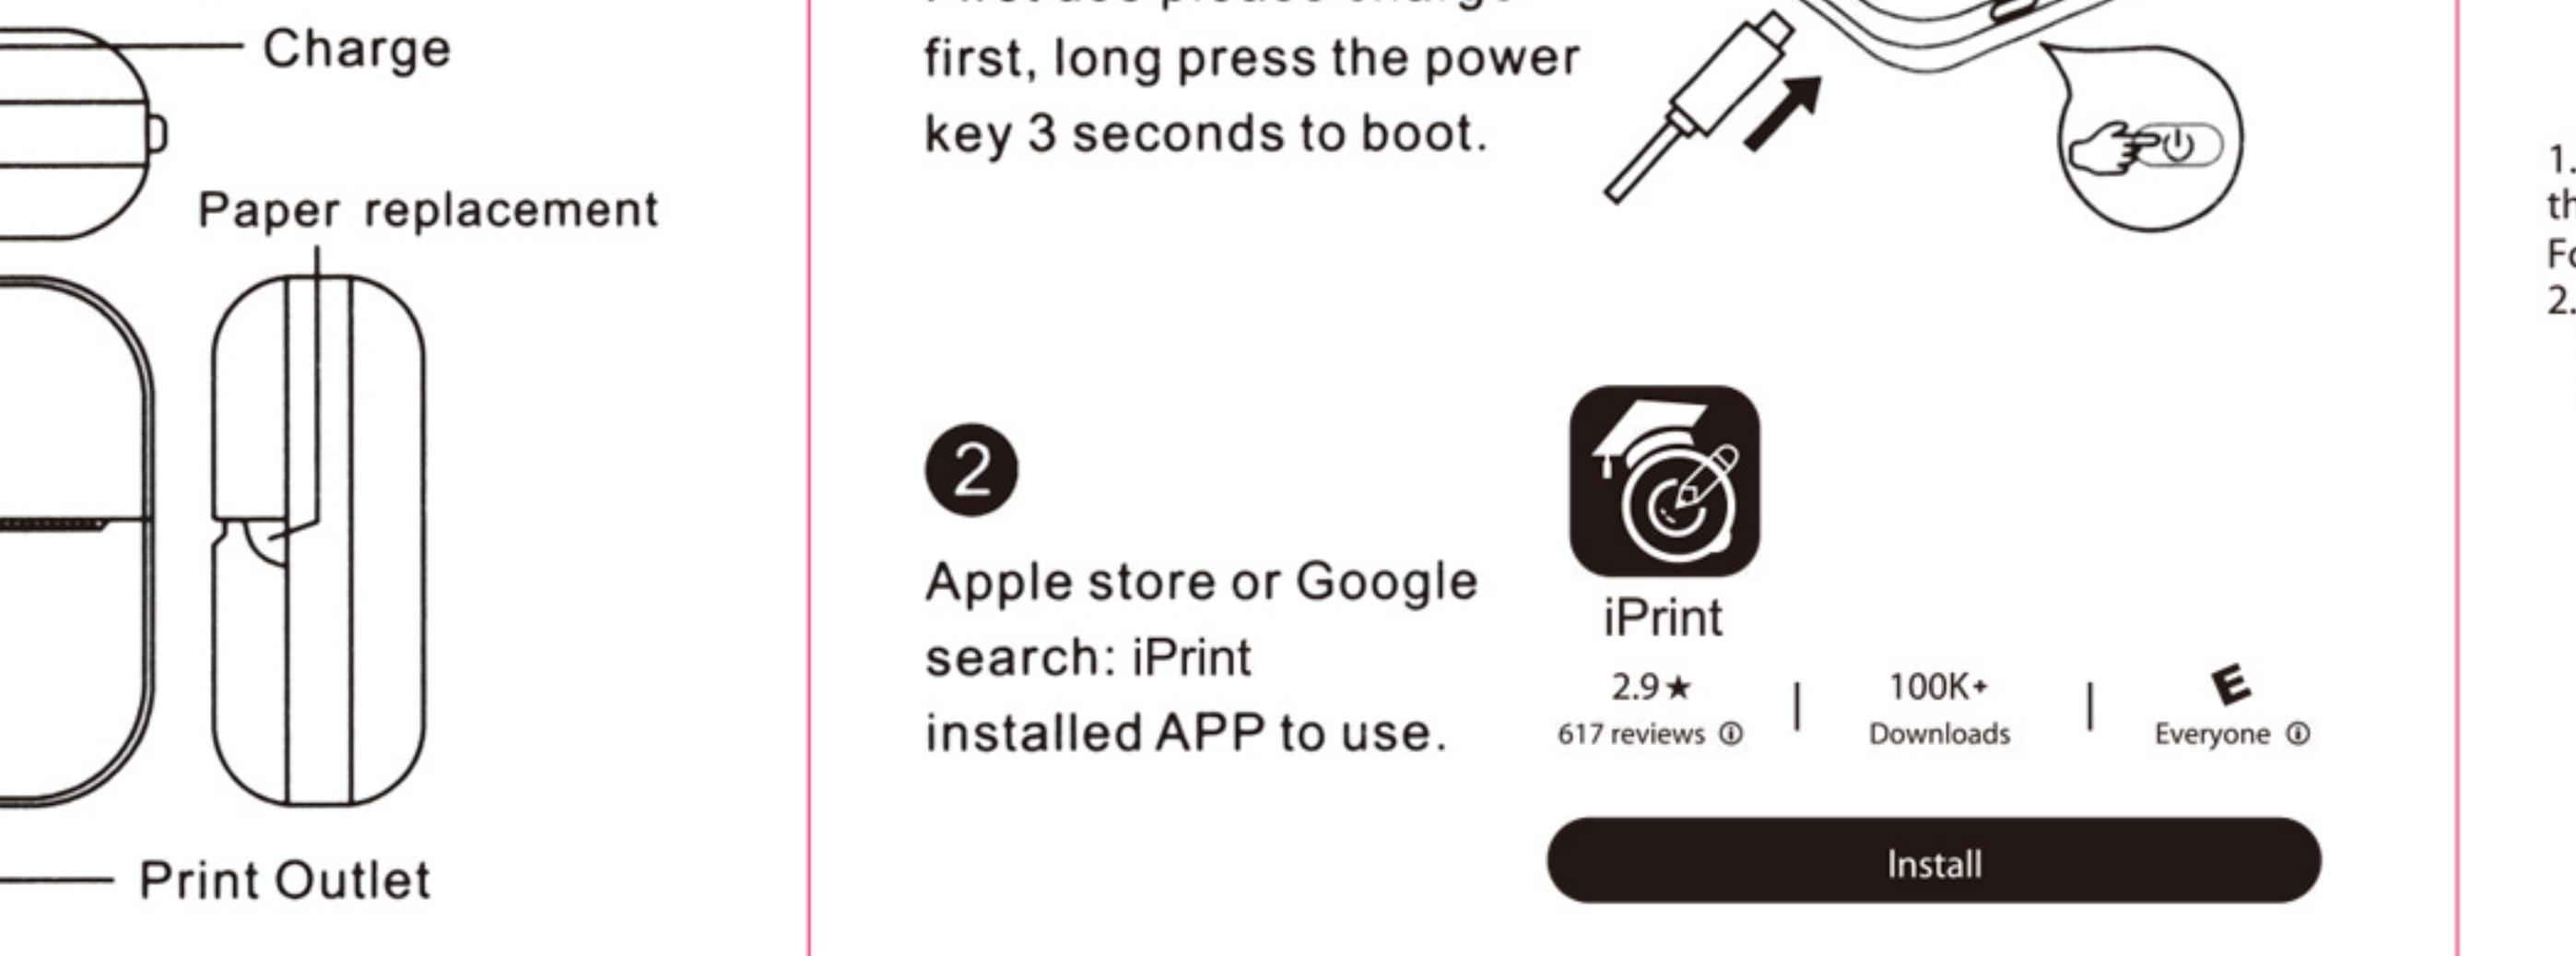

Power Indicator Status:

	Blue light is on/quick flashing	Standby/charge completed
	Red light is always on/off	Charging/Charging completed
	Blue light flashing	Print head hot/short of paper

Use The Wizard:


1

First use please charge first, long press the power key 3 seconds to boot.



2

Apple store or Google search: iPrint installed APP to use.

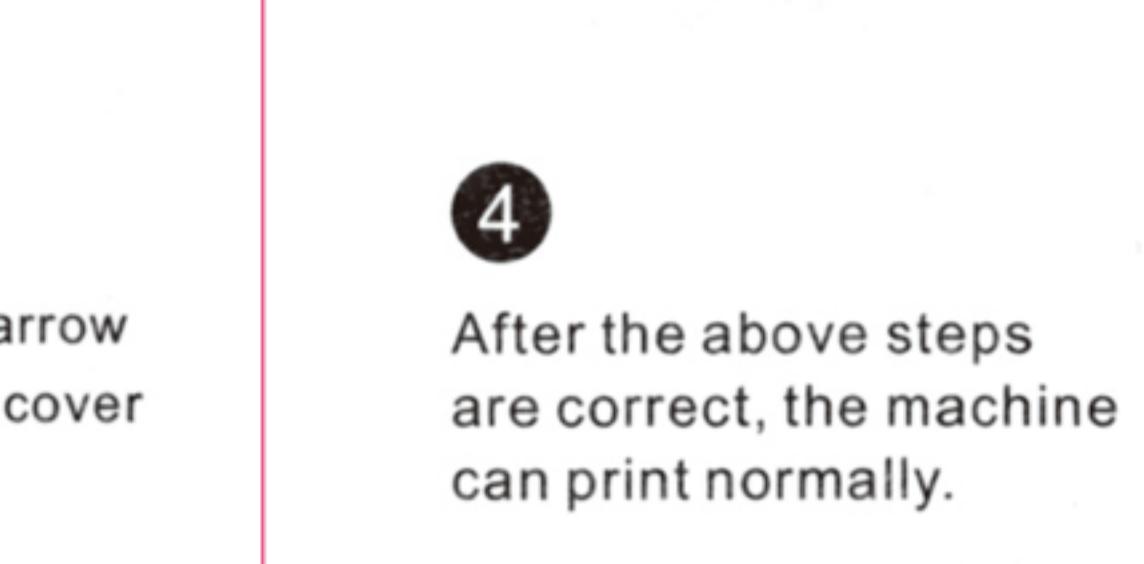

Battery Warning Note:

1. Please use 5V charged to charge according to the specification to avoid damage to the machine;
2. Disassembly, impact, extrusion or fire are prohibited;
3. If severe bulging occurs, do not continue to use;
4. Do not put in high temperature environment, battery after immersion is prohibited to use;
5. Replacement with the wrong type of battery can be explosive, be sure to follow the instructions to dispose of used batteries.

Matters Needing Attention:

1. When charging, please gently insert and pull out the charging line to prevent excessive force damage to the port;
2. After charging, please unplug the charging line in time;
3. In order to avoid danger, do not use or charge in high temperature, high humidity, excessive smoke and dust environment, such as bathroom, steam room, open fire, etc;
4. Improper charging may lead to print head damage;
5. Do not touch the print head to prevent overheating and scalding;
6. Tear paper blade sharp, be careful not to touch.

Paper Replacement Course:

1

Press both sides as shown by arrow 1 and open the cardboard box cover upwards at the same time

2

After the above steps are correct, the machine can print normally.

3

After mobile phone Bluetooth is enabled, download the app with the mobile phone, click "iPrint" in the upper right corner of the "Print" TAB to connect the printer, and print the note after successful connection.



4

1

Press both sides as shown by arrow 1 and open the cardboard box cover upwards at the same time

2

After the above steps are correct, the machine can print normally.

5

FCC WARNING: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Relocate or relocate the receiving antenna; Increase the separation between the equipment and receiver; Connect the equipment into a circuit different from that to which the receiver is connected; Consult the dealer or an experienced radio/TV technician for help.

Note: The Gateway is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or operating with any other antenna or transmitter.