

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

a) READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- b) Do not use this products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, install only to covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation.
- c) Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- d) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- e) Do not let lamps rest on the supply cord or on any wire.
- f) Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
- g) This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- h) Do not use this product for other than its intended use.
- i) Do not hang objects from cord, wire, or light string.
- j) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- k) Do not cover the product with cloth, paper or any material not part of the product when in use.
- l) This product is equipped with direct plug-in adapter, do not make adapter support on ground any time.
- m) Do not use an extension cord.
- n) Reference the national Electrical Code, ANSI/NFPA70, specifically for the installation of wiring and clearances from power and lighting conductors.
- o) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards including fire-rating construction.
- p) Do not install or use within 10 feet of a pool.
- q) Do not use in a bathroom.
- r) To reduce the risk of fire and electric shock: Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and Do not mount or support wires in a manner that can cut or damage wire insulation.
- s) **WARNING:** Risk of Fire. Installation involves special wiring methods to run wiring through a building structure qualified electrician.
- t) **WARNING:** Risk of Electric Shock. Mount the unit at a height greater than 1 foot (0.3m) from the ground surface.
- u) For direct plug-in units, using pictorials or equally effective means, not to use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).
- v) Read and follow all instructions that are on the product or provided with the product.

w) SAVE THESE INSTRUCTION



WARNING: This product contains a coin battery.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



⚠ CAUTION:

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Replace remote with 1x (3V) CR2025 battery.
- e) Non-rechargeable batteries are not to be recharged.
- f) Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- g) Ensure the batteries are installed correctly according to polarity (+ and -).
- h) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc or rechargeable batteries.
- i) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- j) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.


INSTRUCTIONS

Use and Care Instructions

- a) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- b) If the product is placed on a tree, the tree should be well secured and stable.
- c) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- d) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- e) When not in use, store neatly in a cool, dry location protected from sunlight.

User Servicing Instructions

Using equipped remote to change light colors, modes and functions by pressing corresponding keys.

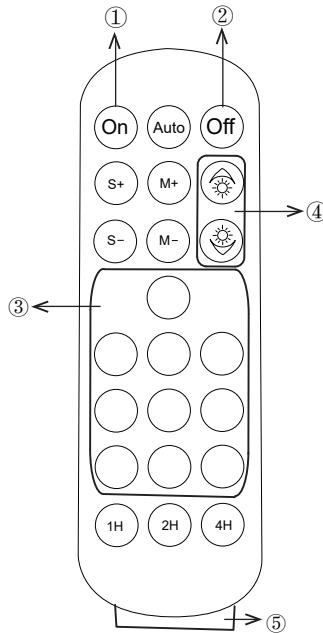

Please remove the insulation strip (⑤) when first time use.

- ① Turn ON the light
- ② Turn OFF the light
- ③ 10 static colors to select by pressing color representing keys
- ④ Brightness adjustment
- Auto: Lights run automatically for dynamic mode
- S+/S-: Adjustable speeds for dynamic mode
- M+/M-: Light modes change
- 1H: Timer function, 1 hours on, 23 hours off
- 2H: Timer function, 2 hours on, 22 hours off
- 4H: Timer function, 4 hours on, 20 hours off

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee

that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.