



## Product Introduction

### Data Page

Page 1: Speed, Distance, Time, Altitude, Slope, Clock, Climb  
Page 2: Speed, Power, Cadence, Heart Rate, Slope, Distance, Climb  
Page 3: AVG SPD, AVG PWD, AVG CAD, AVG HRD, ALT, Clock, Climb  
Page 4: MAX SPD, MAX PWD, MAX CAD, MAX HRD, ALT, Clock, Temp  
Page 5: TOL AVG SPD, ODO, TOT, HRD, ALT, Clock, Temp

### Accessories

Main Device Power Cord Standard mount Instruction

### Button

Function	Operation
Power on/off	Press and hold the left button 2S
Start/Pause	Short press the left button to start or pause
End/Save	Long press the right button in the recording state
Switch Display	Short press the right button to switch data page
Setting Mode	both keys press 2S at the same time
Factory	When the power is off and charging, press and hold
Reset	both buttons at the same time 2S

### Icon

Satellite Signal	Power
Bluetooth	Pause
Speed	Recording
Heart Rate	Battery
Cadence	

**When the elevation data and time are felt to be off, they can be repositioned in an open environment for calibration and update**

### Charge&Sleep

- BB18 needs to use DC 5V adapter, supports charging while using.
- Charging display:  
Power off state: display time and Battery icon  
Power on state: Battery icon flashes

### Data Page

When no movement reaches 5 minutes, the code meter automatically enters the hibernation state. Press any button to interrupt hibernation.  
As the temperature drops, the endurance time will be relatively reduced.  
When the page shows "LP", it means the power of the watch is low and needs to be charged.

### Accessories

Base Part Waterproof plug

### Button

Left button Right button Type-C Charging port

### Satellite Positioning & Backlight

- This product automatically and intelligently searches for satellites.
- Please make sure the device is searching for satellites in outdoor or unobstructed environment.
- If no satellite is searched, the GPS icon in the upper left corner is not displayed.
- GPS icon is displayed after satellite search.
- Automatic altitude calibration after each positioning.
- Tunnel backlight needs to be turned on automatically with the speedo connected.
- Auto backlight automatically turns on and off the screen backlight according to the local sunset and sunrise time of positioning.

**When the elevation data and time are felt to be off, they can be repositioned in an open environment for calibration and update**

### Charge&Sleep

- BB18 needs to use DC 5V adapter, supports charging while using.
- Charging display:  
Power off state: display time and Battery icon  
Power on state: Battery icon flashes

### Data Page

When no movement reaches 5 minutes, the code meter automatically enters the hibernation state. Press any button to interrupt hibernation.  
As the temperature drops, the endurance time will be relatively reduced.  
When the page shows "LP", it means the power of the watch is low and needs to be charged.

### Accessories

Base Part Waterproof plug

### Button

Left button Right button Type-C Charging port

### Satellite Positioning & Backlight

- This product automatically and intelligently searches for satellites.
- Please make sure the device is searching for satellites in outdoor or unobstructed environment.
- If no satellite is searched, the GPS icon in the upper left corner is not displayed.
- GPS icon is displayed after satellite search.
- Automatic altitude calibration after each positioning.
- Tunnel backlight needs to be turned on automatically with the speedo connected.
- Auto backlight automatically turns on and off the screen backlight according to the local sunset and sunrise time of positioning.

**When the elevation data and time are felt to be off, they can be repositioned in an open environment for calibration and update**

### Charge&Sleep

- BB18 needs to use DC 5V adapter, supports charging while using.
- Charging display:  
Power off state: display time and Battery icon  
Power on state: Battery icon flashes

### Product Introduction

### Data Page

When no movement reaches 5 minutes, the code meter automatically enters the hibernation state. Press any button to interrupt hibernation.  
As the temperature drops, the endurance time will be relatively reduced.  
When the page shows "LP", it means the power of the watch is low and needs to be charged.

### Accessories

Base Part Waterproof plug

### Button

Left button Right button Type-C Charging port

### Satellite Positioning & Backlight

- This product automatically and intelligently searches for satellites.
- Please make sure the device is searching for satellites in outdoor or unobstructed environment.
- If no satellite is searched, the GPS icon in the upper left corner is not displayed.
- GPS icon is displayed after satellite search.
- Automatic altitude calibration after each positioning.
- Tunnel backlight needs to be turned on automatically with the speedo connected.
- Auto backlight automatically turns on and off the screen backlight according to the local sunset and sunrise time of positioning.

**When the elevation data and time are felt to be off, they can be repositioned in an open environment for calibration and update**

### Charge&Sleep

- BB18 needs to use DC 5V adapter, supports charging while using.
- Charging display:  
Power off state: display time and Battery icon  
Power on state: Battery icon flashes

### Product Introduction

### Data Page

When no movement reaches 5 minutes, the code meter automatically enters the hibernation state. Press any button to interrupt hibernation.  
As the temperature drops, the endurance time will be relatively reduced.  
When the page shows "LP", it means the power of the watch is low and needs to be charged.

### Accessories

Base Part Waterproof plug

### Button

Left button Right button Type-C Charging port

### Satellite Positioning & Backlight

- This product automatically and intelligently searches for satellites.
- Please make sure the device is searching for satellites in outdoor or unobstructed environment.
- If no satellite is searched, the GPS icon in the upper left corner is not displayed.
- GPS icon is displayed after satellite search.
- Automatic altitude calibration after each positioning.
- Tunnel backlight needs to be turned on automatically with the speedo connected.
- Auto backlight automatically turns on and off the screen backlight according to the local sunset and sunrise time of positioning.

**When the elevation data and time are felt to be off, they can be repositioned in an open environment for calibration and update**

### Charge&Sleep

- BB18 needs to use DC 5V adapter, supports charging while using.
- Charging display:  
Power off state: display time and Battery icon  
Power on state: Battery icon flashes

### Product Introduction

### Data Page

When no movement reaches 5 minutes, the code meter automatically enters the hibernation state. Press any button to interrupt hibernation.  
As the temperature drops, the endurance time will be relatively reduced.  
When the page shows "LP", it means the power of the watch is low and needs to be charged.

### Accessories

Base Part Waterproof plug

### Button

Left button Right button Type-C Charging port

### Satellite Positioning & Backlight

- This product automatically and intelligently searches for satellites.
- Please make sure the device is searching for satellites in outdoor or unobstructed environment.
- If no satellite is searched, the GPS icon in the upper left corner is not displayed.
- GPS icon is displayed after satellite search.
- Automatic altitude calibration after each positioning.
- Tunnel backlight needs to be turned on automatically with the speedo connected.
- Auto backlight automatically turns on and off the screen backlight according to the local sunset and sunrise time of positioning.

**When the elevation data and time are felt to be off, they can be repositioned in an open environment for calibration and update**

### Charge&Sleep

- BB18 needs to use DC 5V adapter, supports charging while using.
- Charging display:  
Power off state: display time and Battery icon  
Power on state: Battery icon flashes



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.