



Welcome Guide

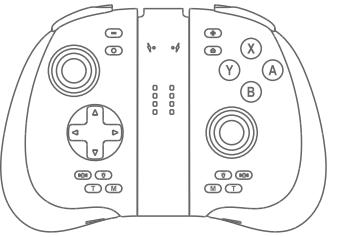

JC02-1

Layout

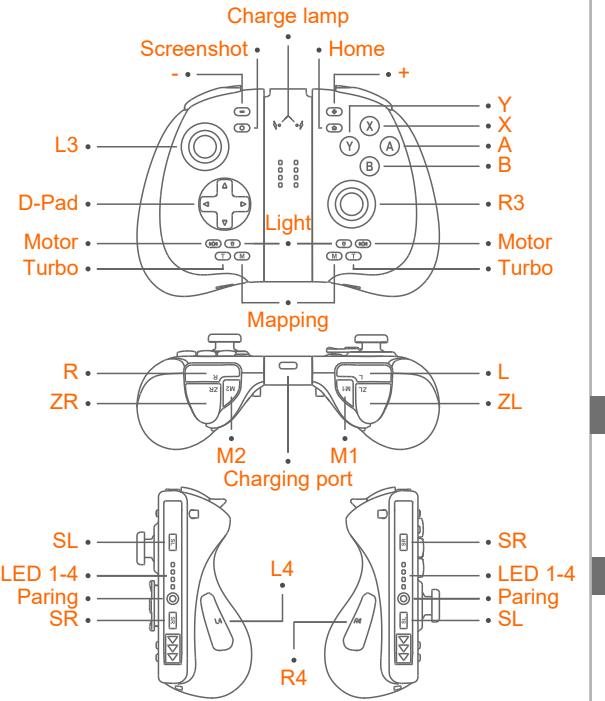

Mapping M + M1 | M2 | L4 | R4

Buttons can be set

A / B / X / Y / R / ZR / L / ZL / L3 / R3 / D-Pad and left or right joysticks (joystick counts as eight keys).

Setting

① Hold the **M** button and press any of **M1/M2/L4/R4** button to enter the programming mode.

② Then input the button or button combination you want to set.

*Each programmed button(**M1/M2/L4/R4** can record up to **16** inputs(Each press of function buttons is regarded as an input), When the input exceeds **16** times, the programming will automatically end.③ When you're done, press the **M1/M2/L4/R4** button that was pressed earlier to end the programming.**Note:** The controller will vibrate when you start or end the programming.

Cancel

Method A: After entering the programming mode, directly press the **M1/M2/L4/R4** button that was pressed earlier to exit without setting any buttons.(at this time, **M1/M2/L4/R4** button is empty and there is no function)Method B: Press the **M** button for **5s** to reset the assignment function.**Note:** The controller will vibrate when you cancel the programming.

Specifications

Working voltage: DC3.7-4.2V
Input voltage/current: DC5V/1A
Charging time: about 2 hours
Continuous running time: >8 hours
Battery capacity: 600mAh

Wired Pairing

① Please make sure that the Switch has turned on the wired connection mode.

(Setting - Controllers and Sensors - Pro Controller Wired Communication)

② Attaching the controllers to the Switch will connect them automatically.



Wireless Pairing

The controllers will remain paired when you detach them from the Switch, and you'll be able to use them wirelessly.

Reconnection

Press the **Home** button or the **Screenshot** button to reconnect the Switch. The **LED1-4** indicators on the side will start to flash in a regular pattern as an indication of reconnecting.

Light

Change Colors

Press the **Light** button **once** to change the color successively.(Controller will vibrate)

Colors: pink - red - orange - green - blue - cyan

Change Modes

Double press the **Light** button to switch light modes. (Controller will vibrate)Mode 1: **Single Color**Mode 2: **Automatic Single Color**Mode 3: **Rainbow**Mode 4: **Lights Off**

Brightness Adjustment

Press and hold the **Light** button for **1s** to start adjusting the brightness: 40%-70%-100% (Controller will vibrate)

Lights Off

After switching the lights to **Rainbow Mode**, double press the **Light** button to turn off the lights.

Turbo T

Buttons can be set

A / B / X / Y / L / ZL / R / ZR / D-Pad / M1 / M2 / L4 / R4.

Setting

Hold the **Turbo** button and press the button that you want to set to turn on the turbo function. (Controller will vibrate)

Cancel

Method A: Hold the **Turbo** button and press the button that you have set to turn off its turbo function. (Controller will vibrate)Method B: Hold the **Turbo** button for **4s** to cancel the Turbo function of all buttons.(Controller will vibrate)

Vibration Adjustment

Press the **Motor** button **once** to change the vibration of controller successively.(Controller will vibrate)

Levels of vibration intensity: 0%, 50%, 100%.



doyokygame



DOYOKY Game



Website: www.doyoky.com



Customer: service@doyoky.com

Business: contact@doyoky.com



Join our community