 
 


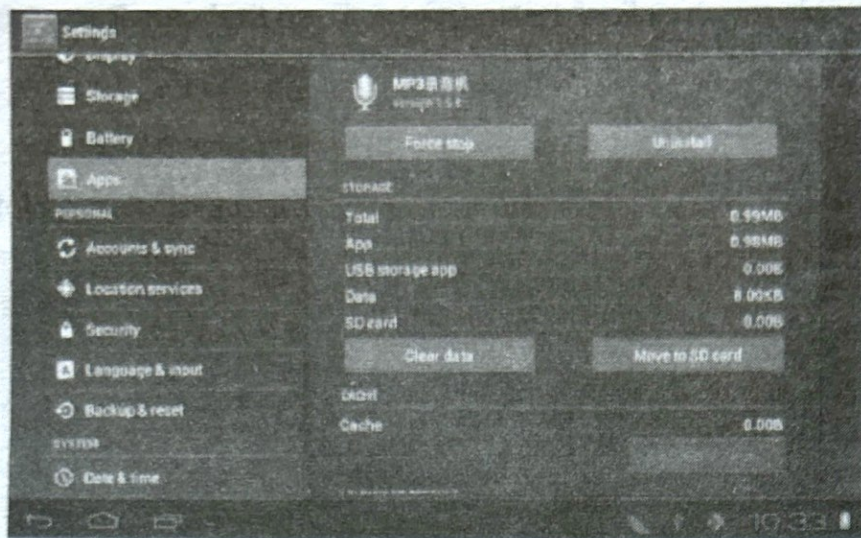


4.3 Privacy

Factory data reset

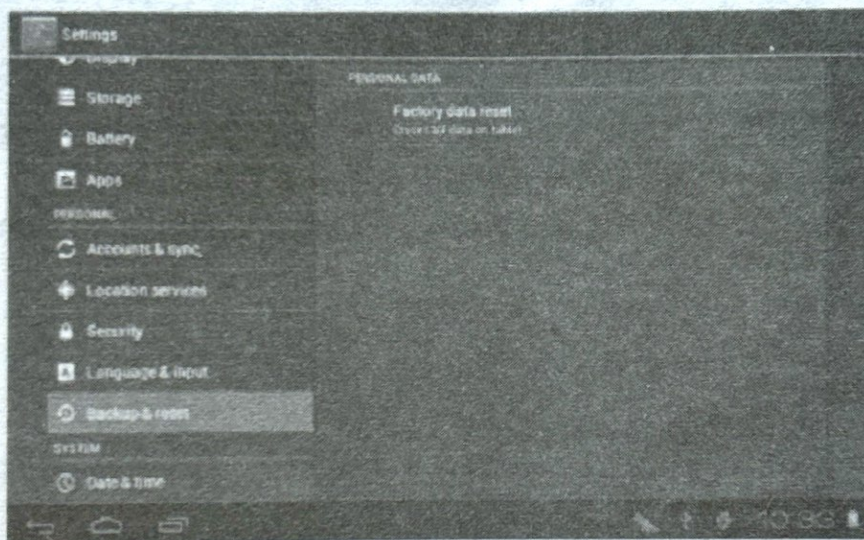

4.4 Storage

 
Remove TF card, view of the available storage space

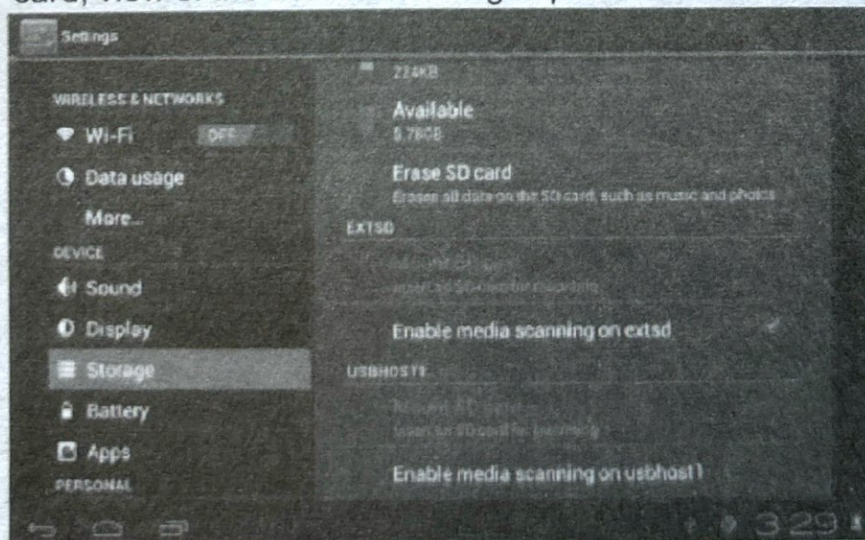

【Remark】: pls touch option "delete SD card", so that can safety to remove SD card

4.5. Language & keyboard

 Setting: (Language), text input and automatic error correction options;

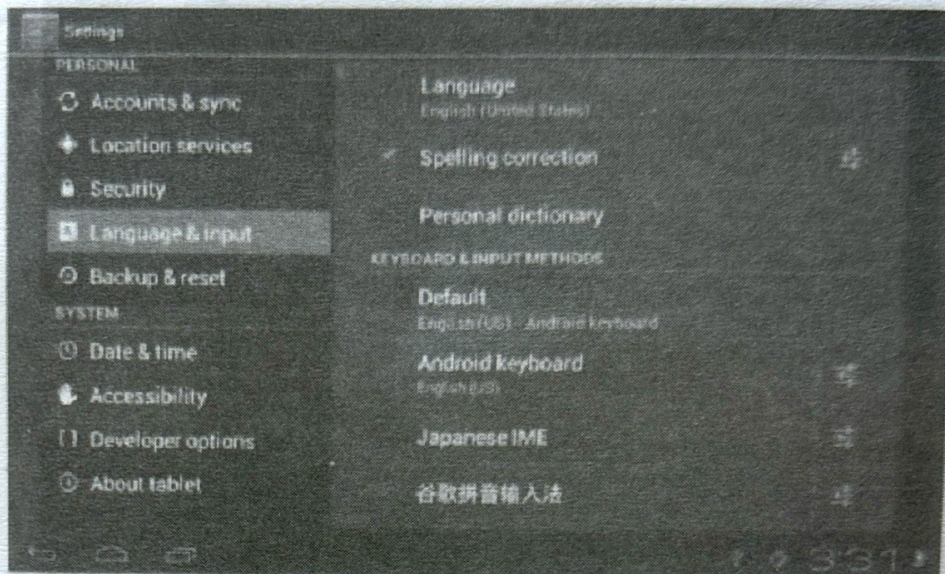

Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now manu interface just suport 14 language,

Android keyboard: Android keyboard setting

Sound on Key-press

 
Auto-capitalisation

Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert highlighted word


4.6. Date & time setting

Set date, set time, Select time zone and select date format

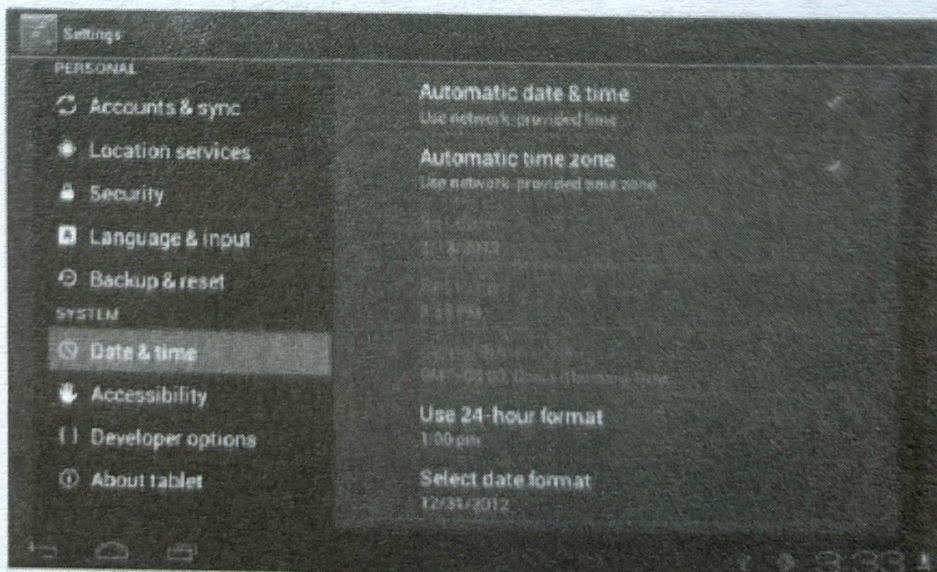


4.7 Developer options

 Choose USB work pattern: OTG/HOST/SLAVE.....

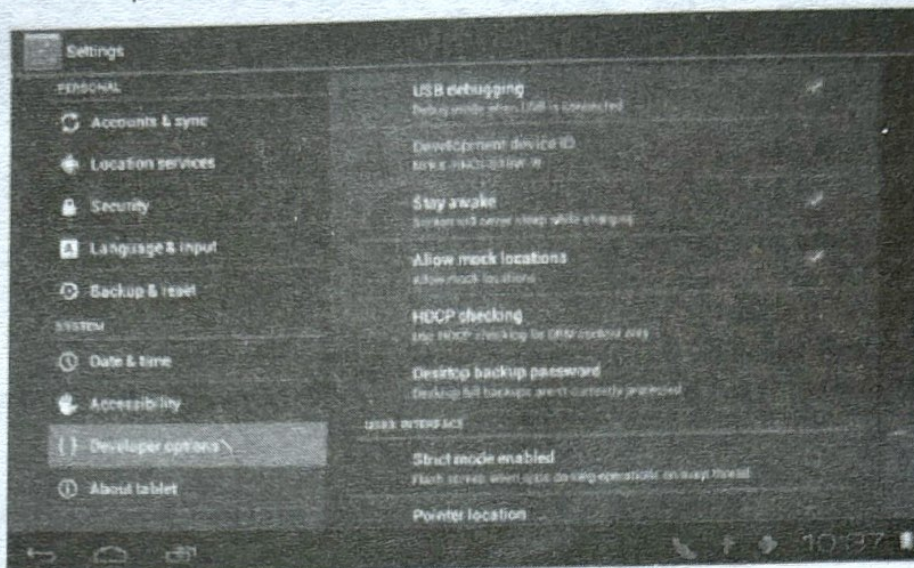

 4.8 About tablet

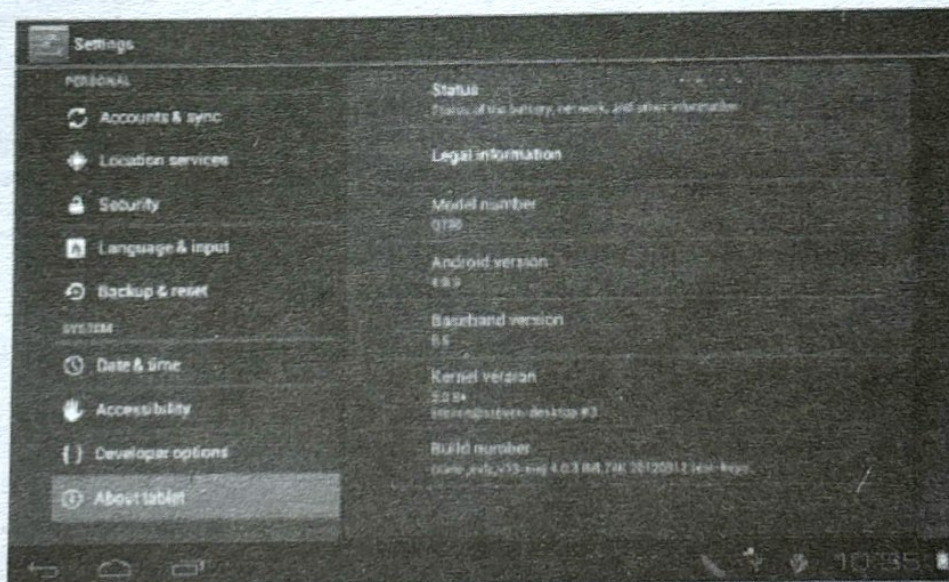

5. Apps Install and manage

5.1 App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click Appinstaller icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory card,downloaded 3rd party app may not install properly on device.

Manage: click manage, enter third party interface
Click install icon, will enter Action interface

6. Problem solution

6.1 Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contact with the supplier

6.2 After startup the screen or the opening picture has been appear , the the device appear shutdown

1. Power is not enough, please charge
- Headset can't hear the voice
2. Pls check the volume whether set to 0
 3. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

6.3 Can copy file or play music and so on

1. Pls check between computer and device is correct connection
2. check the memory storage space is already full
3. check the USB cable is good or not
4. USB connection is disconnected

Keep the card for
guarantenn
to keep repair

Guarantee


User File

User name		Sex		Age	
Address					
Telepone			Zip		
purchasing address					
Retail price			Odd Numbers		
commodity name and specification			Model NO		
Dealer signature			User signature		

Guarantee Item

 1. 1 months upon date of purchase, if there is function problem, we should. we should offer the same item
subjec to goods and packing maintain perfect
2. 1 year upon date of purchase, we will guarantee to keep the goods in repair. (not including fittings)
3. Guarantee service is subject to normally using
4. All of damage dy man-made (tear open the housing, tear off the sticker, unnormally using), or losing
this card ,we will not guarantee.



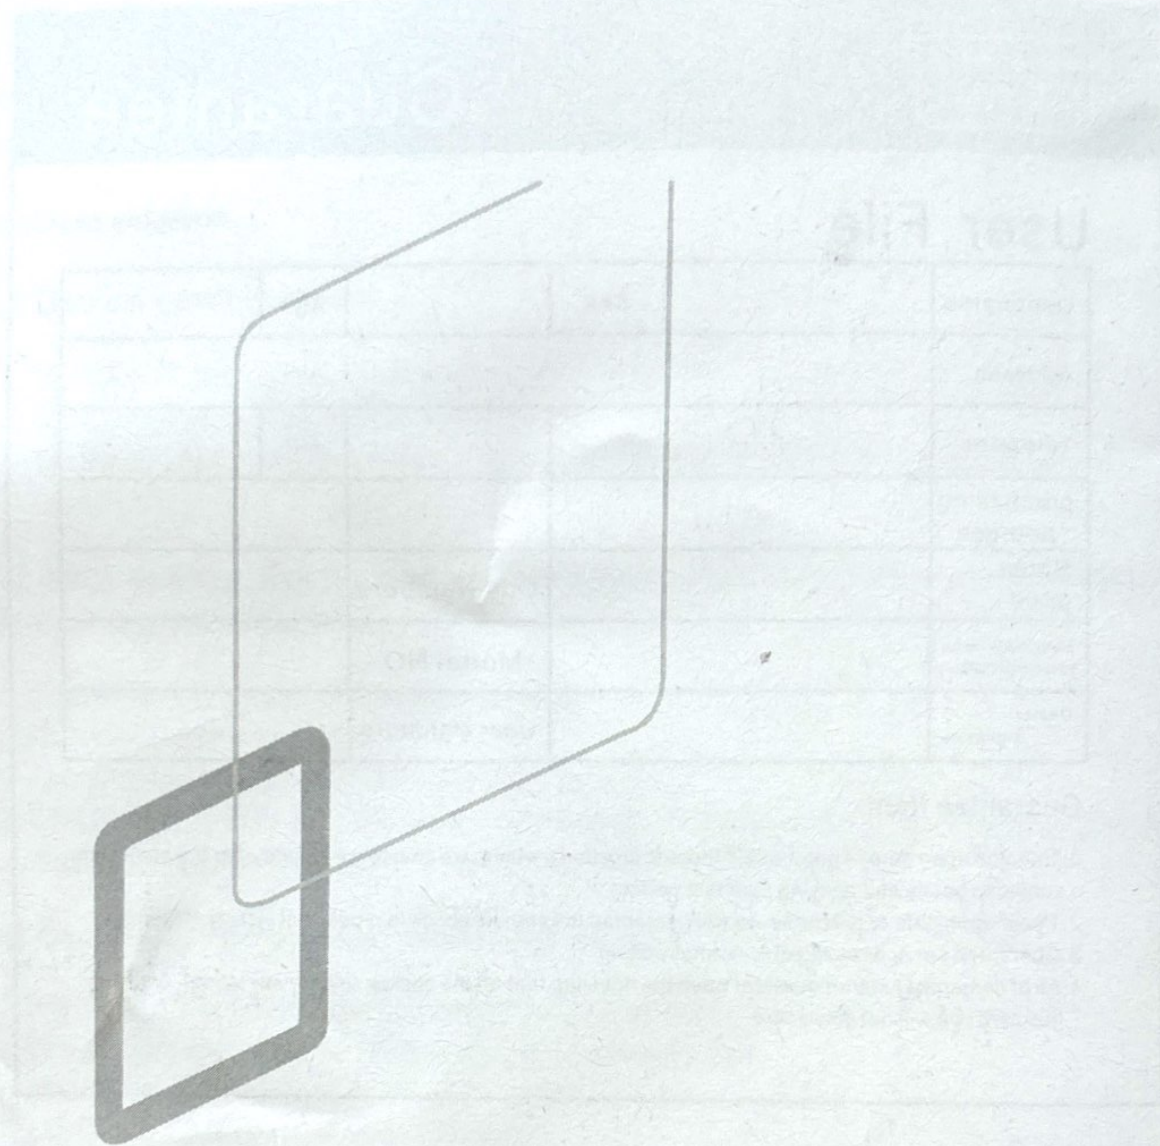

The company reserves the right to vary the product design
Product pictures and content are for reference only,
and specifications of the right, then without prior notice,
specifications appearance please to sales kind prevail.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harm full interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.