
Before using this product, please read the product manual carefully.

Thank you for purchasing and using this product. For your safety and benefit, please read the product manual carefully before using the product, and please keep it properly along with the invoice after reading.

Our company reserves the right to interpret the manual. In case of product technology or software upgrade, we will no longer notify. The product appearance is subject to the actual product, and this product is suitable for sales in Europe, the United States, Japan and so on.

About this product guide

Users should pay attention to important information related to the operation and maintenance of this machine, and should carefully read such information to avoid problems.

Following the following safety precautions will increase the service life of this machine. In addition to what is mentioned in this manual, please consult a person with relevant qualifications for installation and maintenance services, and do not use damaged wires, accessories and other peripheral equipment.

Non-professionals are prohibited from dismantling and repairing the projector of this equipment by themselves. Replacing wrong model accessories and batteries may cause equipment anomalies or explosion hazards. Be sure to detect and repair through official channels.

Important Notes/How to Use the Device Correctly

•Do not point the lens towards the human eye to avoid strong light from the lens causing damage to the eyes after startup.

•Do not block the air inlets and outlets of the device to avoid normal heat dissipation of the device causing damage to the internal electronic components.

•Do not use chemicals or cleaning agents directly to wipe the lens. Before wiping, use a blow ball to blow off large particles attached to the lens surface to avoid scratching the lens when wiping. Then use an optical lens paper or a dust-free wipe cloth dipped in 95% or more alcohol cleaning liquid to wipe the lens from the center outwards in a circular motion to avoid leaving water marks on the lens surface during the wiping process.

•Do not use chemicals, cleaning agents or water to clean the device, and avoid rainfall, moisture and liquids containing minerals corroding the circuit board.

Keep the device and its components and accessories out of reach of children.

Ensure that the device is used in a dry and ventilated environment.

•Do not store the device in places that are too hot or too cold, high (low) temperature will shorten the life of the electronic components. The allowed storage and use environment for the device is 0°C~35°C.

•Do not put the device in any heating device (such as a dryer, microwave, etc.) for drying.

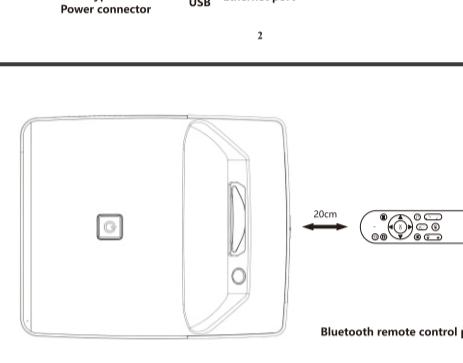
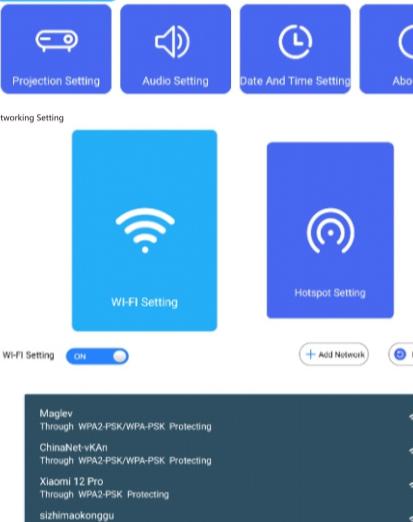
•Do not squeeze the device or place obstacles above or behind it, especially the lens glass part, to avoid damaging the device.

•Do not knock, knock or vibrate the device strongly, causing damage to the internal circuit board.

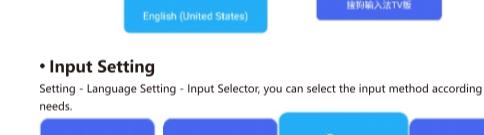
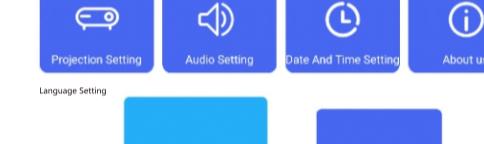
•Do not attempt to disassemble the device privately. If there are any problems, please contact after-sales service.

•Do not repair any product privately. If the device or any component does not work properly, consult after-sales service or return it to the factory for repair in a timely manner.

⚠Warning: Operation of this product in a residential environment may cause radio interference.

Accessory List

Projector Overview


Serial No.	Part/Functional	Description
1	Lens	Project the image through the window of projecting light.
2	Power button	Red light when in standby. Green light when device starts up; Off when device works normally. Blue light when in touch mode.
3	Touch camera	Capture the position of the touching finger, no shooting function



①Please keep the distance between the remote control and the projector > 20m. At the same time, press the home and button on the remote control to turn on the Bluetooth of the remote control and pair it with the projector. When the Bluetooth is paired and connected, the Bluetooth light on the remote control will indicate a linking status.

②If the pairing is not successful, time out for 30 seconds to exit. After exiting, follow the steps above to re-pair.

③Description of the remote control keys

④Description of the remote control keys

Serial No.	Keys	Functional Description
1	Power	Long press to turn off; short press to select shutdown/restart/Bluetooth/standby mode.
2	Signal source	Enter the signal source
3	Menu	Enter the menu interface
4	Home	Enter the home menu interface
5	Navigator	Move up, down, left, and right in the menu or option
6	Confirmation	Confirm selection/play or pause function
7	Return	Return to the previous menu or exit the menu
8	Touch	Turn on/off the touch function
9	Volume	Adjust the volume increase/decrease
10	Focus	Manually control the focus
11	Mute	Adjust the volume increase/decrease

⑤Description of the remote control keys

⑥Description of the remote control keys

⑦Description of the remote control keys

⑧Description of the remote control keys

⑨Description of the remote control keys

⑩Description of the remote control keys

⑪Description of the remote control keys

⑫Description of the remote control keys

⑬Description of the remote control keys

⑭Description of the remote control keys

⑮Description of the remote control keys

⑯Description of the remote control keys

⑰Description of the remote control keys

⑱Description of the remote control keys

⑲Description of the remote control keys

⑳Description of the remote control keys