
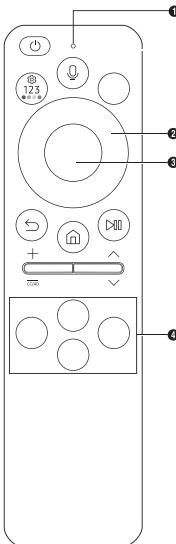


# 210x138mm

## SMART VOICE&SOLARCELL REMOTE USER MANUAL

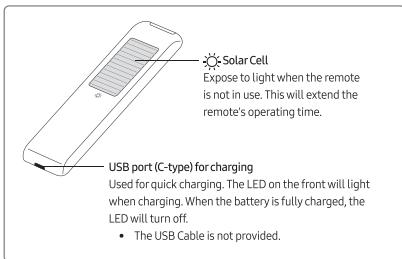

### Fire or explosion may occur, resulting in damage to the remote control or personal injury.

- Do not apply shock to the remote control.
- Be careful not to let foreign substances such as metal, liquid, or dust come in contact with the charging terminal of the remote control.
- When the remote control is damaged or you smell smoke or burning fumes, immediately stop operation and then repair it at the service centre.
- Do not arbitrarily disassemble the remote control.
- Be careful not to let infants or pets suck or bite the remote control. Fire or explosion may occur, resulting in damage to the remote control or personal injury.
- If the remote control battery is low, please charge it as soon as possible. After the prompt of low power, if you continue to use for a long time and empty the capacitor, there is a certain probability that you will not be able to charge later.
- How to determine whether it is low power:  
1. displayed on the TV screen.      2. the front LED long bright and does not blink when in use.

Button	Description
① (Power)	Press to turn the TV on or off. For The Frame model, When watching TV, press to switch to Art mode. In Art mode, press to switch to the Home screen. Press and hold to turn off the TV completely.
① MIC / LED	Used as MIC when using voice recognition with the remote control. <ul style="list-style-type: none"> <li>• Do not impact the MIC hole or use a sharp object to poke into the hole.</li> </ul>
② (Bixby)	Runs Bixby. Press and hold the button, say a command, and then release the button to run Bixby. When you press the button, the Explore Now menu appears at the bottom of the screen. <ul style="list-style-type: none"> <li>• The supported Bixby's languages and features may differ by geographical area.</li> </ul>
③ (Settings / Number / Colour button)	You can access Settings menu / virtual numeric pad / Colour buttons / Option pad / SmartThings app directly. <ul style="list-style-type: none"> <li>• Accessing the SmartThings app using this button may not be supported, depending on the model.</li> <li>• Use this button to access additional options that are specific to the feature in use.</li> <li>• Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select Done or Enter Number to enter a numeric value. Use to change the channel, enter a PIN, ZIP code and etc.</li> </ul>
② Directional button (up, down, left, right)	Moves the focus and changes the values seen on the TV's menu.
③ Select	Selects or runs a focused item. When pressed while you are watching a broadcast programme, detailed programme information appears.
④ (Return)	Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a programme, the previous channel appears.
⑤ (Smart Hub)	Press to switch to the Home Screen.
⑥ (Play/pause)	When pressed, the playback controls appear. Using these controls, you can control the media content that is playing. To use Game Bar, press and hold the button in Game Mode. <ul style="list-style-type: none"> <li>• Game Bar may not be supported depending on the model or geographical area.</li> </ul>
⑦ + / - (Volume)	Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 2 seconds or more, the Accessibility Shortcuts appears. <ul style="list-style-type: none"> <li>•  may not be present, depending on the model.</li> </ul>
⑧ ^ / v (Channel)	Move the button up or down to change the channel. To see the Guide screen, press the button. <ul style="list-style-type: none"> <li>• When pressed for 1 second or more, the Channel List screen appears.</li> </ul>
⑨ Launch app button	Press each button to run its function. <ul style="list-style-type: none"> <li>• Available apps may differ depending on the geographical area or contents provider.</li> </ul>
⑩ + (Pairing)	If the Smart Remote does not pair to the TV automatically, point it at the front of the TV, and then press and hold the  and  buttons simultaneously for 3 seconds or more. <ul style="list-style-type: none"> <li>• The Smart Remote can only be paired to one TV at a time.</li> </ul>
<ul style="list-style-type: none"> <li>– Use the Smart Remote less than 6 m from the TV. The usable distance may vary with the wireless environmental conditions.</li> <li>– The images, buttons, and functions of the Smart Remote may differ with the model or geographical area.</li> <li>– The Universal Remote function operates normally only when you use the Smart Remote that comes with the TV.</li> <li>– It is recommended to use an original charger. Otherwise, it may cause performance degradation or failure of the product. In this case, the warranty service is not applicable.</li> <li>– When the remote control does not work due to low battery, charge it by using the USB-C type port.</li> <li>– If the orientation of the remote control is incorrect, some TV models may display an alert asking users to hold it correctly. To turn off the alert, access Remote Grip Sensor (  (left directional button)  Settings &gt; All Settings &gt; General &amp; Privacy &gt; Power and Energy Saving &gt; Remote Grip Sensor)</li> </ul>	

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction