



User Instruction

Thank you for choosing our R/C toy. To ensure correct and safe operations, please read through the following instructions before use.

CAUTION:

ELECTRICALLY OPERATED PRODUCT

Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

ADULT SUPERVISION REQUIRED

Warning: Changes or modification to this unit without expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Contents: Vehicle x1 Transmitter x1 USB charge cable x1

Rechargeable battery pack x1

How to recharge the battery pack

1. The new 7.4V lithium battery pack is Not charged prior to shipping.
2. First insert the joint of the battery pack in the USB cable joint, then plug the USB cable into a standard indoor electrical outlet with USB port, such as the socket with USB port, smartphone adapter, computer or laptop.
3. The USB plug have a LED light , when the LED light starts blinking it shows it is charging, once the light is off, the battery are fully charged. If the LED light blinking very fast that means the charging process has issue.
4. For socket with USB port & smartphone adapter charging requires 4 hours. For computer and laptop charging requires 6.5 hours. Do not over charge the battery pack. Charging the battery pack for a long period will not increase battery life.
5. Regularly examine the battery and the USB cable for damage to the cord, plug, enclosure and other parts. In the event of damage, do not use until it has been repaired.

Charging methods



Desktop Computer

Laptop




Smartphone Adapter



Game Consoles

Transmitter and Vehicle operation

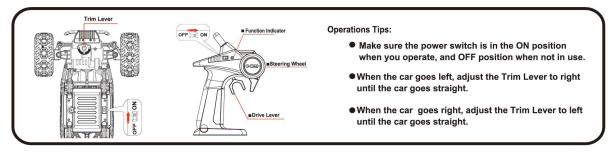


Operations Tips:

- Make sure the power switch is in the ON position when you operate, and OFF position when not in use.
- When the car goes left, adjust the Trim Lever to right until the car goes straight.
- When the car goes right, adjust the Trim Lever to left until the car goes straight.

How to install batteries- Transmitter and Vehicle

1. Open the battery cover with the snap.(See picture 1)
2. Install two AA batteries with polarity(+/-) as shown inside battery compartment.(See picture 2)
3. Install rechargeable battery pack inside the battery compartment.(See picture 3)
4. Close the battery cover with the snap.

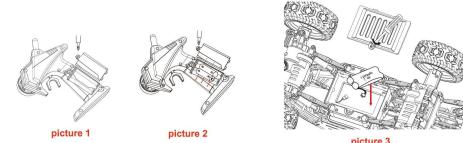

How to play

1. Install the rechargeable battery inside the battery compartment underneath the chassis , with observing polarity. Fit back the cover.
2. Insert AA battery inside the transmitter.
3. Switch on the car with the ON/OFF switch. Then switch on the transmitter, the LED light will flash rhythmically. After a few seconds, the LED light on the transmitter will stop flashing, meaning communication between the car and the transmitter has been established.
4. When the car does not run in a straight line, adjust the trim lever located beneath the chassis.
5. When the light in the transmitter begins to dim, it may be time to replace the AA battery.
6. When your R/C model car begins to lose performance, power or function, it may be time to recharge the rechargeable battery.

Battery Safety Information

1. Don't short circuit terminals.
2. Don't recharge non-rechargeable batteries.
3. Rechargeable batteries may only be charged under the supervision of an adult.
4. Remove all batteries if vehicle will not be used for a long period of time.
5. Dispose of batteries safely. Don't dispose of batteries in fire as they may explode.
6. Regularly examine the battery and the USB cable for damage to the cord, plug, enclosure and other parts. In the event of damage, do not use until it has been repaired.
7. Recharged batteries are to be removed from the toy.
8. Keep the toy in a cool place for future reference : they contain important information.
9. Packing has to be kept since it contains important information.
10. Rechargeable batteries are to be removed from the toy before being charged.
11. Do not mix old and new batteries.
12. Do not mix alkaline batteries,standard (carbon-zinc) or rechargeable batteries.

Care and Maintenance

1. Always remove batteries from the toy when it is not being used for a long period of time.
2. Wipe the toy gently with a clean damp cloth.
3. Keep the toy away from direct sunlight and/or direct heat.
4. Do not submerge the toy into water that can damage the electronic assemblies.

Remark

1. Please do not turn on two machines at the same time, otherwise the code will detect at the same channel.
2. If you want to play one more car at the same time, please refer "How to play" and do the detect one by one.
3. This toy is only to be connected to equipment bearing either of the following symbols:

© Guang Dong Xin Yu Technology Industrial Co., LTD
For more information, visit www.xq-toys.com
Made in China



105022791

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver,
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause Harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Frequency band:2405MHz~2475MHz

The maximum RF Power: 2.82 dBm

Hereby, [GuangDong XinYu Technology Industrial Co.,Ltd], declares that this [4076] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.
86-754-85513333 Liang@xq-toys.com