

# Structure Description

## PACKING LIST



## System Diagram



\*\* Make sure that there are no objects between the Main Unit and the Wireless Controller

1. Plug the charger into an electrical socket or insert USB cable into existing charger.
2. Insert the HDMI cable into the corresponding port on the console, then into the HDMI port on your TV, and turn on the TV.
3. Press the "Signal Source" button on the TV remote control to set the corresponding HDMI channel connected. For example, the connection interface is "HDMI 1" and the TV signal source is adjusted to "HDMI 1".
4. Don't use USB port of television to make power supply. It may cause the controllers not to work normally.

## How to play motion game



Fishing



Archery



Super Miners



Catch Loach



SUDOKU



GOBANG



JACK OR EGGS



DREAM OF GEMS

The player can freely choose the role: the player needs to catch multiple fish and score points within the specified time: after the end, the score exceeds the opponent to be the winner: after the fish is hooked, follow the prompts towing the handle to pull the line, and the player should pay attention to the speed during the process of pulling the line to avoid the fish Disconnected and disconnected.

Single/double mode:  
"START" to enter the game;  
"SELECT" to pause/exit;  
"A" key to confirm;  
"B" key to cancel/return;  
Up, down, et, and right options: hold the handle vertically: in the game: swing the handle to throw the line : After lifting the hook, swing the handle to take up the line;Press "R" to back main menu in any situation

Players need to bid and score within the specified time: after the end, the score exceeds the opponent to be the winner: after the benchmark moves, the player needs to swing the handle to shoot the gun, and the player must pay attention to the speed of the benchmark move during the bidding process to avoid missed shots;

Single/double mode:  
"START" to enter the game;"SELECT" to pause/exit;  
"A" key to confirm;  
"B" key to cancel/return;  
up, down, left, and right options: in the game: the left and right keys can control the direction : Waving the handle to bid the gun;Press "R" to back main menu in any situation

Players can freely choose single and double mode: in the game, the pass type is adopted, and the pass score increases incrementally. The player needs to get the specified score within a limited time to pass the level; in the game, the arm claw is launched at the appropriate position when swinging Get ore with arm claws: in the two-player mode,it is a cooperative combat breakthrough;

Single/double mode:  
"START" to enter the game;  
"SELECT" to pause/exit;  
"A" key to confirm;  
"B" key to return;

Up, down, left, and right options: hold the handle vertically: in the game: swing the handle to launch the arm claw/shrink Arm claw;Press "R" to back main menu in any situation

After the game starts, the player has to catch more loach within a limited time:, when the loach is exposed, quickly grab the loach and put it in the basket. Note that the tighter the grasp, the easier it is to escape: the winner will be the winner after the time is over

Single/double mode;START" to enter the game;"SELECT" to pause/exit;"A" key to confirm;  
"B" key to cancel/return;Up, down, left and right button options: vertical grip handle; in the game: swing the handle to catch the loach;Press "R" to back main menu in any situation

The game level is divided into three modes:simple,medium, and difficult: players can freely choose single and double mode; they can choose whether to open or not prompt according to their preferences;each row/column cannot have the same 2 numbers appear;the numbers are from 1-9 composition; in the two-player mode, it is a cooperative combat breakthrough;

Single/double mode:  
"START" to enter the game;  
"SELECT" to pause/exit;  
"A" key to confirm;  
"B" key to return;

Up,down, left, and right button options:horizontal grip handle;in the game:up,down,lef, and right buttons to control the direction; A" key to play chess  
Press "R" to back main menu in any situation

Both sides use black and white chess pieces, and the game is opened with an empty chessboard the black is played first, and the white chess is played second.Only one piece can be placed at a time.The first five pieces of the same color are formed in the horizontal,vertical and diagonal directions of the chessboard. The side that wins. If there is no winner or loser it will be a tie. The five consecutive matches and the bar are formed at the same time.

Single/double mode:  
"START" to enter the game;  
"SELECT" to pause/exit;  
"A" key to confirm;

"B" key to return;  
Up,down, left, and right button options:horizontal grip handle;in the game:up,down,lef, and right buttons to control the direction; A" key to play chess  
Press "R" to back main menu in any situation

Players can freely choose the single or double mode: in the game the pass type is adopted, and the score of the pass is increased incrementally, and the score of the previous level can be accumulated to the next level; the player needs to get the specified score within the limited life value to pass the level. During the game there will be bad eggs from time to time players need to pay attention to avoiding; in the two-player mode,it is a cooperative battle through the barriers;

Single/double mode:  
"START" to enter the game;  
"SELECT" to pause/exit;  
"A" key to confirm;

"B" key to return;  
Up,down, left, and right button options:horizontal grip handle;in the game:up,down,lef, and right buttons to control the direction; A" key to play chess  
Press "R" to back main menu in any situation

Players can freely choose the single or double mode; in the game the pass type is adopted. Players need to put the gems of the same color together, and 3 or more can be eliminated in a group until the score exceeds or equals the target score to pass the level. In the two-player mode,it is a coordinated combat to break through;

Single/double mode:  
"START" to enter the game;  
"SELECT" to pause/exit;

"A" key to confirm;  
"B" key to return;  
Up,down, left, and right options:horizontal grip handle; in the game: left and right keys to control the direction;"A" key down quickly;  
Press "R" to back main menu in any situation

More game play is similar, let's explore with the kids!



AAA Type Batteries x 2 Pcs  
Please remove the batteries if long time no play

①Calibration Keys ②On/Off



1. Load two No. 7 batteries
2. Switch On/Off
3. Aim the gun at the center of the screen while holding down the calibration button
4. Select the game and pull the trigger to start the game

Note: If your center of aim is not in the center of the screen, you can calibrate it by pressing and holding the button in Figure 1.

①Calibration Keys



A:

If you lose your aim or move slowly during the game , you can long press the calibration button and aim at the center of the screen to calibrate again in time.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is

subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.