

THE KIZMAH LAMP

Quick Start

1. Unwrap acrylic and place into LED slot on top of unit.
2. Fill tank with up to 120mL of water, not exceeding the max fill line.
3. Add a few drops of your favorite essential oil to the tank and close lid.
4. Plug unit to power and turn on unit, and enjoy!

Kizmah, LLC donates a portion of proceeds to various charities.

Thank you for your support!

Maintenance/Care

1. Unplug unit before cleaning.
 2. Do NOT immerse the diffuser in water.
 3. Do NOT put water into the air outlet; it may cause damage to the unit.
 4. Do NOT fill the water tank directly from the water tap.
 5. Do not remove the tank lid of the diffuser when it is in use.
 6. Replace water and clean tank frequently to prevent buildup. Any buildup will diminish the amount of mist produced by unit.
3. Condensation will occur on the acrylic design over time, use included polishing cloth to wipe off as needed.

Unit specifications:

Charging interface: Type-C interface
Current and voltage: 5V/3A
Built-in water tank capacity: 120ML
Bluetooth version: 5.0
Speaker power and parameters: 3Ω4W, 16-core internal dual magnetic
Aromatherapy fan: 5V low speed mute
Aromatherapy atomizer: high frequency waterproof.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



contact us

+ (1) 773-360-8670

2044 West Chicago Avenue, Chicago, IL

60622

kizmah.llc@gmail.com

www.kizmah.com



holistic wellness lamp

instruction manual

On/Off and Bluetooth Power

Short press once:

Turns on Bluetooth Automatic search state for 5 minutes. The light the light will intermittently flash in blue until a successful connection is established, after which it will consistently display a steady blue glow.

Short press twice to force Bluetooth search.

Long Press (2.5 sec):

Power down the light, deactivate Bluetooth, disable the spray function, and enter shutdown mode.

Last Song/Volume Down

Short press once:

Switch to previous song.

Long Press: Play last song.

Long Press (2.5 sec):

Volume down.

Diffuser Switch

Short press once:

Continuous diffusing of mist. The green light indicator will be steadily on.

Second Short press:

Intermittent diffusing of mist. The green light indicator blinks intermittently.

Third Short press:

Continuous diffusing of mist for one hour. The green light indicator will blink twice.

Long Press (2.5 sec):

Power down the mist diffuser in any of the above settings.

Water Tank

Unplug unit before adding

water. Add clean water to the water tank without exceeding the maximum waterline. DO NOT refill while the diffuser is in operation. DO NOT open lid while unit is on. DO NOT use hot water or mineral water.

Air Outlet

Warning:

The air outlet must remain free of water as this is the area that establishes the effect of mist dispersion. If water is spilled into the air outlet, this may cause damage to the diffuser and prevent it from functioning properly. If a small amount of water accidentally spills into the diffuser air outlet please unplug and turn the power off immediately. Let the diffuser body (without top lid) air dry for more than 24 hours before turning it back on.

Light Switch

Color Settings:

1. Multicolor


a. Cycles through all colors - press once to select a particular shade.

2. Sunset

a. This setting will activate the motion Sensor. After 30 minutes it will turn off and if motion is detected, it will turn back on for 30 minutes.

3. Bright White/Color

a. Each color setting has a Bright setting, and a Dim setting. Red - Blue - Yellow - Green - Orange - Purple can be selected as well.

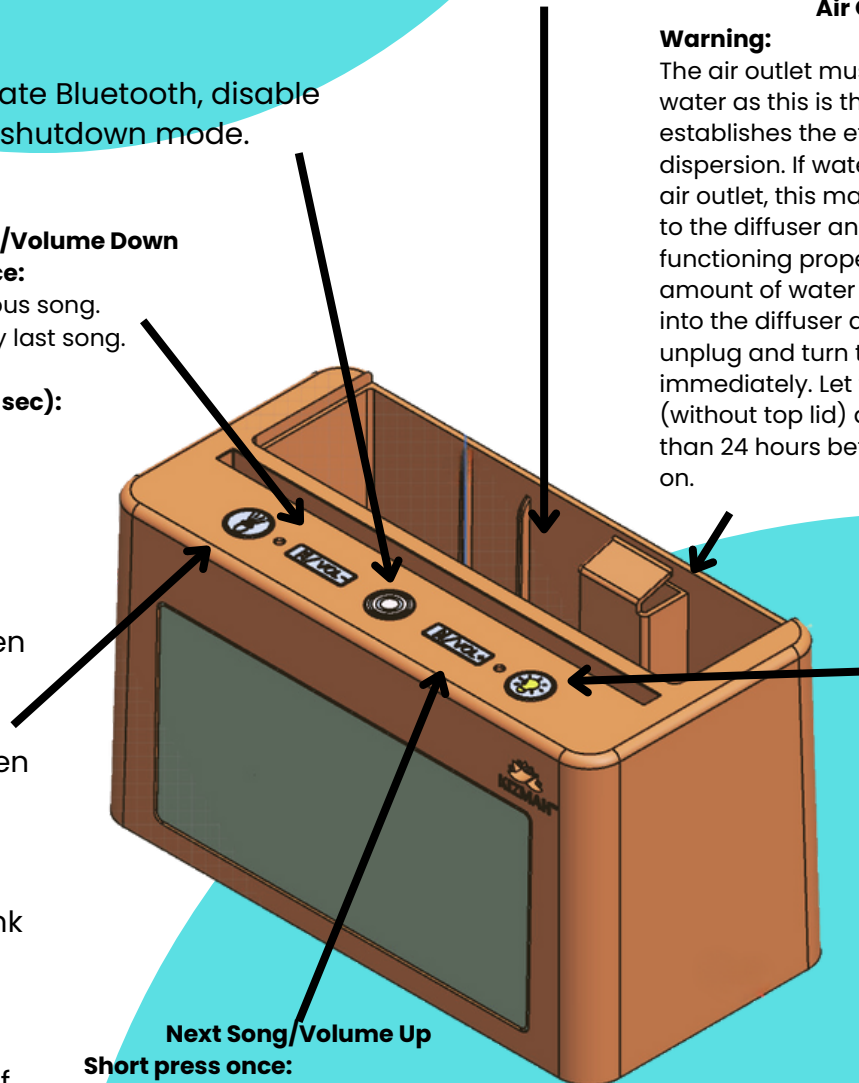

WARNING:

RISK OF ELECTRICAL SHOCK AND/OR FIRE

Do not modify this product.

Do not submerge unit underwater.

Disconnect unit from power before re-filling or cleaning tank.

Do not leave this product on and unattended for extended periods of time.

Not intended for children under the age of 13.

Adult supervision is HIGHLY recommended.