

VI. Troubleshooting

No.	Symptom	Solution
1	No action after pressing the buttons of transmitter.	Check power connection or program setting.
2	LED light on transmitter is weak or even die out.	Please check the battery inside transmitter and make sure the right battery installation or change new battery.
3	LED light on transmitter, heater does not work.	Please check heater wiring and make sure correct connection.

WARN

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.