



Product Overview

Function Keys

Power button and Mode Key:

Long press to turn on the device. By default, it starts in white noise mode. Tap once to switch to Bluetooth mode. Long press again to turn off the device. (The light turns on automatically when the device is powered on.)

Light Settings Key:

Light Settings: After turning on the device, tap once to switch between light modes. First mode: Constant white light. Second mode: Single-color gradient. Third mode: Multi-color gradient. Fourth mode: Light off.

Volume Adjustment Key / Track Switching Key:

Increase Volume: Long press to increase volume. A prompt sound will play when the maximum volume is reached. Next Track: Short press to switch to the next track.

Volume Adjustment Key / Track Switching Key:

Decrease Volume: Long press to decrease volume. Short press to switch to the previous track.

White Noise Mode: By default, the device starts in white noise mode after turning on. The first track is ocean waves, the second track is campfire sounds, the third track is bird chirping, and the fourth track is stream water.

Bluetooth Mode: To activate Bluetooth mode, turn on your phone's Bluetooth and search for the pairing name: **White noise speaker 01**. Tap to connect.

TF Card Mode: After turning on the device, insert a TF card into the TF card slot on the back of the device, and it will automatically play songs from the TF card.

AUX Mode: After turning on the device, connect an audio device using a 3.5mm audio cable to play music from the audio device.

Function Key Explanation

Power button and Mode Key:

Long press to turn on the device. By default, it starts in white noise mode. Tap once to switch to Bluetooth mode. Long press again to turn off the device. (The light turns on automatically when the device is powered on.)

Light Settings Key:

Light Settings: After turning on the device, tap once to switch between light modes. First mode: Constant white light. Second mode: Single-color gradient. Third mode: Multi-color gradient. Fourth mode: Light off.

Volume Adjustment Key / Track Switching Key:

Increase Volume: Long press to increase volume. A prompt sound will play when the maximum volume is reached. Next Track: Short press to switch to the next track.

Volume Adjustment Key / Track Switching Key:

Decrease Volume: Long press to decrease volume. Short press to switch to the previous track.

White Noise Mode: By default, the device starts in white noise mode after turning on. The first track is ocean waves, the second track is campfire sounds, the third track is bird chirping, and the fourth track is stream water.

Bluetooth Mode: To activate Bluetooth mode, turn on your phone's Bluetooth and search for the pairing name: **White noise speaker 01**. Tap to connect.

TF Card Mode: After turning on the device, insert a TF card into the TF card slot on the back of the device, and it will automatically play songs from the TF card.

AUX Mode: After turning on the device, connect an audio device using a 3.5mm audio cable to play music from the audio device.

Projection Light Feature

Power button and Mode Key:

Long press to turn on the device. By default, it starts in white noise mode. Tap once to switch to Bluetooth mode. Long press again to turn off the device. (The light turns on automatically when the device is powered on.)

Light Settings Key:

Light Settings: After turning on the device, tap once to switch between light modes. First mode: Constant white light. Second mode: Single-color gradient. Third mode: Multi-color gradient. Fourth mode: Light off.

Volume Adjustment Key / Track Switching Key:

Increase Volume: Long press to increase volume. A prompt sound will play when the maximum volume is reached. Next Track: Short press to switch to the next track.

Volume Adjustment Key / Track Switching Key:

Decrease Volume: Long press to decrease volume. Short press to switch to the previous track.

White Noise Mode: By default, the device starts in white noise mode after turning on. The first track is ocean waves, the second track is campfire sounds, the third track is bird chirping, and the fourth track is stream water.

Bluetooth Mode: To activate Bluetooth mode, turn on your phone's Bluetooth and search for the pairing name: **White noise speaker 01**. Tap to connect.

TF Card Mode: After turning on the device, insert a TF card into the TF card slot on the back of the device, and it will automatically play songs from the TF card.

AUX Mode: After turning on the device, connect an audio device using a 3.5mm audio cable to play music from the audio device.

Charging Indicator Light:

Red when charging, and the light turns off when fully charged.

Parameter description

Product name: White noise speaker 01

Product dimension: 187X130X59mm Model : KW01

Packing dimensions: 194X138X62mm

Battery capacity: 1500mAh

Product weight: 450g

Service time: 4-6h

Loudspeaker :40mmQ5W

Charging time : 2-3h

Input voltage: 5V±1A

Output power : 5W

Frequency response: 80HZ-20KHZ

Receiving distance: Below10M

Executive standard : GB4943.1-2022

Bluetooth version : 5.4

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2BF2Q-KW01

Troubleshooting

Multiple Connection Attempts Fail

Turn off the speaker and your phone's Bluetooth, then restart the speaker and ensure the pairing name is: **White noise speaker 01**.

Music Playback Interruptions

a. Check if the connection distance exceeds the range or if there are obstacles between the speaker and your phone.

b. Ensure your phone's network is stable and the speaker's battery is not low.

No Sound During Playback

Check if the speaker's volume is set to the minimum.

Unable to Power On

When the device has been used for a long time and the battery is nearly depleted (all functions have automatically shut off), plug in the charging cable and charge for 2 hours before trying again.

Charging Instructions

a. Use the standard power adapter or one with equivalent specifications to charge the device.

b. When using the product, charge it promptly if the battery is low or nearly depleted.

c. Do not use the device in high-temperature or high-pressure environments.

d. If the device is not used for a long period, it is recommended to charge it once a month to ensure the battery remains fully charged and the device functions properly.

Packing accessories

SpeakerX1

Data cable X1

ManualX1