


White noise speaker

KW03



Product Overview

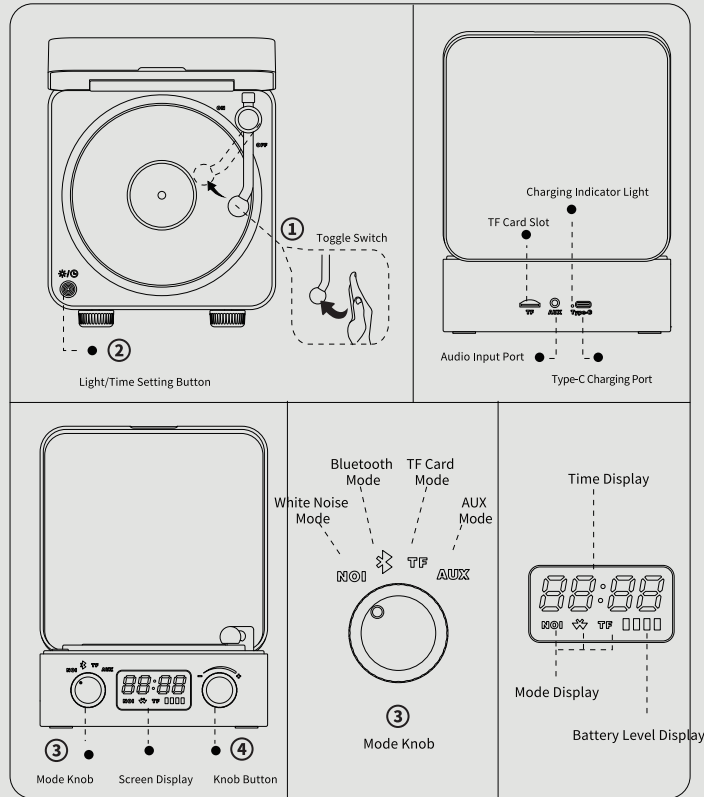

Function Key Explanation

Power button: ①

Power button: Turn the lever to the left (①) to power on, and to the right (①) to power off. (Powering on automatically activates a single light mode.)

Light/Time Setting Button: ②

Light Setting: After powering on, click ② to toggle between light modes. Firstmode is constant white light, second mode is single-color gradient, third mode is multicolor gradient, fourth mode is light off.

Time Setting: After powering on, long press ② for 1 to 2 seconds to enter time adjustment mode. When the screen clock digits blink, rotate ④ knob to adjust the clock size. Once the correct clock size is reached, click ② to confirm and enter minute size adjustment. When the screen minute digits blink, rotate ④ knob to adjust minute size. Once the correct minute size is reached, long press ② to confirm minute size, completing the time setting.

Mode Knob: ③

White Noise Mode: After powering on, rotate ③ When the small dot points to the NOI icon, it indicates white noise mode. The first track is ocean waves, the second track is campfire crackling, the third track is bird songs, and the fourth track is a flowing stream. Click ④ knob to switch to the next track, double-click ④ knob to switch to the previous track.

Bluetooth Mode: After powering on, rotate knob ③ When the small dot points to the Bluetooth icon, Bluetooth mode is activated. Open your phone's Bluetooth settings and search for the Bluetooth pairing name: "White noise speaker". Click to connect. Long press knob ④ to turn off Bluetooth.

TF Mode: After powering on, rotate ③. When the small dot points to the TF icon, it indicates TF card mode. Insert the TF card into the TF card slot at the back of the device to automatically play the songs stored on the TF card.

AUX Mode: After powering on, rotate ③ When the small dot points to the AUX icon, it indicates audio input mode. Connect the audio device via a 3.5mm audio cable to play songs from the audio device.

Knob Button: ④

- 1.Volume Adjustment: Rotate the knob button to adjust the volume. Turning left decreases the volume, turning right increases the volume.
- 2.Single-click knob button for next track; double-click knob button for previous track.
- 3.(In Bluetooth mode) Long press knob button to turn off Bluetooth. Long press again to turn Bluetooth back on.
- 4.In time adjustment mode, rotate the knob button to adjust the time.

Projection Light Function

With the device light turned on, place the device in a relatively dark space to project water ripples onto the surrounding walls.

Automatic Screen Off

After the display screen lights up, it will automatically turn off after one minute. Simply tap any part of the device gently to activate the screen display again.

Troubleshooting

•Multiple unsuccessful pairing attempts

Turn off both the speaker and the phone's Bluetooth, then restart them. Ensure that the connection name is "White noise speaker".

•Music playback experiences interruptions

- a. Check if the distance between the speaker and the phone exceeds the range or if there are obstacles between them.
- b. Ensure smooth phone network connectivity and check if the speaker battery is low.

•No sound during playback

Verify if the speaker volume is at its lowest (rotate the knob button to adjust the volume). Check if the mode knob ③ is turned to the appropriate mode.

•Unable to power on

If the device has been used for an extended period and the battery is nearly depleted (all functions have automatically shut down), move the lever ① back to the right, plug in the charging cable, charge for 2 hours, and then try again.

Charging Instructions

- a. Please use the provided charger or one with equivalent specifications to charge the device.
- b. When the battery level is low or insufficient during product use, please charge it as soon as possible.
- c. Avoid using the device under high temperature or pressure conditions.
- d. If the device is not used for an extended period, it is recommended to charge it once a month to ensure that the battery is sufficiently charged and the device functions normally when needed.

Charging Indicator Light:

During charging, the light is red. Once fully charged, the light will turn off.

Parameter Description

Product Name : White noise speaker

Product size : 142X153X67mm	Model : KW03
Package Dimensions: 153X165X75mm	Battery Capacity : 1500mAh
Product Weight : 498g	Usage Time : 4-6h
S p e a k e r : 40mm4Q5W	Charging Time : 2-3h
Input Voltage : 5V 1A	Output Power : 5W
Frequency Response : 80HZ-20KHZ	Transmission Distance : Within 10 meters
Compliance Standard : GB8898-2011	Bluetooth Version : 5.0

Packaging Accessories



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.