



INTELLIGENT TRACKING SELFIE STICK

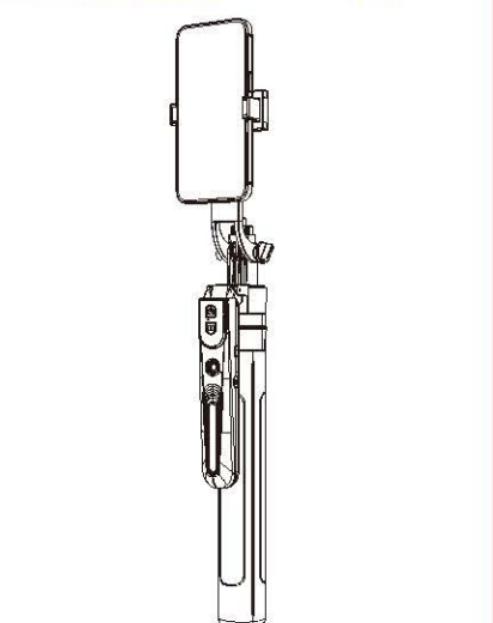


INSTRUCTION MANUAL

H10-C Series


Products Introduction

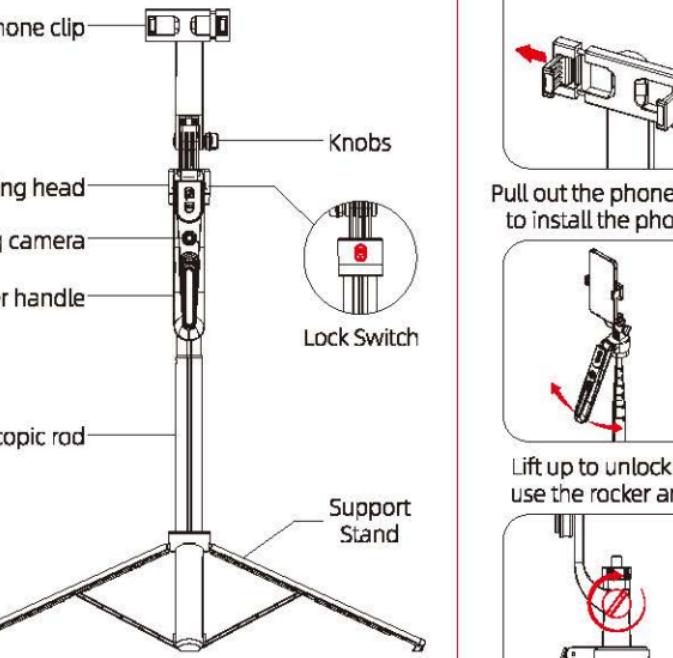

Directions for use

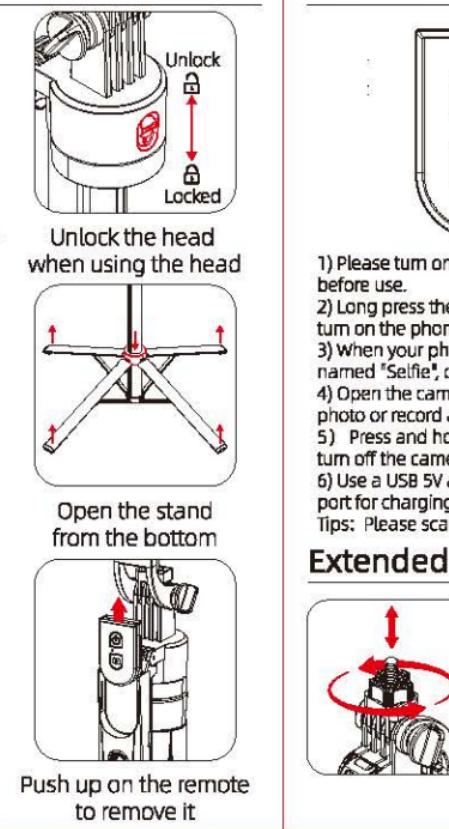

Remote Control

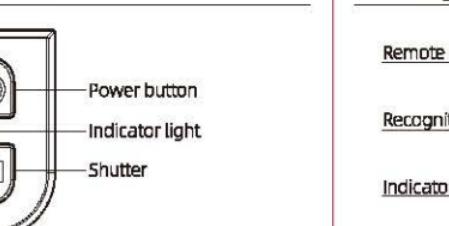

Tip: Please unlock the tracking head before turning it on


- 1) Long press the power button to turn on the power.
- 2) Click the power button to pause tracking, and the indicator light flashes.
- 3) Double-click the power button to enter the slow rotation mode, click the power button to stop. Triple-click the power button to enter the fast rotation mode.
- 4) Open the camera app and tap the photo button to take a photo or record a video.
- 5) Press and hold the power button for about 2 seconds to turn off the camera.
- 6) Use a USB 5V adapter (Type-C) to connect to the charging port for charging.

Tips: Please scan the QR code on this manual for details.
Extended Interface

This product comes with an extendable threaded connector, align the device with the extended interface and screw it into the connector, at this time, leave a proper gap, and then tighten the knob upward to complete the connection.

Tip: The bearing capacity of the head is limited, please do not install too heavy equipment to avoid damage to the equipment.

Intelligent Tracking Head

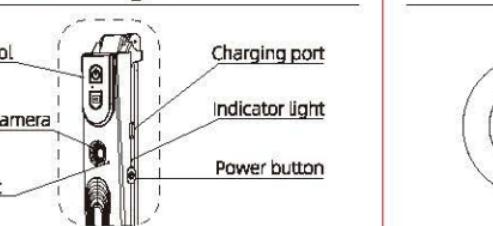


1) Power button: click to turn on the light, click again to switch the light mode until power off; long press the power button to adjust the brightness of the light.

- 2) Charging: Use the USB 5V adapter to connect to the charging port for charging.
- 3) When the target is lost, the gimbal stops and the indicator light blinks, then you can walk into the field of view of the camera again. To ensure the recognition accuracy, please use it within 1-3 meters from the target.

***The fill light is optional, please refer to the configuration of the purchased products**

*Fill Light

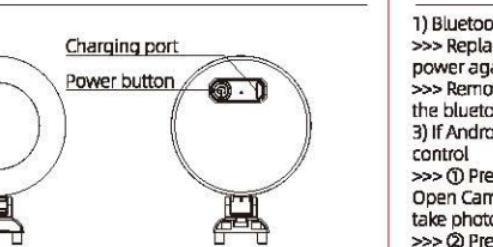

1) Power button: click to turn on the light, click again to switch the light mode until power off; long press the power button to adjust the brightness of the light.

- 2) Charging: Use the USB 5V adapter to connect to the charging port for charging.

Note

- 1) Do not store the product in a low-temperature, humid environment.
- 2) Do not expose the product to higher temperatures such as sunlight or fire.

3) Do not use the product in places where the equipment is restricted to avoid violating public order.

- 4) This product contains small parts, please keep it out of the reach of infants and young children to prevent them from swallowing it accidentally.
- 5) The pictures and dimensions shown on the package and manual are for reference only, please refer to the actual product.



Please scan the QR code above for detailed tutorials

Fault Resolution

1) Bluetooth remote control can not be turned on.
 >>> Replace the remote control batteries and turn on the power again and retry.

>>> Remove the bluetooth pairing on your phone, restart the bluetooth remote control and re-pair the connection.

3) If Android phone can't take photos with the remote control
 >>> ① Press the photo button to adjust the volume: Open Camera App, change "Volume Function" to default to take photo, then you can take photo with remote control.

>>> ② Press the photo button can not adjust the volume: Follow the steps in question 2 to re-pair and connect.

4) When the target is lost, the gimbal stops and the indicator light blinks, then you can walk into the field of view of the camera again. To ensure the recognition accuracy, please use it within 1-3 meters from the target.

FCC COMPLIANCE STATEMENT:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.

Connect the equipment into a outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.