

# USER MANUAL (用户使用手册)

PROJECTOR  
DLP智能投影仪

First of all thank you for using our product!  
Please read this user manual carefully before  
using so it will help you to quickly be familiar  
with this product.

In case of any printing or translation error,  
we apologize for the inconvenience. As for the  
content change, we are sorry for no further  
notice.

首先非常感谢您使用本公司产品！使用之前请仔细阅读此用户  
使用手册，能帮助您快速熟悉使用本产品。

如果有任何印刷错误或翻译失误的地方，望广大用户谅解，当涉及  
内容有所更改时，恕不另行通知。


# Contents (目录)

Overview of Projector (投影仪概述) .....	1
Power on/Power off (开机/关机) .....	3
Sharpness (清晰度) .....	3
HD IN (高清输入) .....	4
Keystone Correction (梯形校正) .....	5
WI-FI Setting (WI-FI设置) .....	7
Hotspot Setting (热点设置) .....	8
BT Setting (蓝牙设置) .....	9
Language Setting (语言设置) .....	10
iMirror (苹果同屏) .....	11
Miracast (安卓同屏) .....	12
EShareServer (EShare同屏) .....	13
Play 3D Mode (3D播放模式) .....	14
APP Install/Uninstall (应用安装/卸载) .....	15
File Browser (文件管理器) .....	16
Factory data reset (恢复出厂设置) .....	17
Safety matters (安全事项) .....	18

# Overview of Projector (投影仪概述)



→ ON/OFF (电源开关)

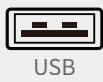

→ USB 2.0



→ ⏪ (启动开关)




→ HD-IN (高清输入)



→ DC-IN (充电口)



→ Headphone (耳机孔)

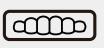


→ Focus (调焦齿轮)



→ TF card (TF卡槽)



→ Engine (投影镜头)

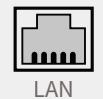

→ Ethernet (网口)




→ Reset (复位键)



→ IR (红外接收头)

Note: Different models of products, interfaces and buttons will be different, depending on the actual product.

(注:不同型号的产品,接口和按键会有所不同,以产品实物为准。)

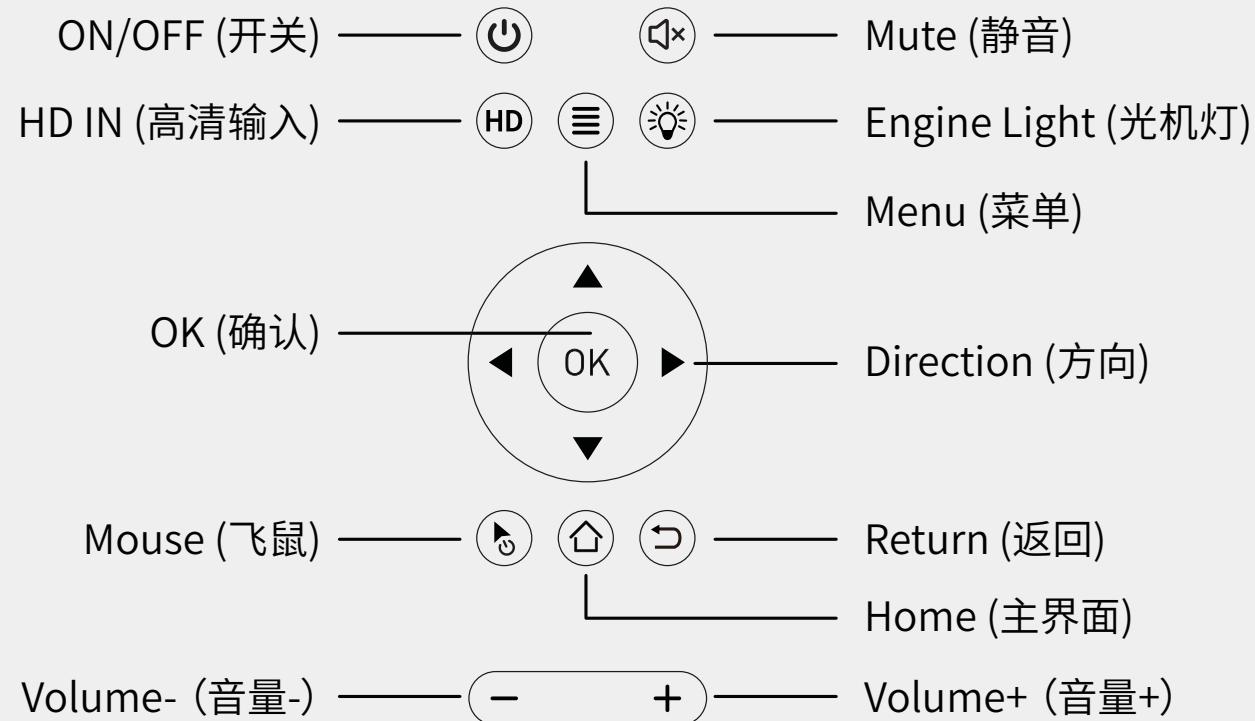

Note: Different models of products, the configuration of remote control will be different, depending on the actual product.

(注:不同型号的产品,配置的遥控器会有所不同,以产品实物为准。)

## Power on/Power off (开机/关机)

### Power on (开机):

1. Switch the **【ON/OFF】** to the "ON" state, press the **【⊕】** to power on, the indicator is blue, waiting for the screen to display.

(先将【电源开关】拨至“ON”状态,再按一下【启动开关】开机,指示灯为蓝色,等待画面显示。)

2. If the power is insufficient, please connect the power adapter to the **【DC-IN】** of the projector for charging.

(若电量不足,请将电源适配器连接投影仪的充电口进行充电。)

### Power off (关机):

Press the **【⊕】** to power off, the interface of shutdown will pop up, click "OK", after the projector stops running, please switch the **【ON/OFF】** to the "OFF" state, otherwise the battery will still be in a power-consuming state.

(先按一下【启动开关】,界面弹出关机提示,点击“确认”关机,投影仪停止运行后,将【电源开关】拨动至“OFF”状态,否则电池仍会处于耗电状态。)

## Sharpness (清晰度)

The sharpness of the picture can be adjusted by turning the **【Focus】** of projector.

(上下转动投影仪的【调焦齿轮】可调节画面的清晰度。)

## HD IN (高清输入)


1. One end of the HD line is connected to the 【HD-IN】interface of the projector, and the other end is connected with the 【HD-OUT】interface of computer/other devices.

(将高清线的一端连接投影仪【高清输入】接口, 另一端连接电脑/其他设备【高清输出】接口。)

2. Enter the "HD IN" on the main interface of the projector.



(在投影仪主界面上进入“高清输入”。)

Smart projector  
(智能投影仪)

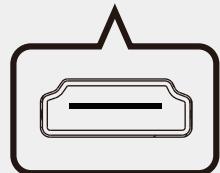

HD-IN  
(高清输入)

Computer/other devices  
(电脑/其他设备)

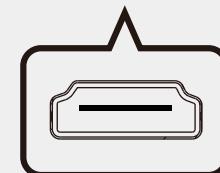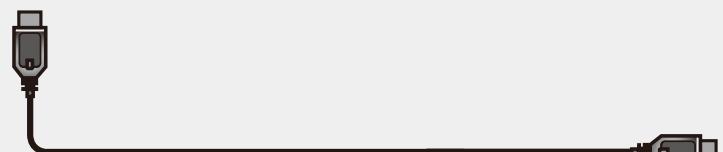


HD-OUT  
(高清输出)

# Keystone Correction (梯形校正)

## Keystone Correction Vertical (垂直梯形校正):

Enter "Settings" on the main interface → "Projection Setting" → "Keystone Correction Vertical", the projector default auto vertical keystone correction, also supports manual correction.


(主界面进入“设置”→“投影设置”→“垂直梯形校正”，机器默认自动校正，也支持手动校正。)

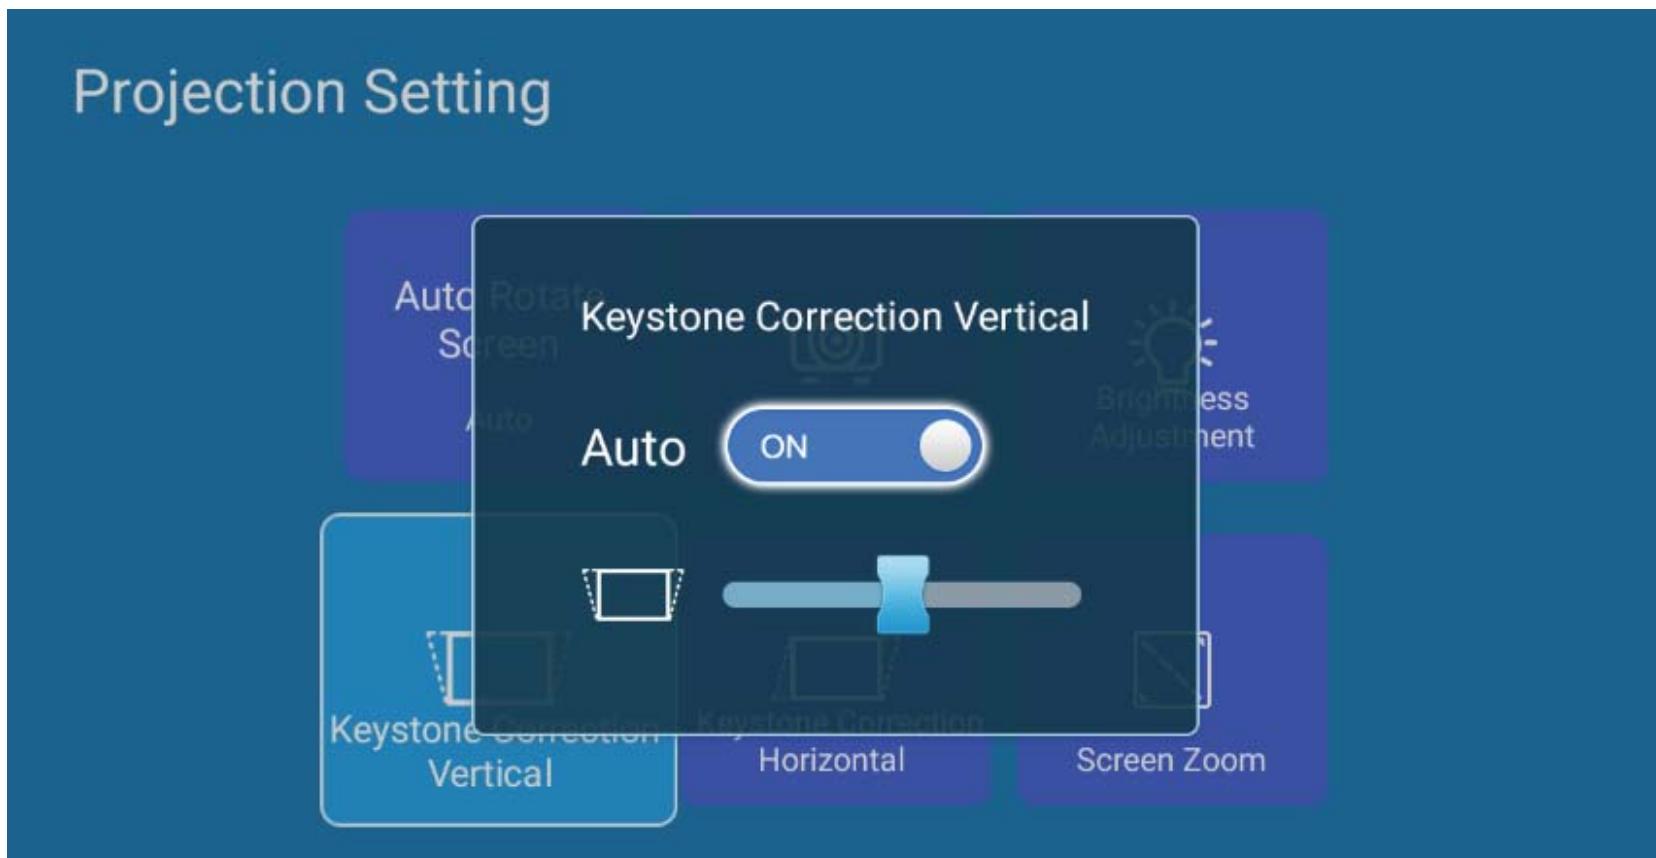

## Keystone Correction Horizontal (水平梯形校正):

Enter "Settings" on the main interface → "Projection Setting" → "Keystone Correction Horizontal", the projector supports manual horizontal keystone correction, also supports multi angle adjustment.

(主界面进入“设置”→“投影设置”→“水平梯形校正”，支持手动校正，也支持多角度调整。)

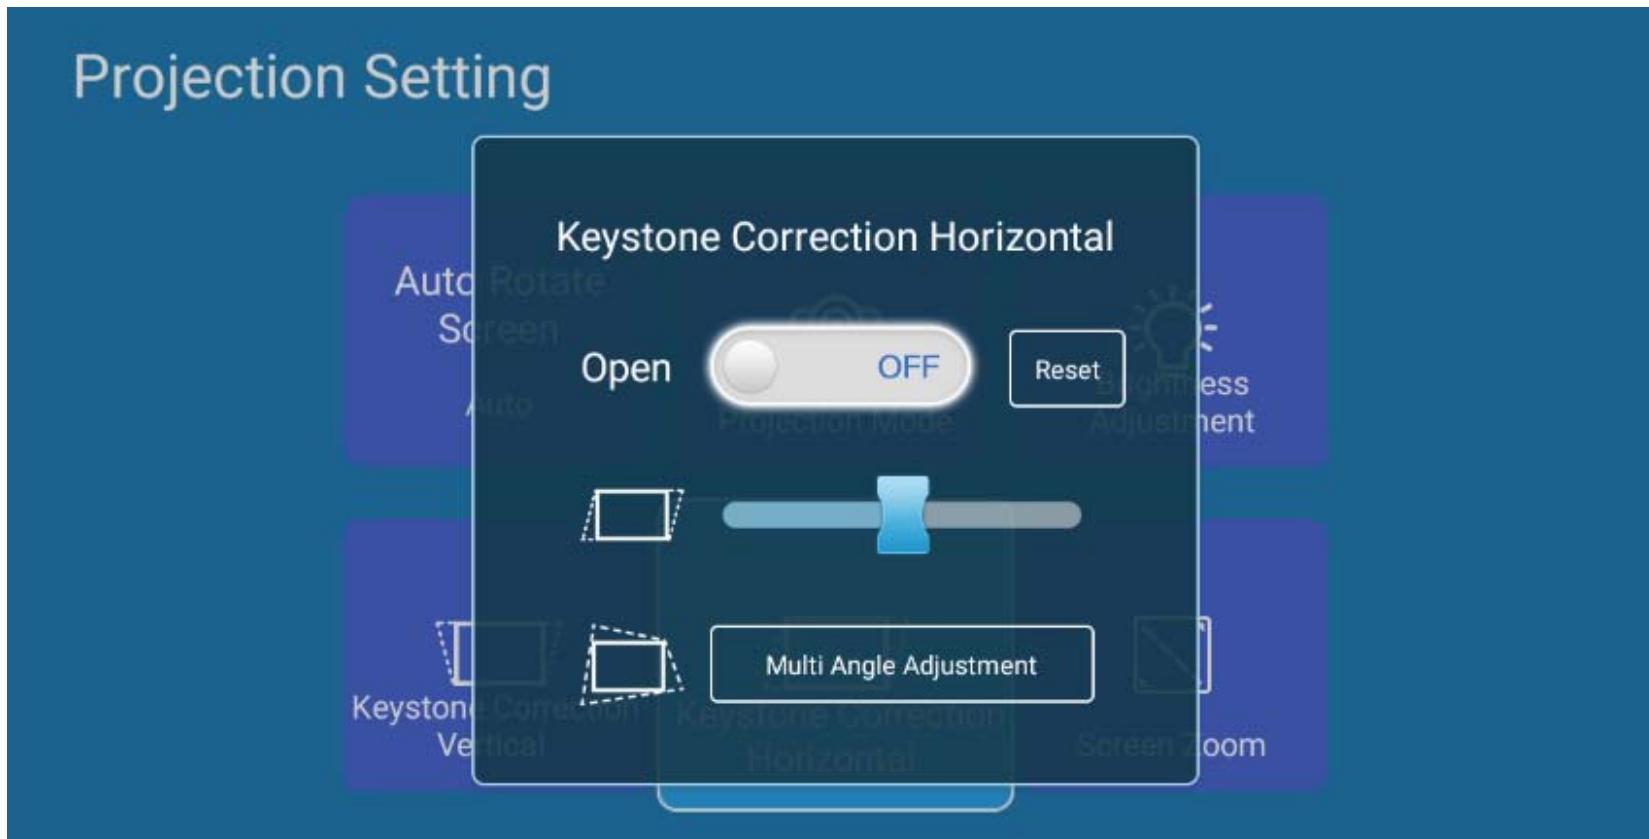


Note: Different models of products, the function of "Keystone Correction Horizontal" will be different, depending on the actual product.

(注:不同型号的产品，“水平梯形校正”功能会有所不同，以产品实物为准。)

# WI-FI Setting (WI-FI设置)

Enter "Settings" on the main interface → "Networking Setting" → "WI-FI Setting", click the switch to "ON" state, select the network which you want to connect, enter the password and click "Link".


(主界面进入“设置”→“网络设置”→“WI-FI设置”，点击开关至“ON”状态，选择需要连接的网络，输入密码，点击“连接”。)

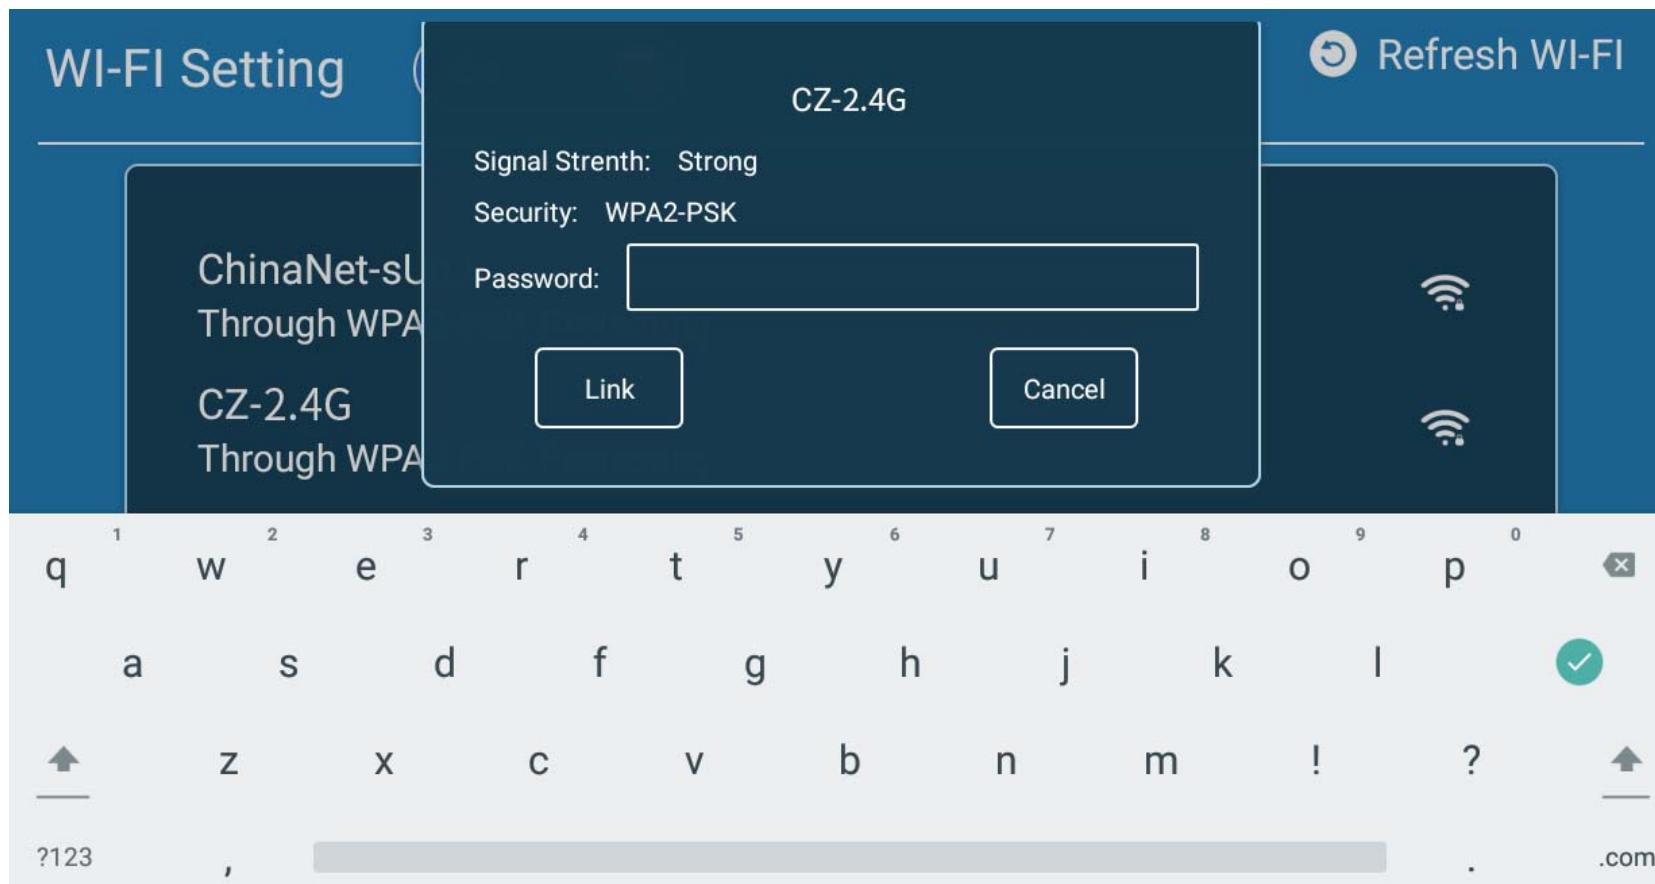

# Hotspot Setting (热点设置)


Enter "Settings" on the main interface → "Networking Setting" → "Hotspot Setting", click the switch to "ON" state, you can set the parameters, click "OK", and then it searches for and connects the hotspots of projectors on other devices.

(主界面进入“设置” → “网络设置” → “热点设置”，点击开关至“ON”状态，自行设置各项参数，点击“确定”，然后在其他设备上搜索、连接投影仪的热点。)

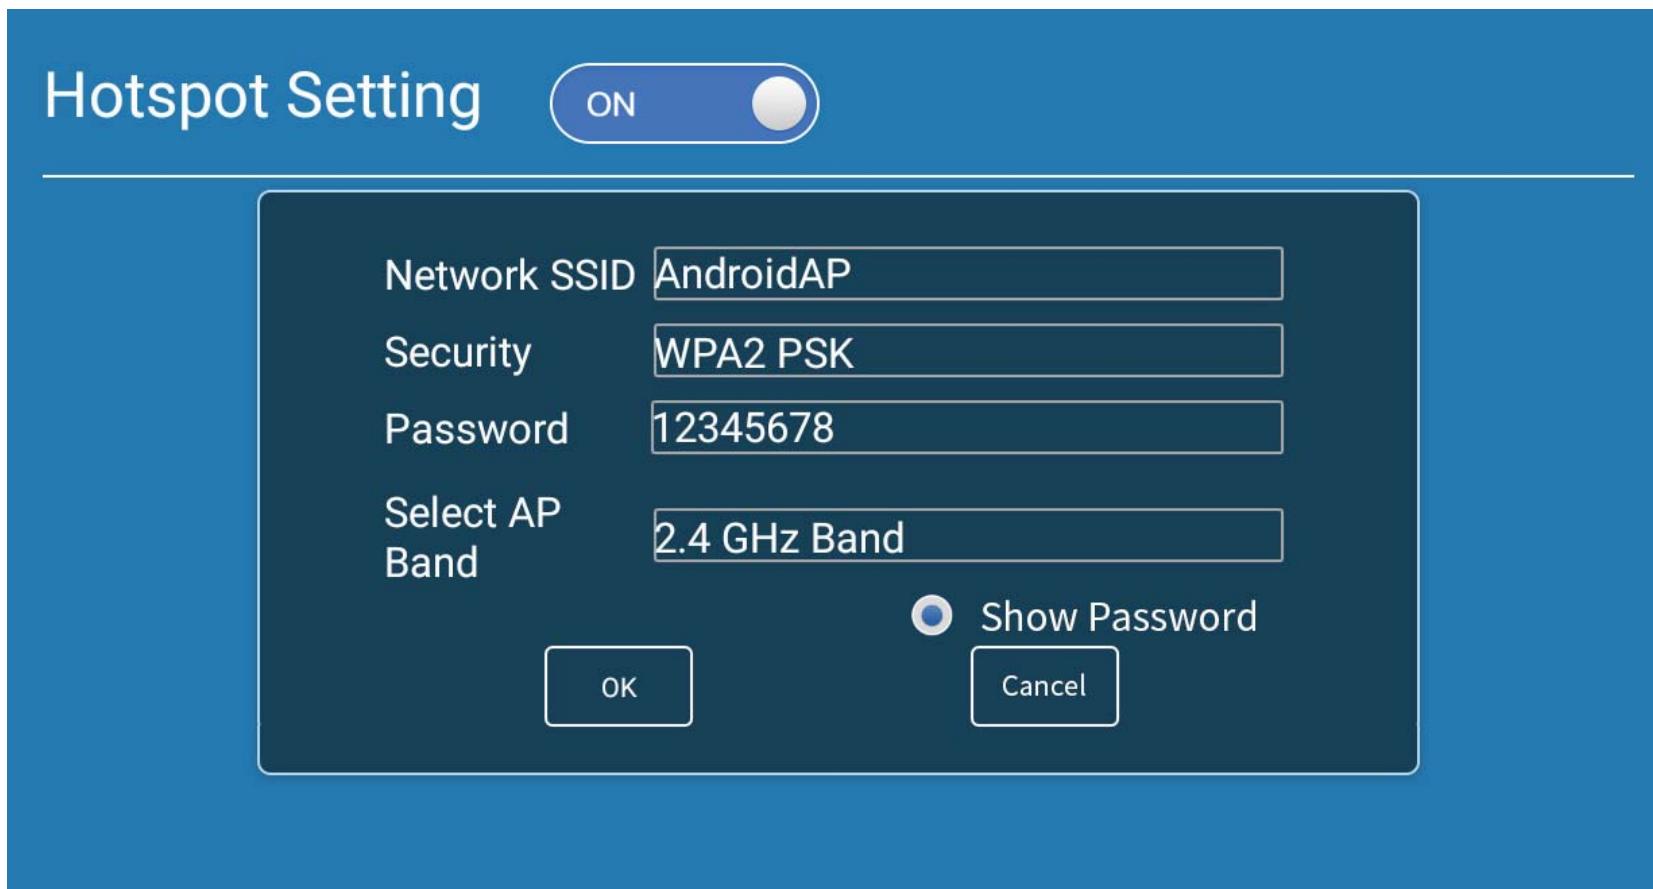


# BT Setting (蓝牙设置)

Enter "Settings" on the main interface → "BT Setting", click the switch to the "ON" state, search for the device which you want to connect, pairing.  
(主界面进入“设置”→“蓝牙设置”，点击开关至“ON”状态，搜索到需要连接的设备，进行配对。)

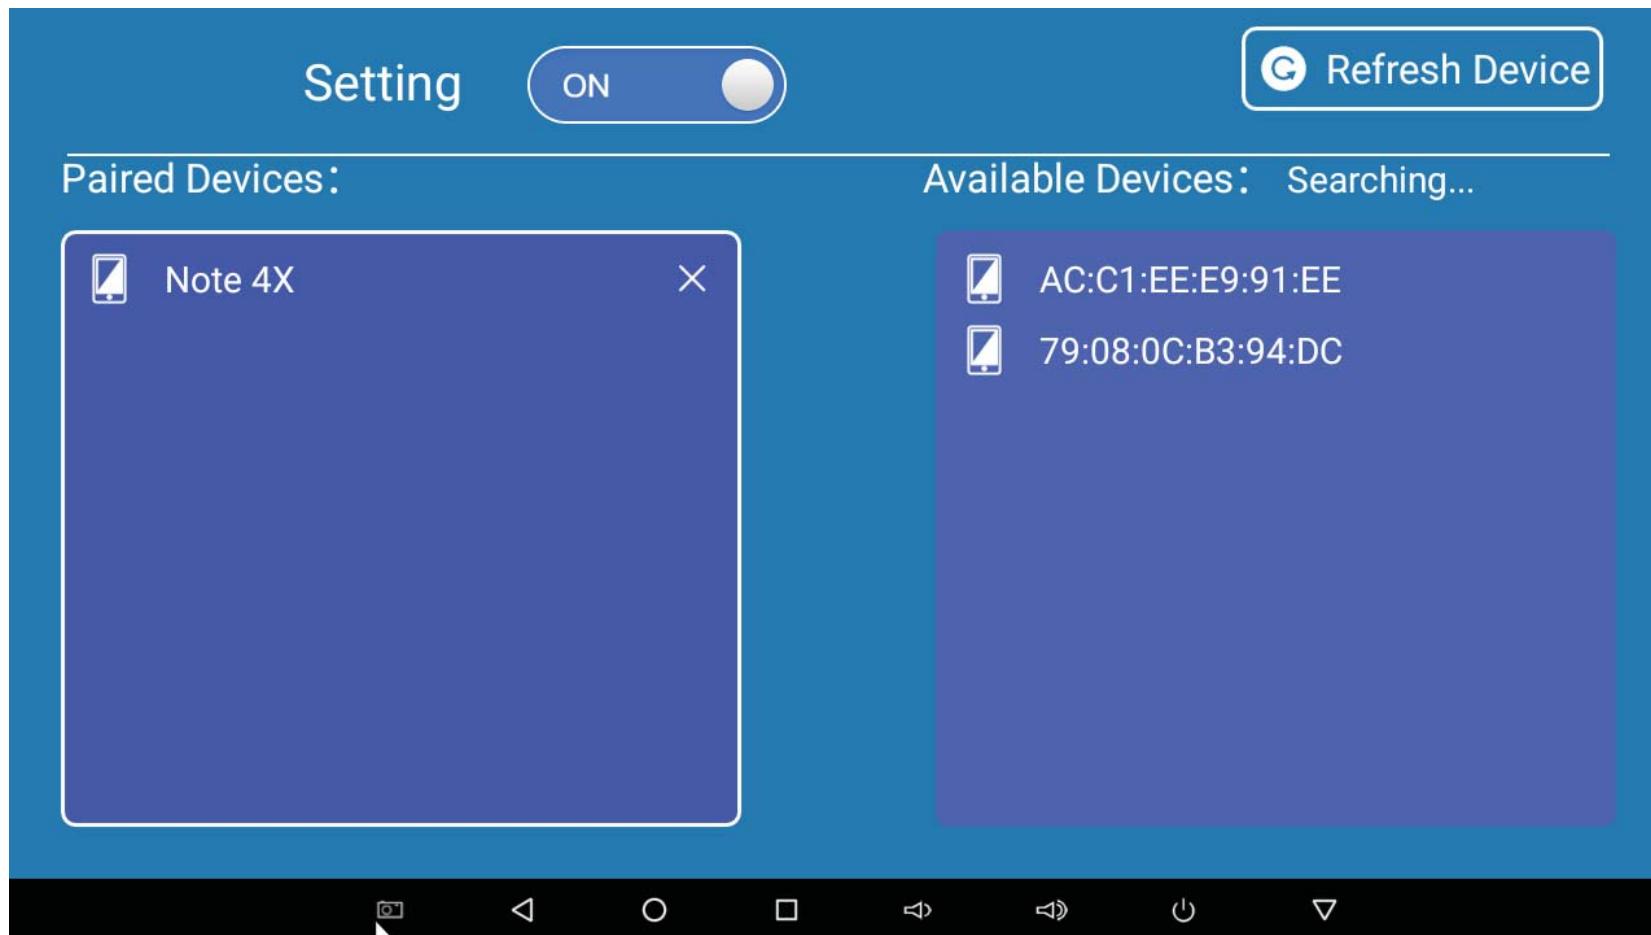

# ■ | Language Setting (语言设置) | ■

Enter "Settings" on the main interface → "Language Setting" and select the language you want to switch.  
(主界面进入“设置”→“语言设置”，选择需要切换的语言。)

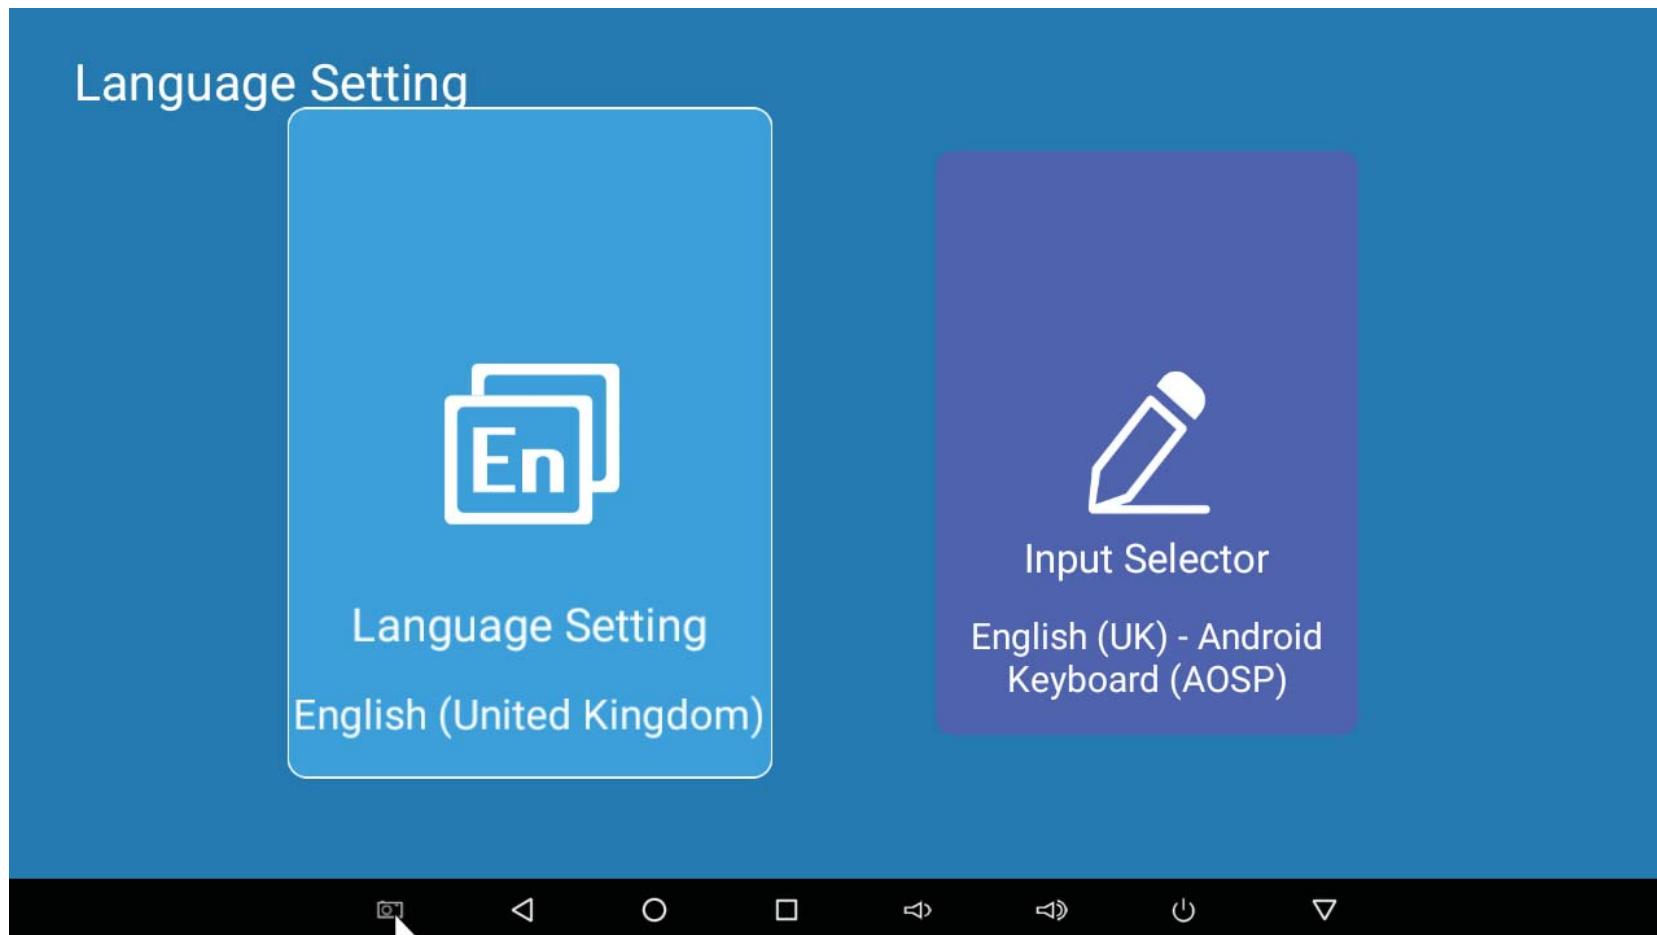

## For iOS system (适用于iOS系统) :

1. iPhone/iPad and projector need to be connected to the same network. In the absence of a network, the device can be connected to the hotspot of the projector.

(投影仪和苹果设备需连接同一网络。在无网络的情况下,设备可连接投影仪的便捷式热点。)

2. Enter the APP "iMirror" on the projector.

(在投影仪上进入应用“iMirror”界面。)

3. Open the "Screen Mirroring" on the iPhone/iPad, and then search the device name of projector for matching.


(在苹果设备上打开“屏幕镜像”,然后搜索投影仪的设备名称,点击进行连接。)



# Miracast (安卓同屏)

For Android system (适用于Android系统) :

1. Android devices and projector need to be connected to the same network.  
(投影仪和安卓设备需连接同一网络。)
2. Enter the APP "Miracast" on the projector.  
(在投影仪上进入应用“Miracast”界面。)
3. Enter "Wireless projection" interface on Android devices, and then search the device name of projector for matching.  
(在安卓设备上进入“无线投屏”界面,然后搜索投影仪的设备名称,点击进行连接。)

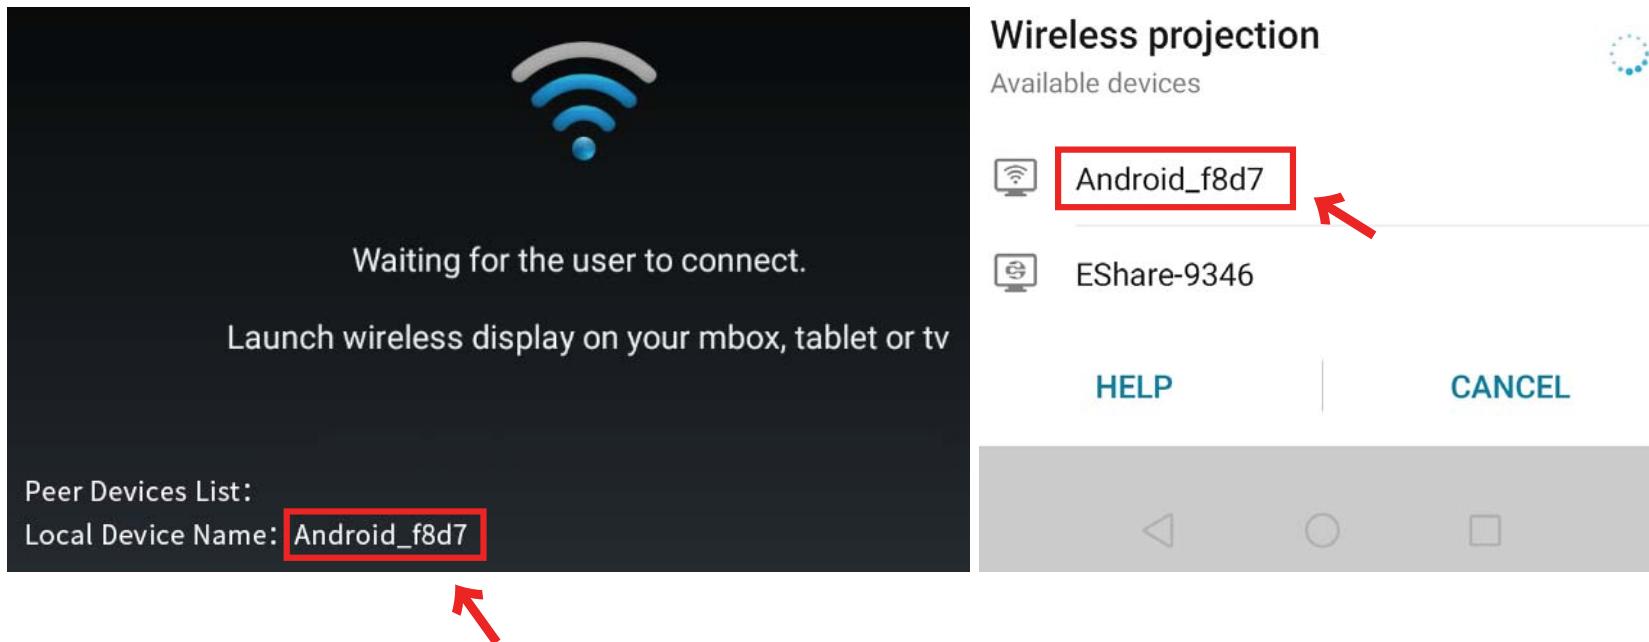

# EShareServer (EShare同屏)


For Android/iPhone/iPad (适用于Android/iPhone/iPad) :

1. Devices and projector need to be connected to the same network. In the absence of a network, the device can be connected to the hotspot of the projector.  
(投影仪和设备需连接同一网络。在无网络的情况下,设备可连接投影仪的便捷式热点。)
2. Enter the APP "EShare" on the projector. (在投影仪上进入应用“EShare”界面。)
3. Following the steps of the interface display, download and install the "EShare" APP on other devices. (按照界面显示的步骤,在其他设备上下载并安装“EShare”应用。)
4. When the "EShare" APP is installed, and then search the device name of projector for matching. (“EShare”应用安装完成后,搜索投影仪的设备名称,点击进行连接。)

1. Connect your device to "CZ-5G"  
2. Visit "<http://192.168.0.215:8000>" with web browser or scan the QR-code to download app.  
3. Launch EShare and click "EShare-9346" to connect.

## Play 3D Mode (3D播放模式)

1. Before playing 3D video, you must turn off the "Keystone Correction Horizontal" and "Screen Zoom" functions in "Settings".  
(播放3D视频之前,必须在“设置”中关闭“水平梯形校正”和“屏幕缩放”功能。)
2. Enter the APP "Movie Player" to play 3D video, click on the "3D" option in the menu bar, and set up the "Play 3D Mode", you can purchase on your own and use the active shutter 3D glasses for DLP-Link 3D projector.  
(进入应用“媒体播放器”播放3D视频,在菜单栏上点击“3D”选项,设置“3D播放模式”,可自行购买和使用DLP-Link 3D投影仪专用的主动快门式3D眼镜。)

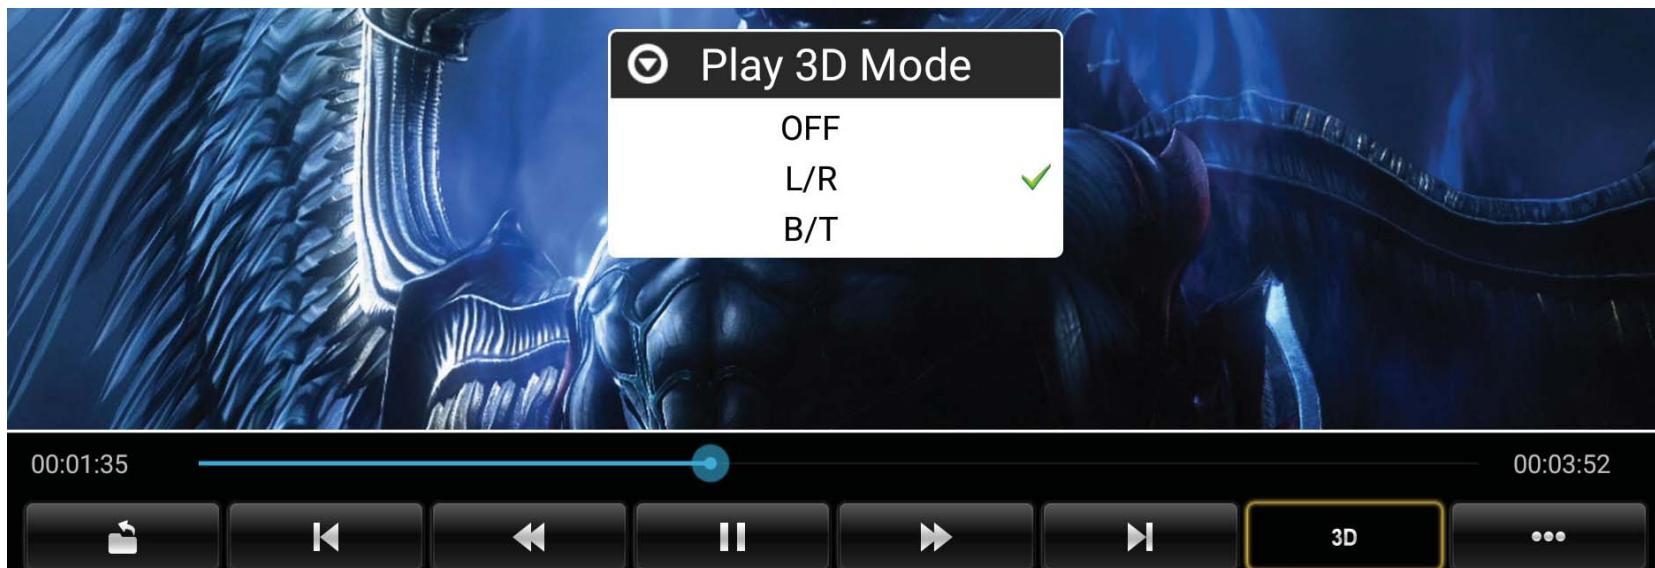

Note: Different models of products, the function of "Play 3D Mode" will be different, depending on the actual product.

(注:不同型号的产品,“3D播放模式”功能会有所不同,以产品实物为准。)

# APP Install/Uninstall (应用安装/卸载)

## APP Install (应用安装):

1. If the APK Downloaded, enter the "App Center"→ "App Installer", find the location of the APK , click and install it.


(已经下载好的APK可进入“应用中心”→“应用安装”，找到APK所在的位置打开安装。)

2. If the APK is not downloaded, you can download and install it in other ways.  
(未下载的应用，可通过其它方式下载安装。)

## APP Uninstall (应用卸载):


Enter "Settings" on the main interface → "Other Setting" →"Apps & notifications", click the App that needs to be uninstalled.

(主界面进入“设置”→“其他设置”→“应用和通知”，打开需要卸载的应用，点击“卸载”。)

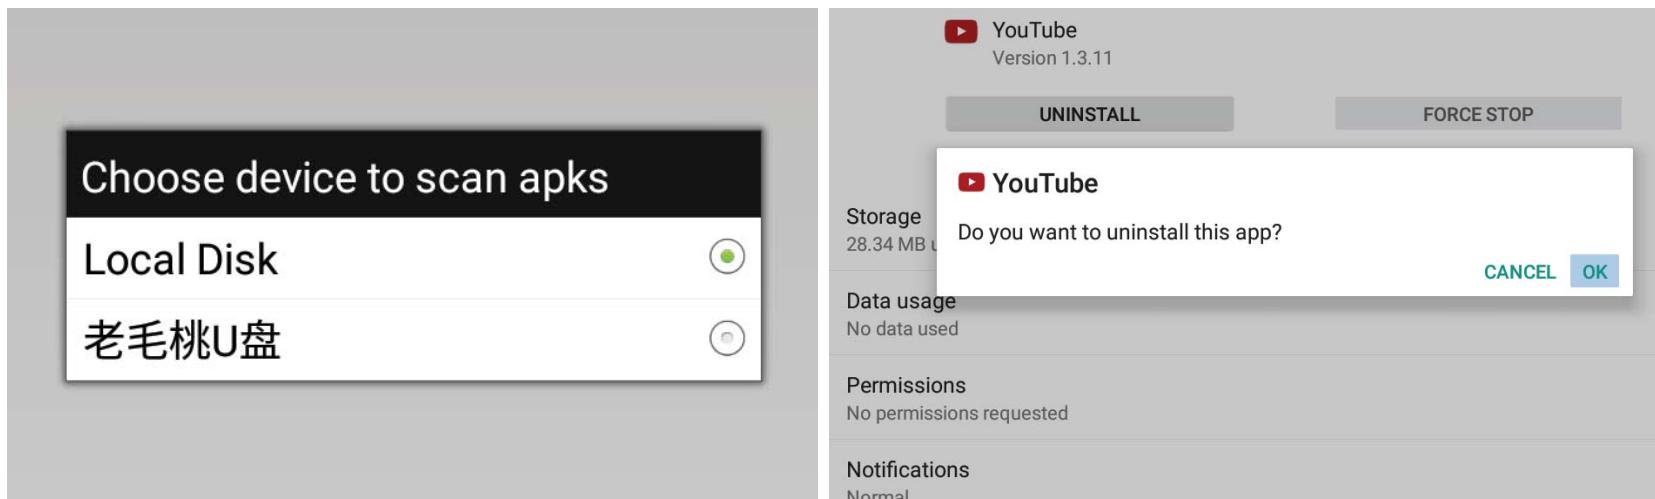

# File Browser (文件管理器)


1. Read: Insert the U disk/TF card, enter the APP "File Browser".  
(读取: 插上U盘/TF卡, 进入应用“文件管理器”。)
2. Edit: Select the menu icon  , tick the file you want to operate  , deselect the menu icon  , select the options you want to operate in the edit icon directory  .  
(编辑: 点亮菜单图标  , 勾选需要操作的文件  , 然后关闭菜单图标  , 再点击编辑图标  , 选择需要操作的选项。)
3. If "Cut" or "Copy" is selected, you need to first select the directory, and then click the edit icon  to select "Paste". (选择了“剪切”或“复制”的选项后, 需先选择文件粘帖的位置, 再点击编辑图标  , 选择“粘帖”的选项。)

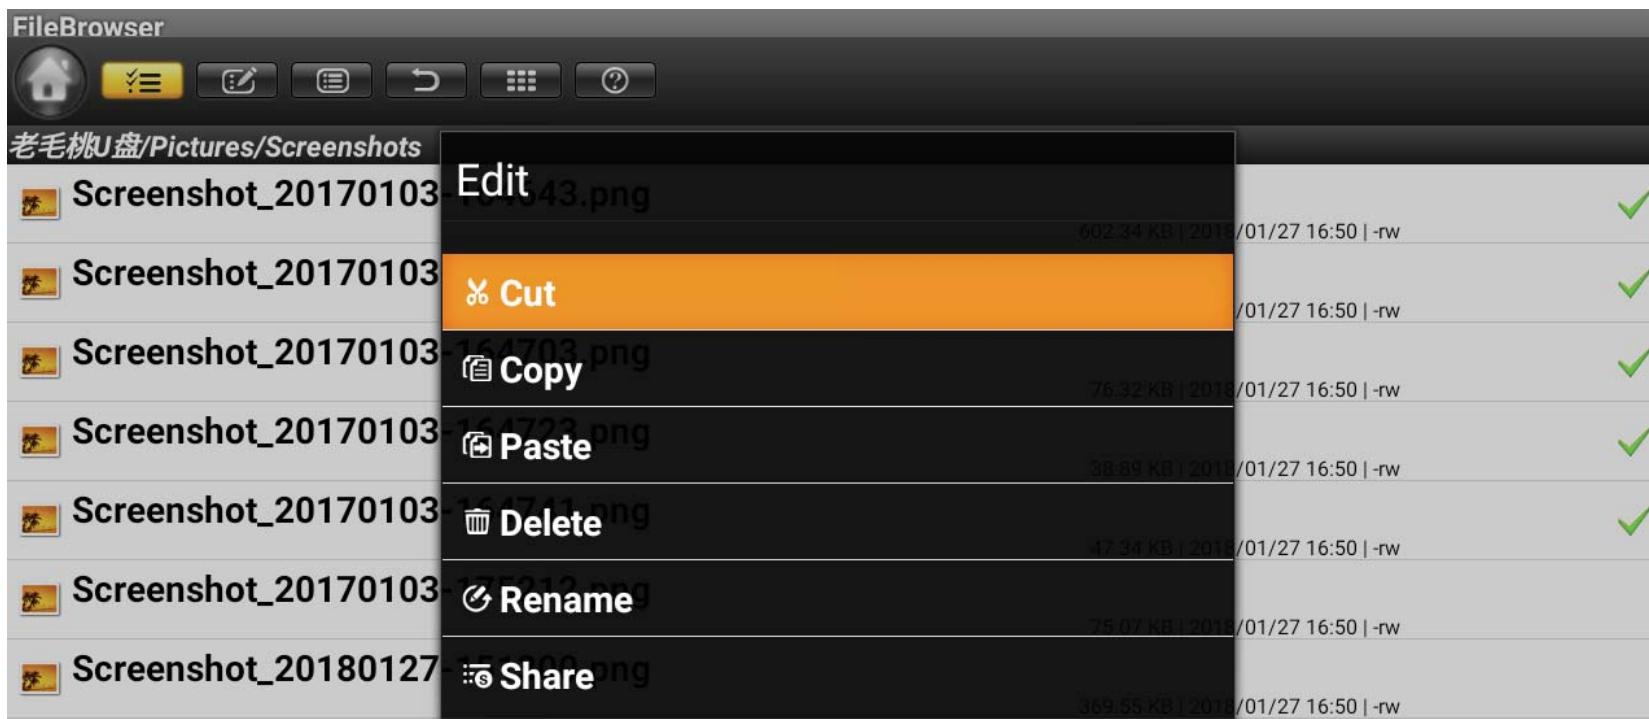

# Factory data reset (恢复出厂设置)

Enter "Settings" on the main interface → "Other Setting" → "System" → "Advanced" → "Reset options" → "Erase all data (factory reset)" → "RESET PHONE".

(主界面进入“设置”→“其他设置”→“系统”→“高级”→“重置选项”→“清除所有数据(恢复出厂设置)”→“恢复手机出厂设置”。)

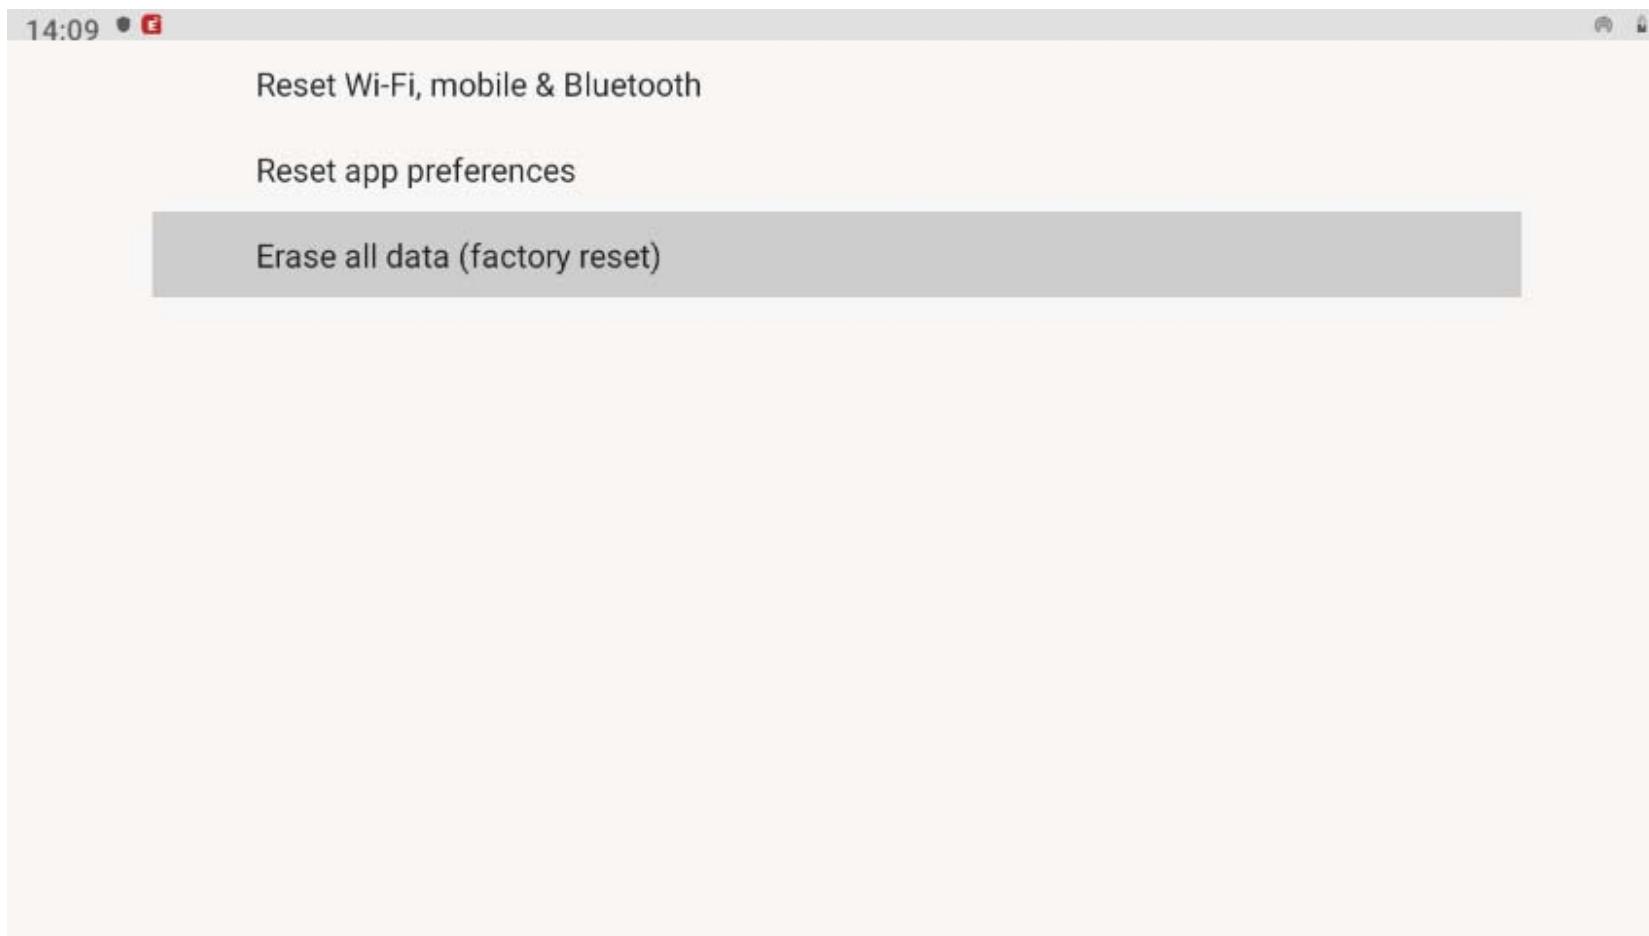

# Safety matters (安全事项)

## Notice (注意):

1. Do not put the projector on your leg or any part of your body to prevent injury from the heat.
2. Do not place any liquid or heavy objects on the projector.
3. Avoid using the projector during weather of high humidity or thunderstorms.
4. Do not disassemble the projector at will. There is a risk of electric shock, which also affects the normal maintenance.

- 请勿把投影仪放在腿上或是身体任何部位，防止热度引起不适或是受伤。
- 请勿在投影仪上放置任何液体或重物。
- 请勿在液体中或暴露于雨中使用，请勿在雷雨天气下使用。
- 不要随意拆开投影仪，有电击风险，也影响正常保修。

## Use (使用):

1. Projector is only suitable for use in non-high temperature environment. Do not block the air intake and heat sink during operation or charging. 
2. Do not look directly at the lens of the projector during use, or you may hurt your eyes.
3. Please use the projector in a darker room or draw the curtain to get better projection effect.
4. Please use the projector carefully. Falling or impacting may damage parts or cause blurred images and abnormal display.

- 投影仪仅适用于非高温环境下使用，在运行或充电过程中，禁止遮挡进风口和散热口。 
- 在使用过程中，请勿正视投影仪镜头，否则可能会伤害眼睛。
- 为获得较好的投影效果，请在较暗的房间内或拉上窗帘使用投影仪。
- 请小心使用投影仪，掉落或撞击可能会损坏部件或导致图像模糊、显示异常。

## Power supply (电源) :

1. Please charge the projector with its own power adapter. Other adapters may cause serious damage to the projector.
2. Careful use of power cord to avoid excessive bending. Damage to the power cord may lead to electric shock and fire.
3. After use, the power adapter should be unplugged from the socket.

- 请用产品自带的电源适配器对投影仪进行充电, 其他适配器可能会对投影仪造成严重损坏。
- 小心使用电源线, 避免过度折弯。电源线损坏可能会导致触电和失火。
- 使用结束后, 应将电源适配器从插座上拔下。

## Clean (清洁) :

1. Please disconnect the power supply before cleaning the projector. Wipe the fuselage with a clean cotton wool or soft cloth, and then wipe off the residual moisture with a dry cloth.
2. Neutral detergents may be used, but do not use strong detergents or solvents (such as alcohol or diluents).
3. Lens should be cleaned with soft dust-free cloth, lens cloth or lens paper. Be careful not to scratch the lens.
4. Please use a soft brush regularly to clean the heat sink and speaker parts of the projector, otherwise the heat sink will be blocked by dust, which will cause overheating of the projector and even lead to machine failure.

- 清洁投影仪前请断开电源, 用干净纤维棉或软皮布滴湿水擦拭机身, 再用干布擦掉残余水分。
- 可使用中性洗涤剂, 但请勿使用烈性洗涤剂或溶剂(如酒精或稀释剂)。
- 镜头要用柔软的无尘布、眼镜布或镜头纸清洁, 注意不要刮伤或擦伤镜头。
- 请定期使用软毛刷清洁投影仪的散热口和扬声器部分, 否则散热口会被积尘堵塞, 从而引起投影仪过热, 甚至导致机器出现故障。

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

\*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.