


Switch Joypad Controller USER MANUAL

JC-E



● Key Function Instruction

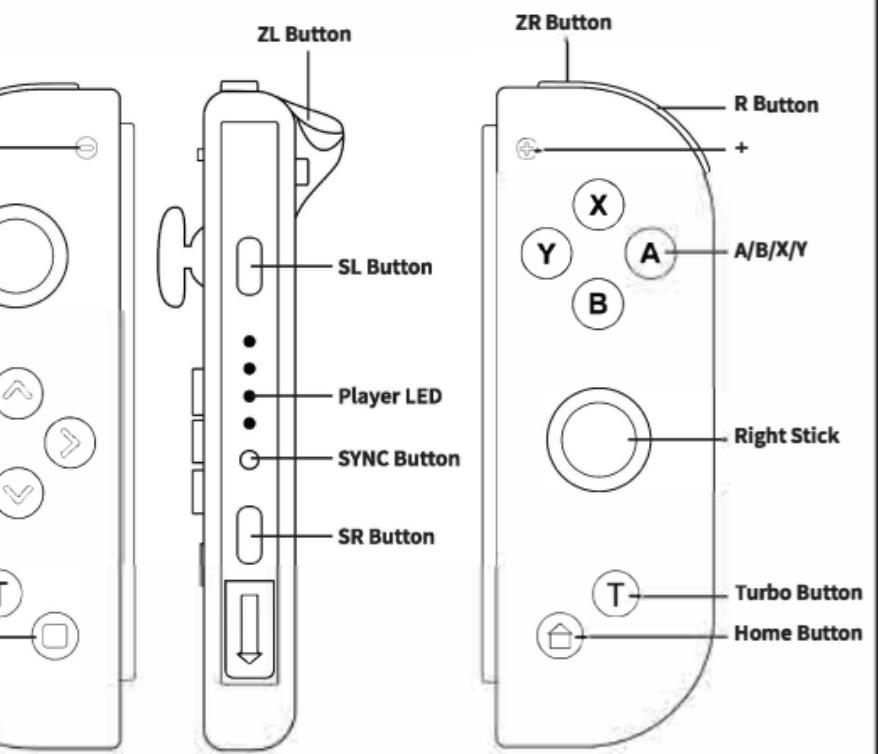

● RGB Lighting Control

● Light modes

Rainbow Mode - 7-Color Auto Cycling - Light Breath Mode - Long Light Mode

● Adjust RGB mode or color

Step 1: Double-click "+" or "-" button to unlock the light mode
Step 2: Move the joystick up and down to change the light mode
Step 3: Toggle the joystick left and right to change the light color
Step 4: Double click "+" or "-" to lock the light

● Sleeping Mode & Reconnect

Sleeping Mode: The joycon will turn into sleeping mode automatically without any coercion within 5 minutes.

Wake up & Reconnect: Press HOME button shortly, the joycon will power on and reconnect the device, which connected last time.

● Power Off

Press SYNC button long with 3-5 seconds, the joycon will power off with all LED lights off.

● Turbo/AutoFunction

Buttons (which called as function buttons) can be set TURBO/AUTO/A, B/X/Y/L/Z/R/D-pad button

Enable/Disable the TURBO/AUTO speed function:

Step 1: Press the Turbo button and one function button simultaneously, to enable the Turbo semi-AUTO function
Step 2: Repeat the step 1 to enable the AUTO function
Step 3: Repeat the Step 1 to disable AUTO function

Clear TURBO/AUTO function:

Press the TURBO button with 5 seconds long, with a LED 2.4 light and turn to flashes together with 1 second's vibration. Then all TURBO function clear.

● Calibrate Control Sticks

If the characters in the games automatically drifting, please complete the "calibration" on controls by following steps:


Step 1: System Setting-Controller and Sensor-Calibrate Control Sticks

Step 2: Enter calibrate control sticks interface, operate it according to the guide on NS console.

● N-S Controller Mode


Method 1: Attaching the controller to the console will connect them automatically.
Method 2: (Power on your N-S Console, then follow the steps to pair and connect your controller.)

Step 1:Find **Controllers** Option.-Image1

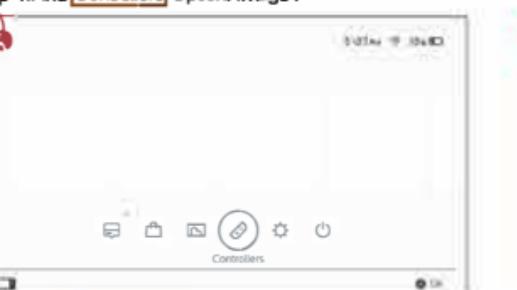

Step 2:Click **Change Grip/Order**.-Image2

Step 3:Press **SYNC** button power on gamepad,4 LED lights blink in turn,waiting for the connection to complete.-Image3
5-7s later, the controller will connect to console automatically;

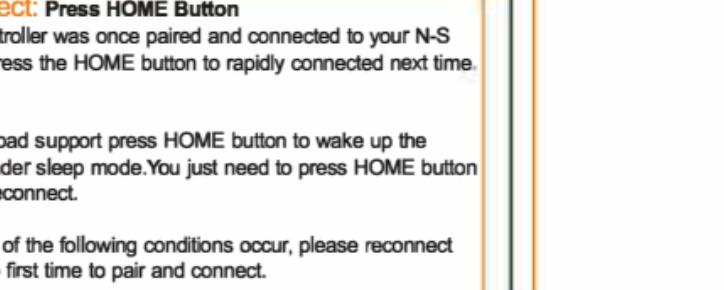

Reconnect: Press HOME Button

If your controller was once paired and connected to your N-S console, press the HOME button to rapidly connect next time.

Note:

The gamepad support press HOME button to wake up the console under sleep mode. You just need to press HOME button to finish reconnect.

When one of the following conditions occur, please reconnect referring to first time to pair and connect.


- 1.Upgrade
- 2.Reset
- 3.Change the console.

● Specification

Product name: Switch Joypad Controller
Model number:JC-E
Product size: 125mm/44mm/122mm
Product weight:185g
Power supply: built-in 500mAh polymer battery
Gametime:5-10h
Charging time: 3-4H
Packing:color box
Package Contents: gamepad, strap, grip, instruction manual

● Update

If there is problem for the connection while the console update, we can offer the update method:
You can download the "QMacro" app from QR code, then instal to your cellphone; follow the step to update your controller.

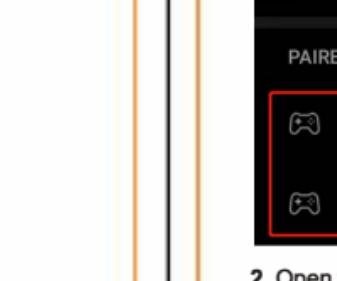







Download the "QMacro"

● Update Steps

1. The left joycon needs to press and hold the "-" and "screenshot" keys to enter the search mode; the right joycon needs to press the "+" and "HOME" keys to enter the search mode, and the 3/4 LED lights flash quickly







3.Click "Details"

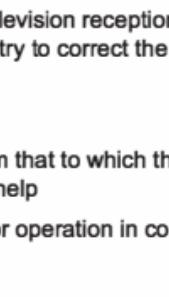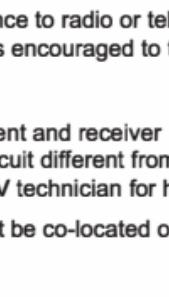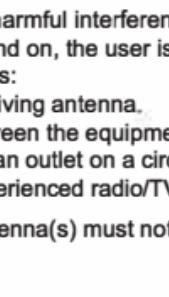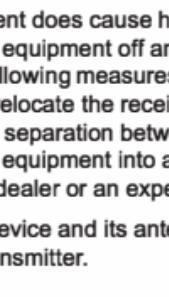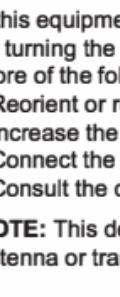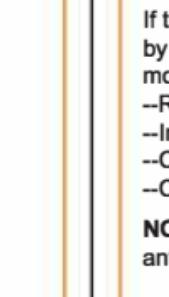

2. Open the Bluetooth connection to QMacro





4.Click "Firmware Upgrade"

5. After the upgrade, you need to turn off the controller and reconnect the Switch

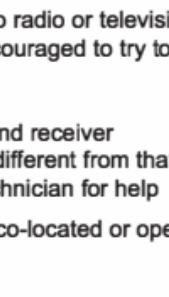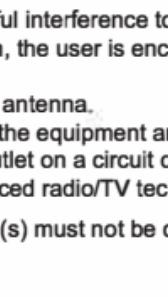
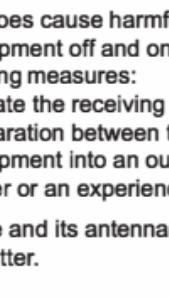
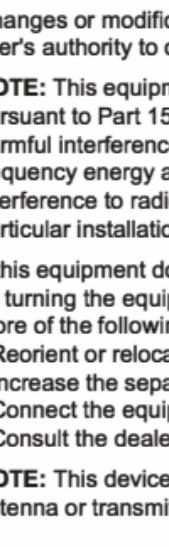


RF exposure:




The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

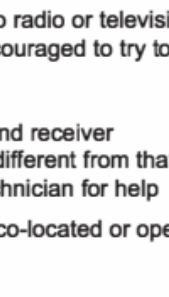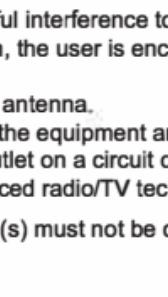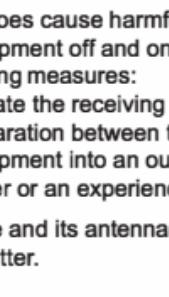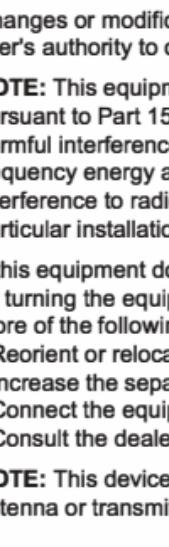




6. After the upgrade, you need to turn off the controller and reconnect the Switch

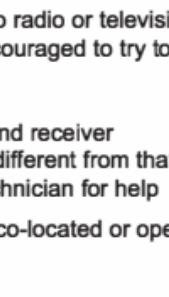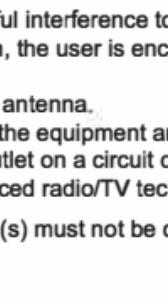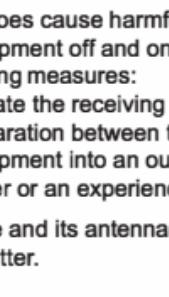




7. After the upgrade, you need to turn off the controller and reconnect the Switch

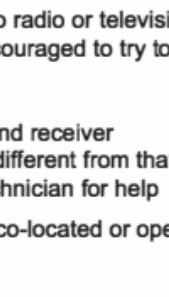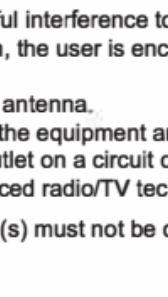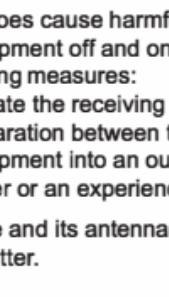




8. After the upgrade, you need to turn off the controller and reconnect the Switch

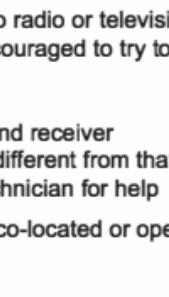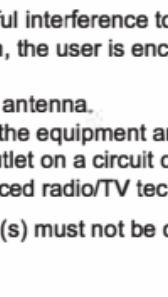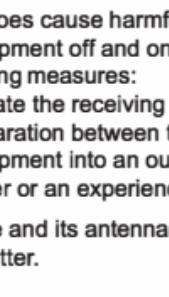




9. After the upgrade, you need to turn off the controller and reconnect the Switch

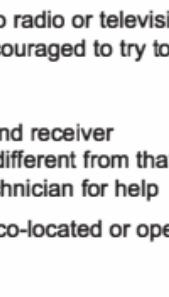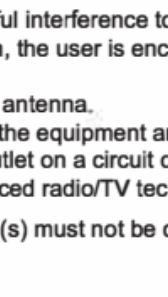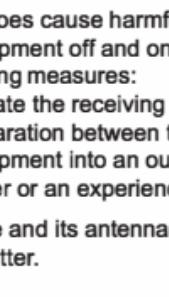




10. After the upgrade, you need to turn off the controller and reconnect the Switch

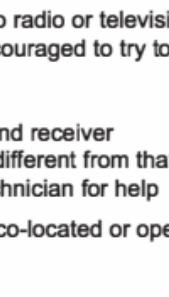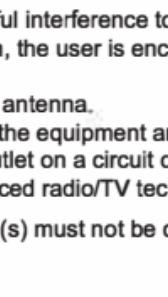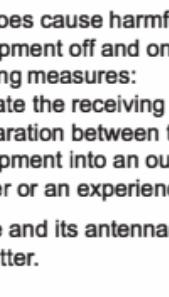




11. After the upgrade, you need to turn off the controller and reconnect the Switch

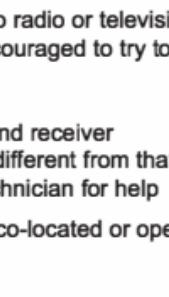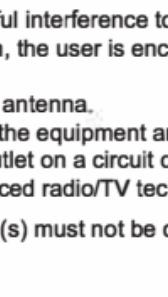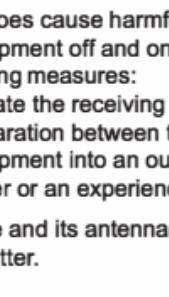




12. After the upgrade, you need to turn off the controller and reconnect the Switch

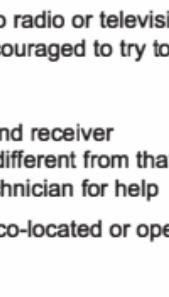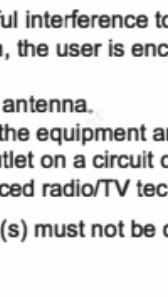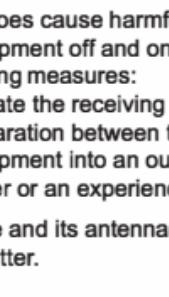




13. After the upgrade, you need to turn off the controller and reconnect the Switch

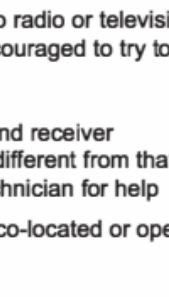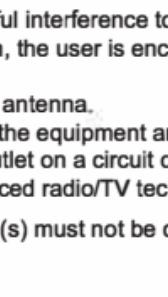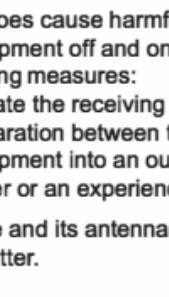




14. After the upgrade, you need to turn off the controller and reconnect the Switch

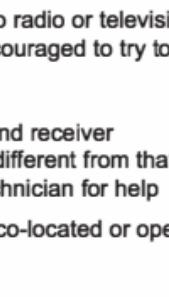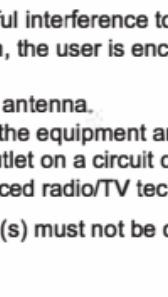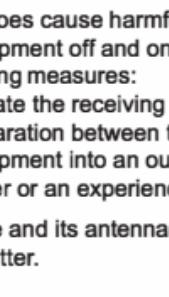




15. After the upgrade, you need to turn off the controller and reconnect the Switch

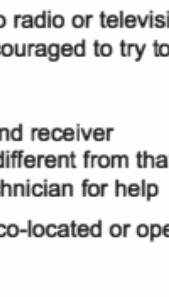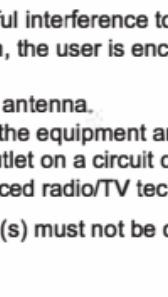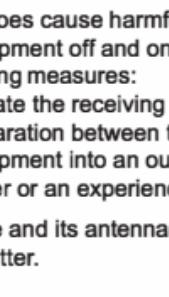




16. After the upgrade, you need to turn off the controller and reconnect the Switch

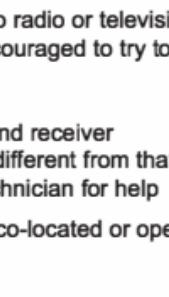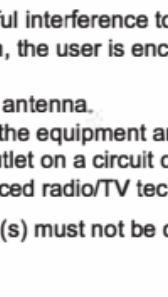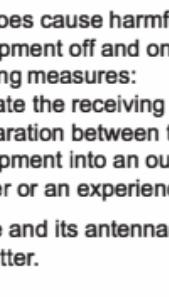




17. After the upgrade, you need to turn off the controller and reconnect the Switch

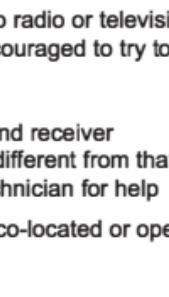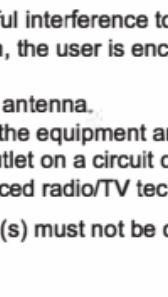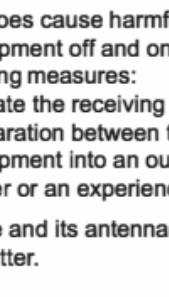




18. After the upgrade, you need to turn off the controller and reconnect the Switch

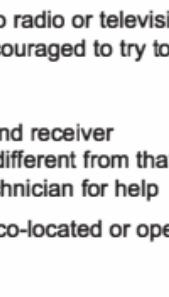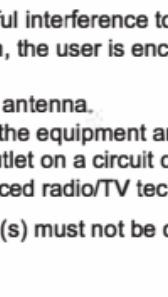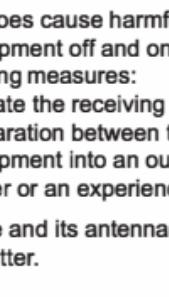




19. After the upgrade, you need to turn off the controller and reconnect the Switch

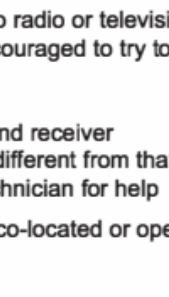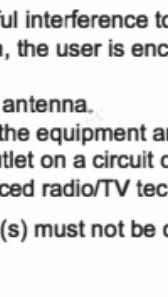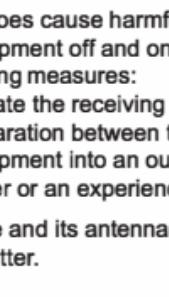




20. After the upgrade, you need to turn off the controller and reconnect the Switch

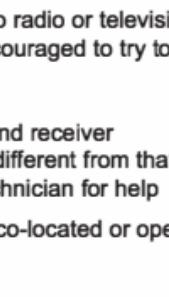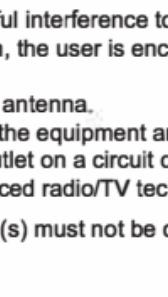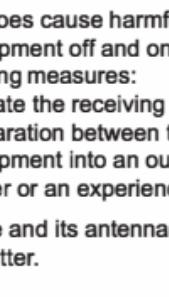




21. After the upgrade, you need to turn off the controller and reconnect the Switch

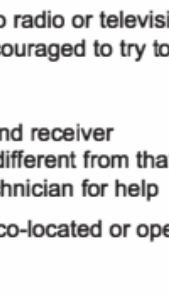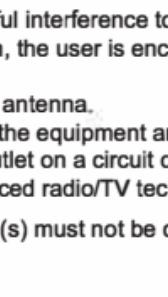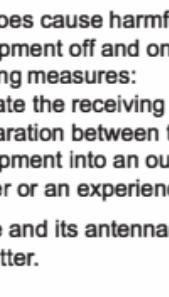




22. After the upgrade, you need to turn off the controller and reconnect the Switch

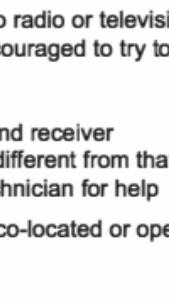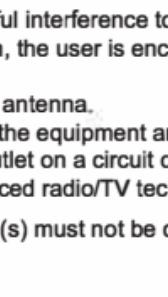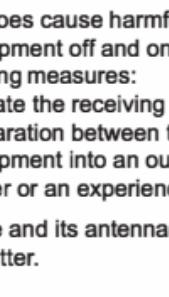




23. After the upgrade, you need to turn off the controller and reconnect the Switch

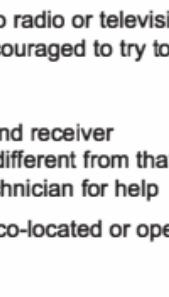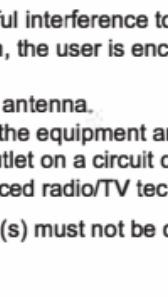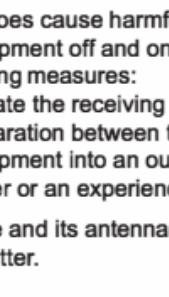




24. After the upgrade, you need to turn off the controller and reconnect the Switch

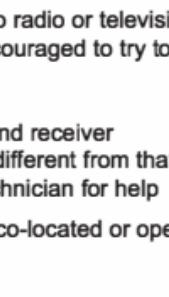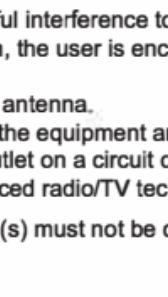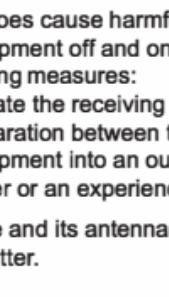




25. After the upgrade, you need to turn off the controller and reconnect the Switch

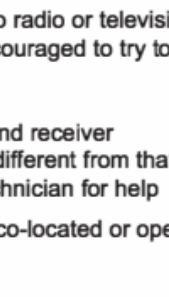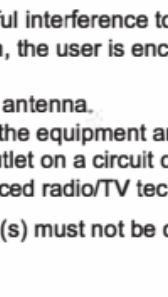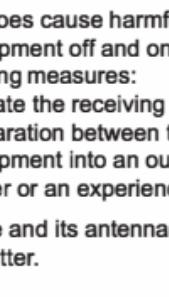




26. After the upgrade, you need to turn off the controller and reconnect the Switch

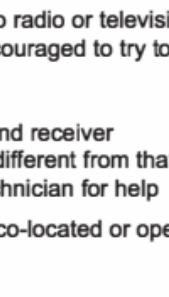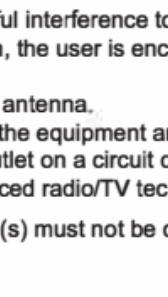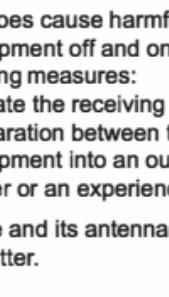




27. After the upgrade, you need to turn off the controller and reconnect the Switch

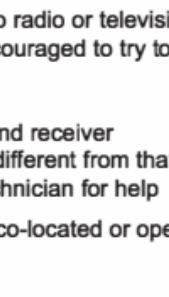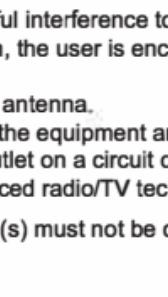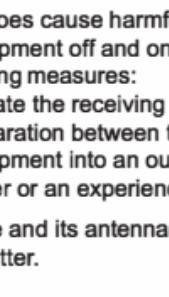




28. After the upgrade, you need to turn off the controller and reconnect the Switch

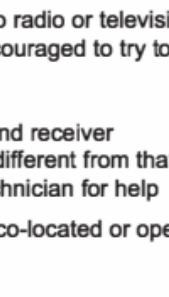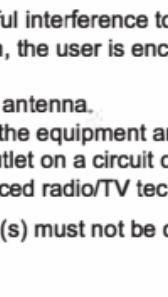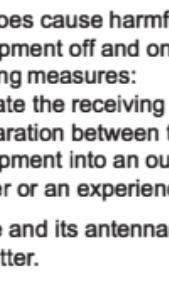




29. After the upgrade, you need to turn off the controller and reconnect the Switch

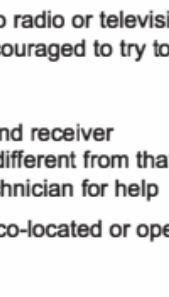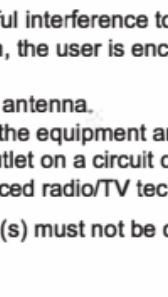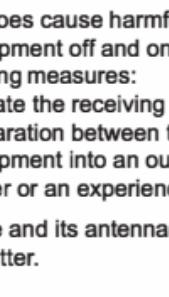




30. After the upgrade, you need to turn off the controller and reconnect the Switch

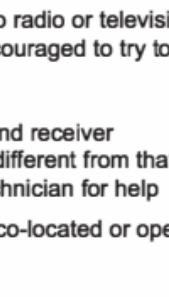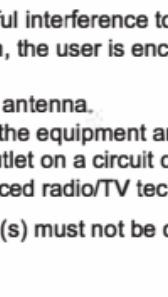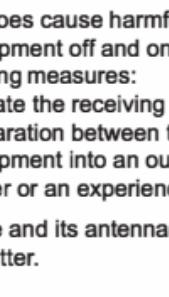




31. After the upgrade, you need to turn off the controller and reconnect the Switch

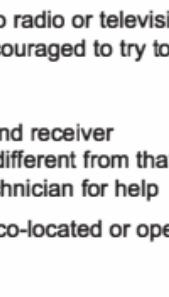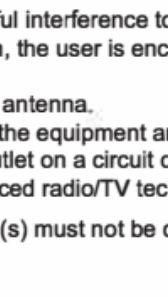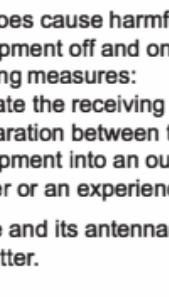

32. After the upgrade, you need to turn off the controller and reconnect the Switch

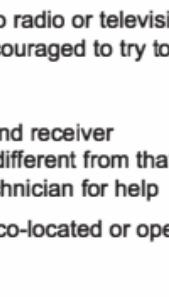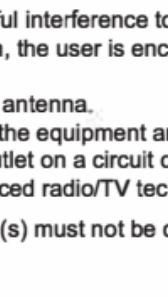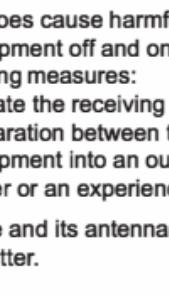

33. After the upgrade, you need to turn off the controller and reconnect the Switch

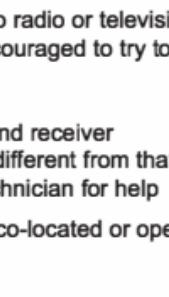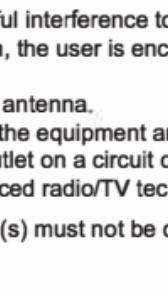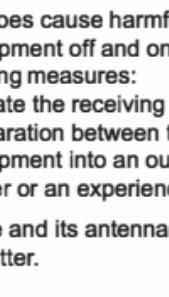

34. After the upgrade, you need to turn off the controller and reconnect the Switch

