


6. Transmitter Details


6.1 Functions

- TRANSMITTER FUNCTIONS

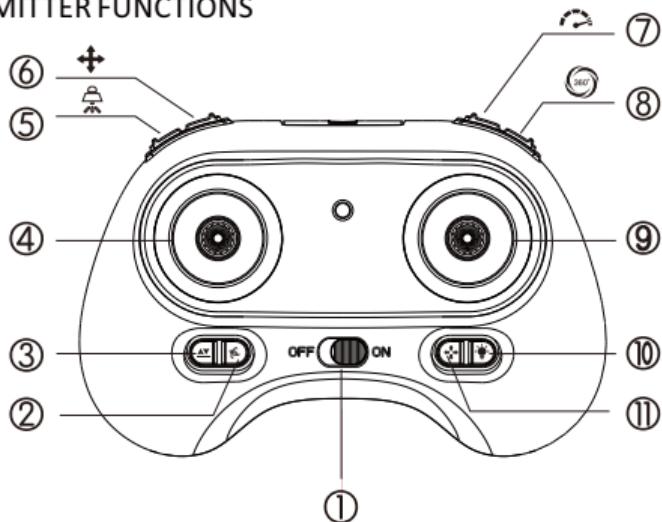

① Switch	⑦ High/medium/low speed mode
② Level Calibration	⑧ 360°Flip
③ One Key Start/ Landing	⑨ Right Joystick(Direction Control)
④ Left Joystick(Height/Spin)	⑩ LED Control
⑤ Light Show	⑪ Trimmer
⑥ Headless Mode	

6.2 Transmitter Battery Installation

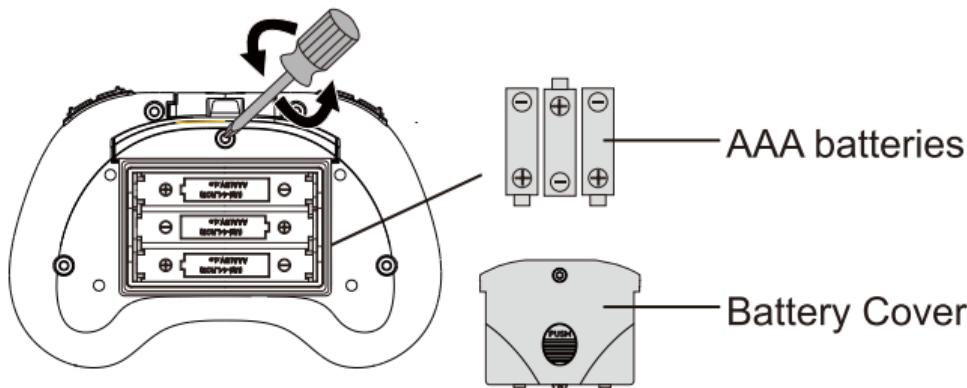

When the transmitter's battery is low, its indicator light will flash.

Notes


*Install battery correctly according to the polarity indications.

*Do not mix new and old batteries.

*Do not mix different types of batteries.

Please check the contents of the “Battery Usage Guidelines” carefully!

7. Flight

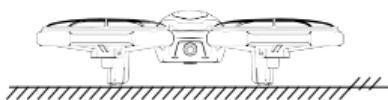

Place the drone on a flat and level surface with the head forward and the tail towards the pilot.

1. Turn on the drone

Press and hold the power button on the drone for two seconds to turn it on and place it on a level surface. The lights on all four axes will light up red, green, and blue in sequence.



2. Turn on the transmitter

When the transmitter indicator light is on and all the drone indicators light up in rainbow colors, it means the transmitter and drone are paired successfully.




3. Drone horizontal calibration

Tilt both control sticks inward simultaneously to calibrate the drone (as shown in the image on the left). or press to calibrate the drone. After the beep sounds, the drone's indicator light will flash green. Calibration is complete once the light remains steady.

If the drone cannot fly smoothly, perform a level calibration.

During calibration, the drone must remain level; otherwise, calibration accuracy will be compromised.

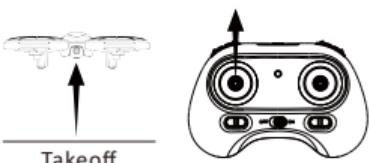

4. Take off



After pairing, slowly push up the left joystick and the drone will take off. Or press to launch the drone.

8. Operation Method



8.1 Joysticks

Use the left joystick to control flight altitude and spin, the right joystick control forward, backward, left turn, and right turn flight directions.

LEFT JOYSTICK

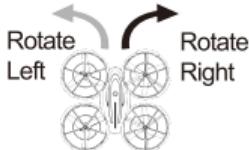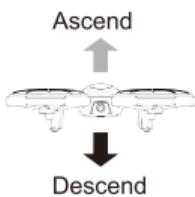

RIGHT JOYSTICK

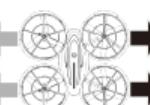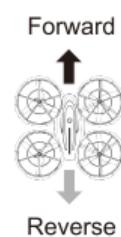

8.2 One Key Start/Landing

Press the button and the drone blades rotate and automatically fly to an altitude of 1.5 metres. Press the button again to land the drone in one click.

