

Product Manual

Sp/lit

white clear




TINYL

English 1-5
日本語 6-10

CD Player

Button Description

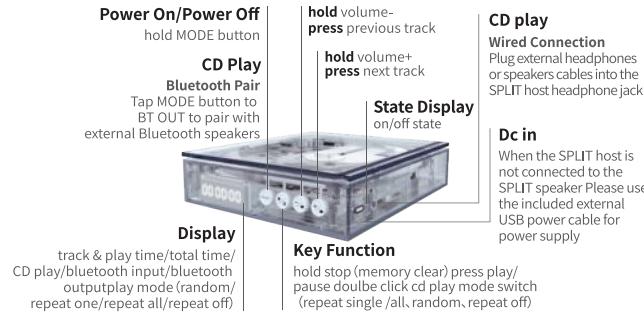

CD Player Button Description

Wireless connection to external Bluetooth speaker devices

- Step 1 Press the MODE button to enter BT-OUT mode
- Step 2 Turn on the external speaker, Adjust to Bluetooth pairing status
- Step 3 Bluetooth connection successful

Wireless connection to SPLIT

- Step 1 Press the MODE button to switch to BT-OUT mode
- Step 2 Turn on the power, Verify that the speaker is in Bluetooth pairing mode (blue light flash)
- Step 3 Bluetooth connection successful

Note: If the device is independent, connect the power supply

Products Overview



CD Player



USB Cable



Product Manual



Warranty Card

CD player&Speaker all in one

Button Description



Hold volume+
Press next track
Hold volume-
Press previous track

Hold power on/power off

Press pause/play

Double-click
reset the bluetooth

Rotation
volume+/volume-

Display
track & play time/total time
cd play/bluetooth input/bluetooth output

cd play mode (repeat single/all/random/repeat off)

Hold power on/off
Press player mode switch

CD player&speaker all in one

Complete Model

Bluetooth pair

Press the mode button to switch to the BT-IN mode. Mobile phone connection Bluetooth signal "SPLIT"

CD PLAY


Press MODE button to switch to CD PLAY mode. It will be playing the cd disk.

Bluetooth output

Press the MODE button to switch to BT-OUT mode. Connects to external Bluetooth devices.

Bluetooth speaker

Description

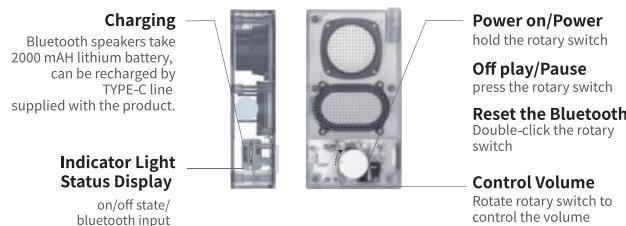

Bluetooth speaker Independent Use

Step 1 Automatically enter Bluetooth search mode after power on. The indicator light is on and the blue light is flashing.

Step 2 Mobile phone connection Bluetooth signal "split".

Main Specifications

Supported formats	CD-DA/MP3 (CDR-RW)	Power Supply	DC5V/2A TYPE-C interface/built-in battery 2000mAh
CD-R/RW	MP3 (32-320 kbps)	Maximum external dimensions	230mm*138mm*35mm
Bluetooth output protocol	SBC and AAC	Mass	595g
Output (main unit)	3.5mm stereo audio output jack/Bluetooth 5.3	Accessories	TYPE-C power cable *1, CD player *1
Power	5W, standby power 0.5W		

*This product does not support the use of dry batteries

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction

3

1

2

4

5

Issues & Solutions

Issue

Solution

Unable to power on, power indicator is not lit.	Please use a TYPE-C cable to connect an external power source to activate the battery.
The speaker has no sound.	Please press the MODE button to confirm it's in CD mode (No sound in BT-OUT mode).
Skipping sound occurs at maximum volume during CD playback.	Low battery level, please charge promptly.
After connecting the headphones, the volume is low.	Please press and hold the button to increase the volume.
The screen displays "L O".	Low battery level, please charge promptly.

6

7

8