

WIRELESS CONNECTION DESCRIPTION

Switch the power button to ON to turn on the speaker , a tone will be heard and the speaker enter wireless Mode . Switch the power button to OFF to turn off the speaker.

Turn the speaker on , and it will automatically enter into pairing mode and the LED will flash . On your WIRELESS enabled device , navigate to the WIRELESS settings menu , turn on the wireless feature , and search for new devices . Wait a few seconds and select "FLAME 3500" The speaker will emit a tone when successfully paired .

LIMITED WARRANTY

This Limited Product Warranty is provided by Mr. DJ

Mr. DJ Company warrants to Customer that product is free from defects in materials and workmanship under normal use during the warranty period of 90 days for parts and 1-year labor. If the product fails to conform to warranty then Mr. DJ or its authorized service will either repair or replace any noncompliance within the Warranty .Please retain the original dated receipt as evidence of proof of purchase.


MATTERS NEEDING ATTENTION

- 1- Read these instructions thoroughly before using this item.
- 2- Keep these instructions for future reference.
- 3- Heed all warnings.
- 4- Follow all instructions.
- 5- WARNING: To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids.
- 6- Clean only with a dry cloth.
- 7- Do not store or operate this product near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
- 8- Unplug the unit during lightning storms or when unused for long periods of time.
- 9- When wiring this unit and all other equipment used in connection to this unit make sure that all of your equipment is turned OFF.
- 10- Before placing, installing, rigging, or suspending any product, inspect all hardware, suspension, cabinets, transducers, brackets and associated equipment for damage. Any missing, corroded, or non-load rated component could significantly reduce the strength of the installation, placement or array. Any such condition severely reduces the safety of the installation and should be immediately corrected. Use only hardware which is rated for the loading conditions of the installation and any possible short-term, unexpected overloading. Never exceed the rating of the hardware or equipment.
- 11- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been .



Model: FLAME 3500 SPEAKER

PCB FUNCTION

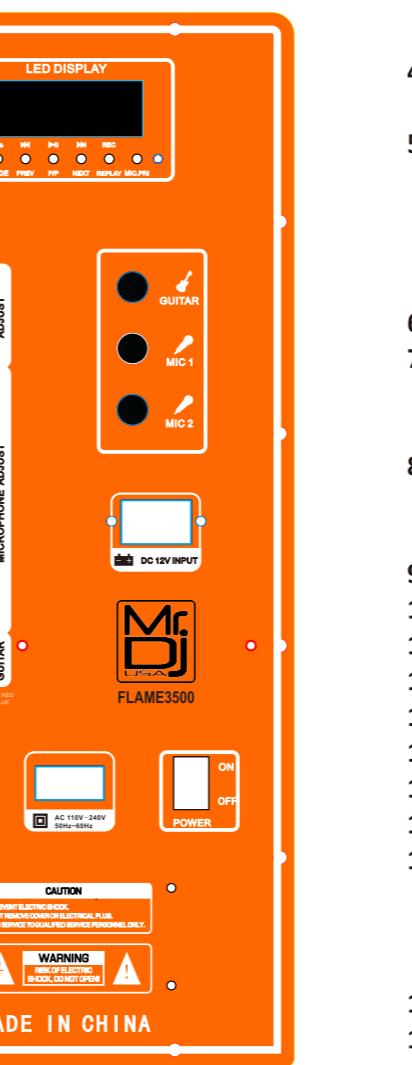

1. USB socket
2. TF socket
3. Mode button : quick press to change the modes: TF or USB / FM / AUX / WIRELESS
4. Previous button : to play previous song .
- 5 .Play / Pause button: Quick press to play or pause. Long press and hold 3 seconds to TWS connect with another model speaker
6. Next button : to play next song
- 7.REC button : when us record function please insert a USB or TF card
- 8.Volume knobs: turn the knobs clock wise to increase the volume
9. AUX IN socket
10. Treble volume adjustment
11. Bass volume adjustment
12. Mic volume adjustment
13. Mic treble volume adjustment
14. Mic bass volume adjustment
15. Mic function delay
- 16.Guitar Volume adjustment
17. Charge LED indicator : when charging RED light on , when fully charged the light turn BLUE.
18. LED Light ON /OFF
- 19: AC Input : AC Charging slot
20. Power ON/OFF
21. DC 12V charging slot
22. Mic2 slot
- 23.Mic1 slot
24. Guitar slot

Specifications

1. Power supply:DC12V 60Hz
2. Maximum power consumption:60W
3. Power consumption is stand by mode:6W
4. Output power: 60W
5. Woofer:15"
6. Tweeter:1.5"
7. WIRELESS/TF /USB/FM
8. Rechargeable battery:12V4.5A


Display

1. Input mode: The LED display will display the input mode information for USB/MICRO SD/Wireless function/AUX/FM. When a USB/MICRO SD drive is connected to the USB/MICRO SD port, the unit will automatically switch to USB/MICRO SD mode and start playing audio files, MP3 automatically
2. Track number: The track number being played from USB/MICRO SD will be displayed. FM Mode: Quick press the "play/pause" button automatically scan all radio station

TWS Usage Settings

1. TWS connection: TWS connection is only for two active speakers
2. Turn on the speakers: Press the MODE button to change the mode to Wireless
3. Press and hold the TWS button for 3 seconds as the 2 speakers will be linked
4. Connect the phone: Open the phone's Wireless settings, find and connect the device
5. Select music from your phone and enjoy the TWS function playing on both speakers
6. Disconnect TWS : Long press TWS button for 3 seconds

Remote Control

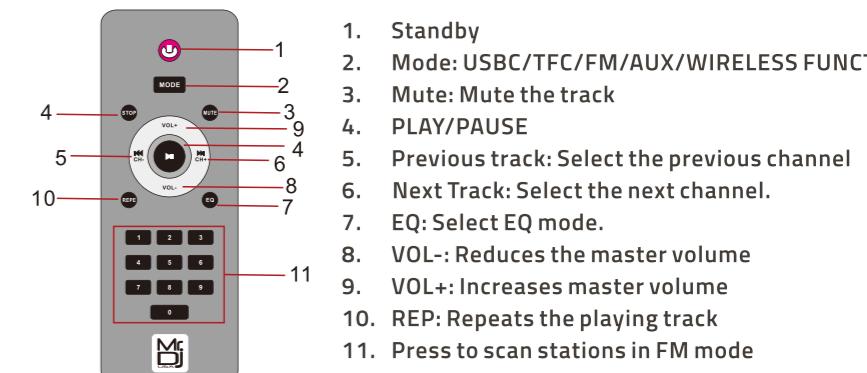

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.