


148*210mm

装订页

单双面印制

Fasonbaby

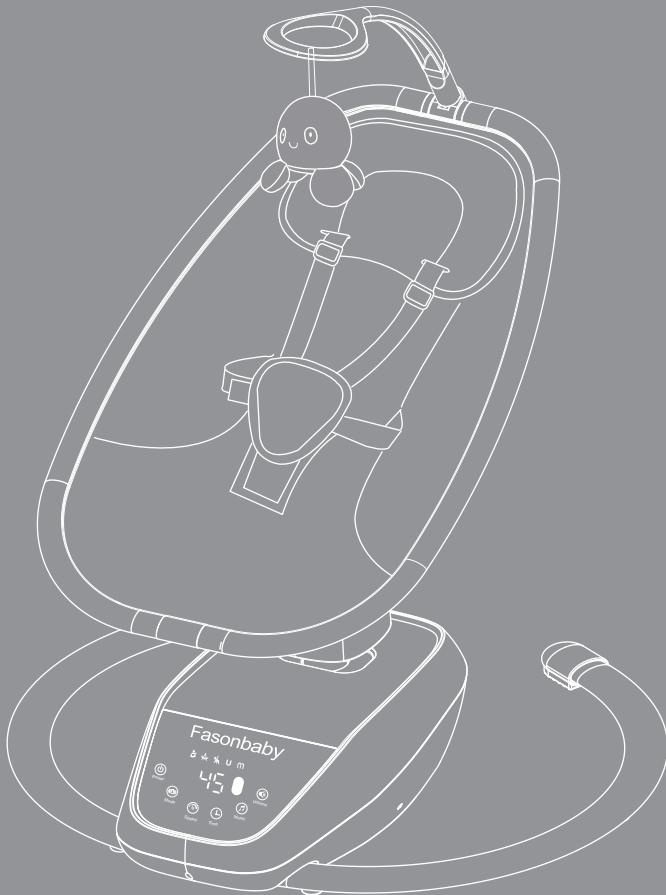

BB0070 AUTO SWING CHAIR USER MANUAL

Read all instructions before assemble and use of the product.
Keep instructions for future use. Do not use the product if it is damaged or broken.

CONTENTS

Warning	01
Parts list	03
Product specification	04
Installation guide	04
Instructions for use	07
Display of errors	09
Instructions for remote control	10
Seat angle adjustment	12
Product disassembly instructions	13
Attentions	14
Cleaning & Maintenance	15
After-sales support	15

⚠️ WARNING

FALL and STRANGULATION HAZARDS: Infants have suffered head injuries falling from product and have strangled in straps.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **NEVER** lift or carry baby in product.
- **STOP** using product when infant attempts to climb out (approximately 9 months).
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.
- **ALWAYS** place product on floor. Never use on any elevated surface.

SUFFOCATION HAZARD: Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway.

- **ALWAYS** keep product seat fully reclined until infant is at least 4 months old AND can hold up head without help.
- **NEVER** use on a bed, sofa, cushion, or other soft surface. Babies have suffocated when seats tipped over on soft surfaces.
- Do not move or lift this product with the baby inside it.
- The product shall only be used with the recommended transformer.



This icon indicates that the unit contains a button battery or a cell battery.

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- This product contains a CR2025, DC 3V coin battery. A coin battery can cause serious internal chemical burns if swallowed.
- Non-rechargeable batteries are not to be recharged.



⚠️ WARNING

- Do not force discharge, recharge, disassemble, heat above 132°F(60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Cautions: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

PARTS LIST

- | | | |
|----------------------|-------------------|-----------------|
| ① Main frame | ② Bottom tubes *2 | ③ Support frame |
| ④ Seat support frame | ⑤ Seat frame | ⑥ Toy bar |
| ⑦ Remote control | ⑧ Adaptor | ⑨ Screwdriver |
| ⑩ Screw*4 | | |

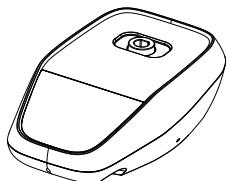


①

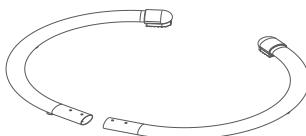


②




③

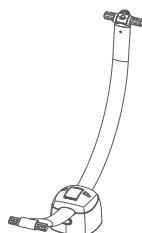

④

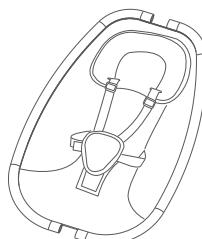

⑤

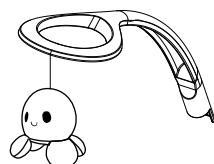

⑥



 
⑦



⑧



⑨



⑩

* The above pictures are only for reference, subject to the actual product.

PRODUCT SPECIFICATION


Product Name:	AUTO SWING CHAIR
Model Number:	BB0070
Input Voltage:	100-240V
Output Voltage:	5V---
Output Current:	2A
Frequency:	50/60HZ
Main Material:	Polyester fiber, aviation aluminum base bracket

INSTALLATION GUIDE

① Bottom tubes installation


Insert the two bottom tubes into the main frame follow the direction of the Arrows.
Locking 4 screws to secure base.

NOTE: the bottom tube will not wobble when the 4 screws are tightened.

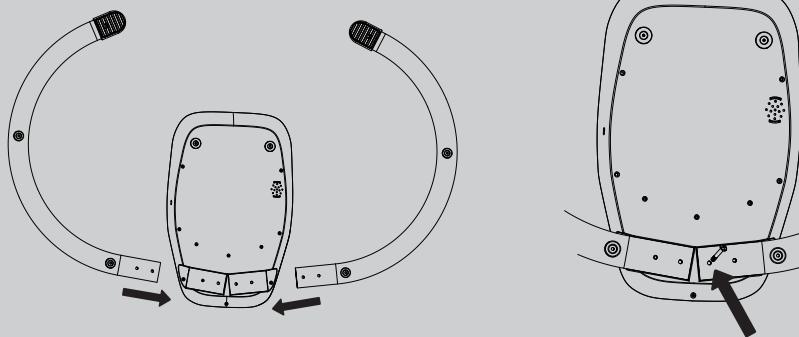


② Seat support frame installation

Insert the support frame on the triangle column above the main frame.
Until you hear the "click" sound of the key, the installation is in place.

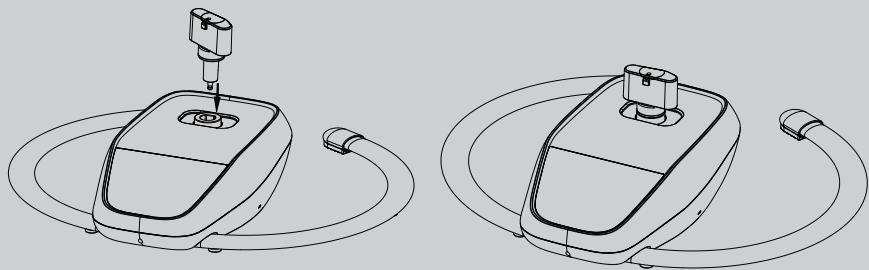

③ Seat set installation


Insert the seat support frame on the triangle column above the main frame .
Until you hear the "click" sound of the key, the installation is in place.

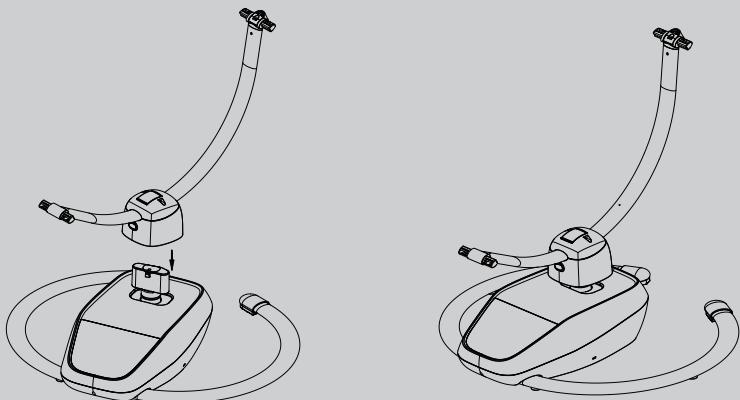

④ Seat frame installation


Gently insert the iron pipe on the seat frame into the support frame, until the locked spring plate pops up and locks.

Pay attention to identify the orientation of the seat before installation.

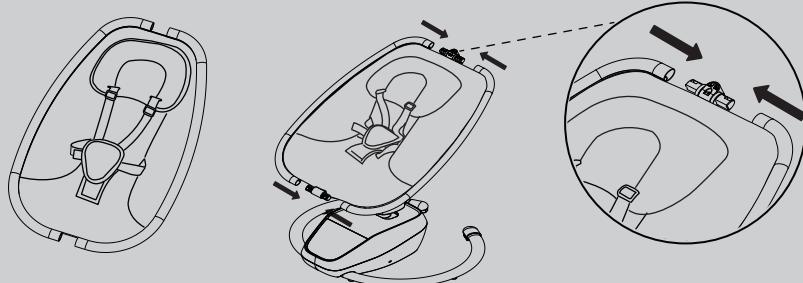

⑤ Toy rack installation

Insert the lower part of the toy stick into the groove at the top of the seat. Please note that the toy stick cannot be taken out easily after it is fixed.

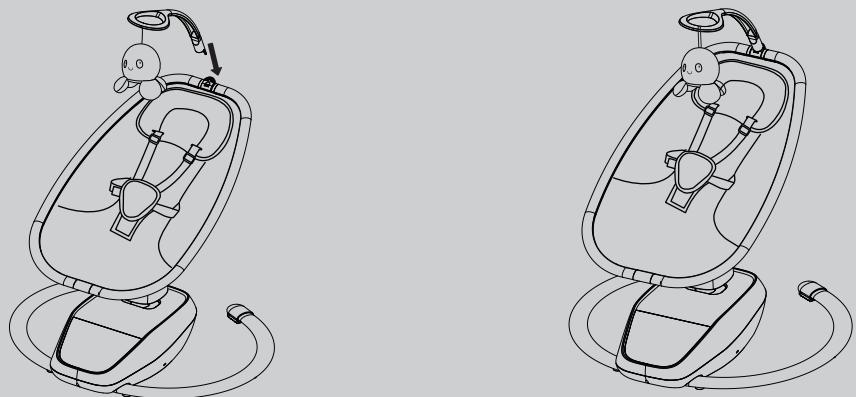


INSTRUCTIONS FOR USE



① Power supply selection

It is recommended to use 5V-2A adapter power which standard for this product, plug the adapter equipped with the product into the 100V-240V output socket of the household directly.

And plug the other end of the adapter into the Type-C jack on the right of the main frame. It is recommended to use indoors, away from damp places.

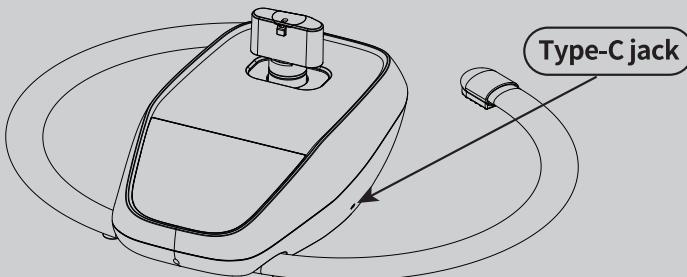

② Touch panel button function

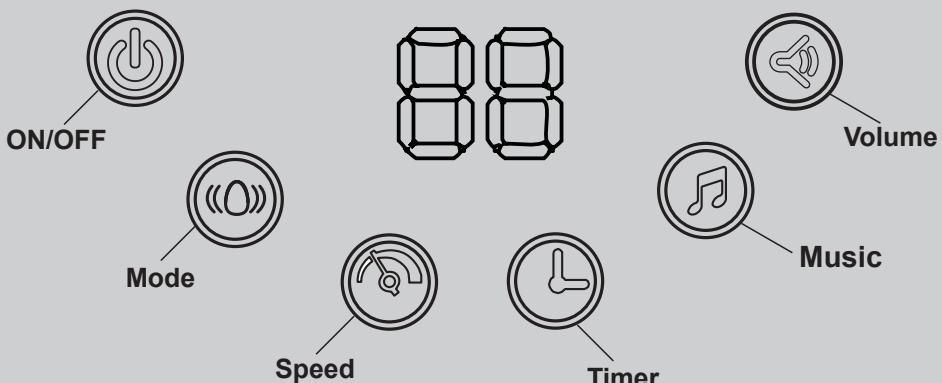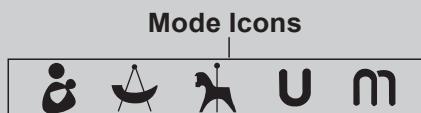

The power button:

- Press this button to turn on/tun off.
- It will turn off if no operation within five minutes after it is turned on.
- When the swing is working, pressing this button and all functions stop working, including music and timer.

Timing function button:

- Turn on the button to control the timing time, short press to adjust.
- The timer is up to 45 minutes, it is 5/10/20/30/45 minutes in a cycle. Automatically turn off after time expires.

Music switch:

- Press the music button to open music, select tracks, play them in sequence, and play them in a loop.
- Press the music button briefly to cycle through songs, and long press to pause the music.
- When the music function is turned on, the volume is level 3.

Volume buttons:

- Single press the volume to cycle from large to small.

Swing mode switch:

- There are 5 swing modes set by default, consisting of different combinations of up, down, left and right swing counts.
- When swinging for mode switching, corresponding to the corresponding mode will light up, press the mode button, mode cycle back and forth switching.



Speed button:

- Turn on the power switch, press the swing mode button, the digital light will show speed 1, press the gear adjustment button, the speed switches from slow to fast cycle.

Scene mode:



Note: These three modes are smart swing modes. Runs always at speed 1. Press the speed adjustment key to turn on/off.

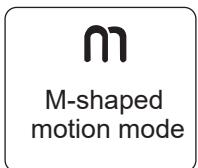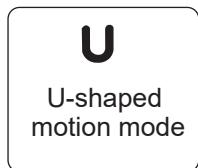

4-level speed adjustment, the speed switches from slow to fast cycle.

• Motor protection function

When the product is blocked by external forces during normal swinging, the program detects that the product swinging is blocked and enters into the blocking protection function, and the music, timing, and swinging function will be stopped. Please clean items and restart.

DISPLAY OF ERRORS


- **E1:** Indicates that the left and right swing photoelectric sensors do not detect the signal or the left and right motors and transmission mechanism are not working.
- **E2:** Indicates that the upper and lower swing photoelectric sensors are not detecting a signal or that the upper and lower motors and transmission mechanism are not functioning.
- **E3:** indicates that the left and right swing Hall sensors are not detecting a signal.
- **E4:** Indicates that no signal is detected by the up and down swing Hall sensor.

Note: If the above or other abnormalities occur, you can try shutting down - unplugging the power cord - restarting, which can basically solve the problem. If it still cannot return to normal, please contact us through the after-sales email!

INSTRUCTIONS FOR REMOTE CONTROL

- Note:**
- In order to control the cradle with the remote control, you must point the remote control to the control panel!
 - To be managed only by adults!
 - Remote control device is not a toy!
 - Pull the PVC stopper at the end of the remote control before use to activate it.
 - The applicable range of the remote control is valid **within** 4 meters of the host control panel.

When using the product remote control for the first time, please pull out the battery isolation film from the bottom of the battery and keep it aside; when not in use, you can insert the isolation film back to the original position to avoid power consumption and prolong the remote control device life time.

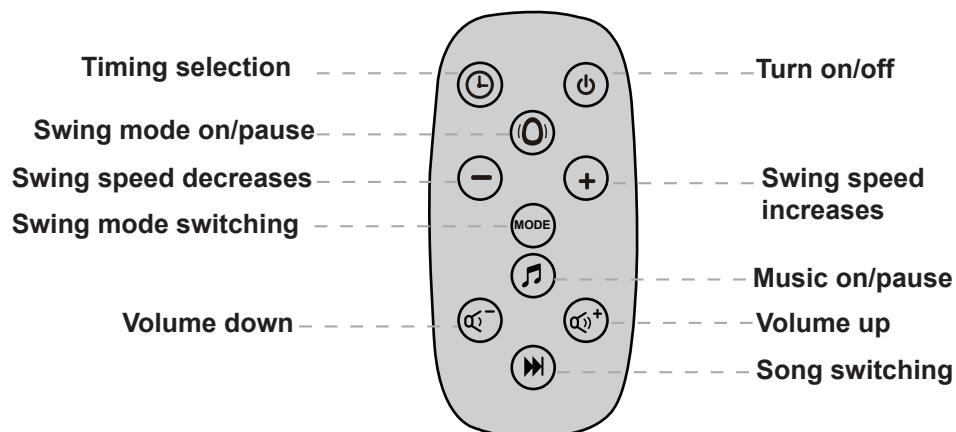



Press once, the power is turned on, and the product enters standby mode; press again, the power is turned off.



Start this button to turn on the timing switch, The timer is up to 45 minutes, it is 5/10/20/30/45 minutes in a cycle.



After the power is turned on/pause, press this button to start swinging, and the first mode starts to swing by default.



While swinging, press the buttons to decrease the speed by one level, up to the minimum level (Level 0).



While swinging, press the buttons to increase the speed by one level, up to the maximum level (Level 4).



When the swing function is on, press this button, there are 5 modes in total, switching in turn. The corresponding mode display will light up.



Press this button, the music plays automatically, then press the music off. The song is played in a repeated loop as default music.



While music is playing, press the +/- button to increase/decrease the volume by one level until the maximum level (5th level)/ minimum level (0th level).




While the music is playing, this key is only for use when the music selects the next song. Press it once and the music automatically switches to the next song. This is a continuous cycle of switching.


SEAT ANGLE ADJUSTMENT

After pulling up the handle of the main frame(Close-up of the picture below), you can adjust the seat angle freely. After adjusting to the appropriate angle, pull the handle downward to lock the seat, and the seat angle adjustment can be completed(The highest angle is 28°, the lowest angle is 15°).

- Remember that the backrest cannot be adjusted when the child is on the swing, otherwise it may cause unexpected injury to the baby.

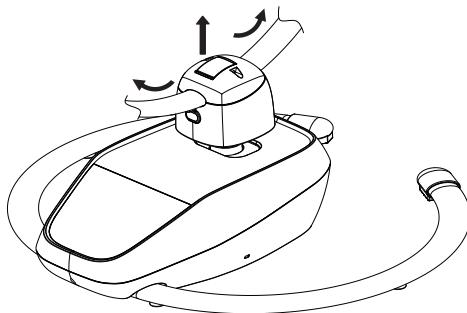

Seat Rotation: Hold the seat indicated by the arrow with both hands to rotate, only 90 degrees to the left or right, the seat cannot be rotated 360 degrees, otherwise the product may be damaged.

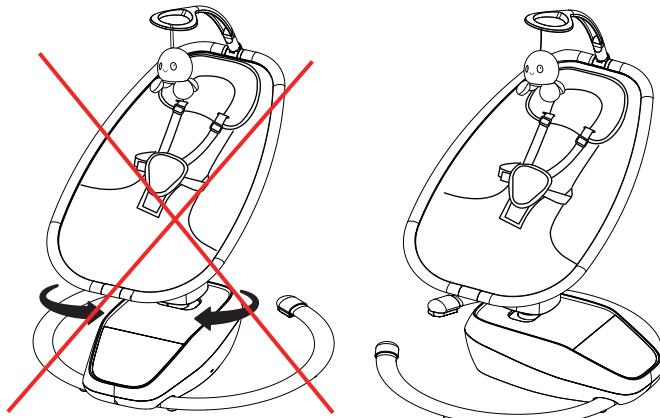


360 degrees

90 degrees

PRODUCT DISASSEMBLY INSTRUCTIONS

Remove the seat: Press the spring plate at the point indicated by the arrow, and then pull up the seat on the left and right sides respectively, the seat can be removed.

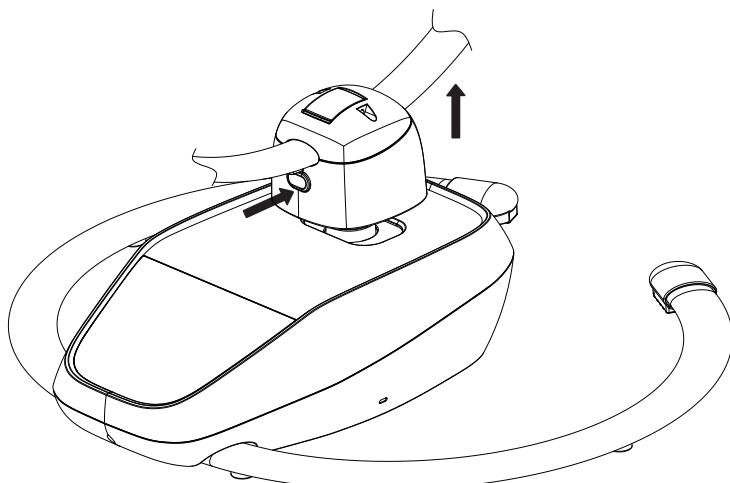

ATTENTIONS

- After connecting the power, you can press the music button to open the music function alone without turning on the swing function.

- **The motor has protection mechanism:**

When the product in a swing state is blocked by a external force, the program will detect the swing of product is blocked and automatically enter the protection mechanism to protect the key components from being damaged, At this time, all functions will stop. Just turn off the power supply and restart to work normally.

- **Usage of safe belt:**

First unfasten the safety belt and place it in the suitable position. Then place baby in the suitable position. Buckle the seat belt and the waist belt together; Seat belt position must be installed correctly to ensure baby's safety.

Bluetooth Name

BY_BABY

Turn on the mobile phone to search for Bluetooth signals

BY_BABY, and then use the mobile phone to pair bluetooth and connect. Choose the music you like to play.

CLEANING & MAINTENANCE

Seat cleaning: The seat cloth cannot be disassembled and washed. If you need to clean it, you can disassemble the seat set and wipe it with a wet cloth. Do not wash it with water directly.

Product shell/pipe fittings: The product is not waterproof. Do not wash it directly. Please wipe it with a wet cloth.

Toy cleaning: Toys can be disassembled and washed. Be sure to hang dry them before playing with children.

AFTER-SALE SUPPORT

We support lifetime friendly customer service guaranteed. If you have any questions, please contact us via email (support03@fasonbaby-global.com). We will be happy to serve you and guarantee a 100% satisfactory treatment plan.

 support03@fasonbaby-global.com

