

User manual

(Laptop GLX259)

Foreword

Safety warning:

To avoid the risk of fire, electric shock, and personal injury, follow these basic safety precautions when using this computer, including the following:

1. Read these instructions carefully before using the computer;
2. Place the computer on a stable surface before setting it up;
3. Keep the computer away from high temperatures, humidity and dust;
4. Do not hit or drop the computer to avoid damage;
5. Do not spill any liquid on the computer to avoid damage to the computer or cause burning;
6. Do not block the vents of the computer or other open slots;
7. If you do not use the computer for a long time, please unplug the plug;
8. Do not disassemble the computer yourself. For safety reasons, please operate it by a professional.

Thanks for supporting, I wish you a happy stay!


Chapter 1 Know Your Computer

1.1 Packing List

When receiving the mini pc, please open the package and carefully remove the product. If there is any omission or damage, please contact the supplier immediately.

1.2 Interface Description

Screen view

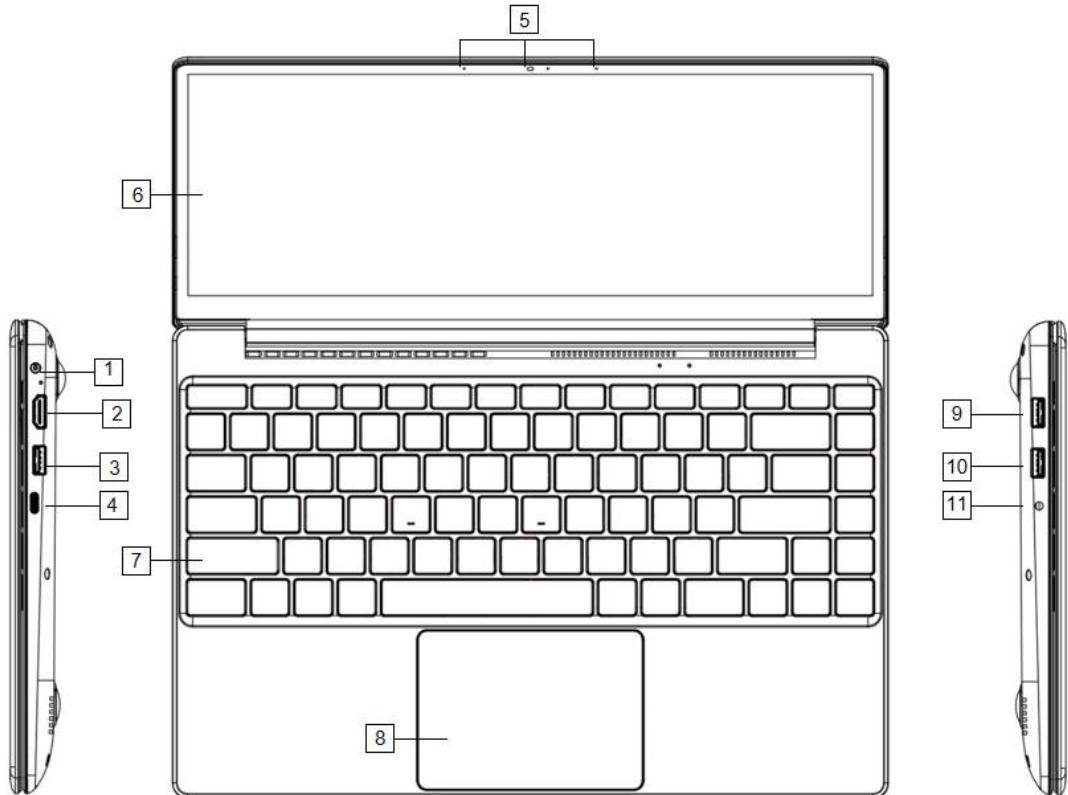

#	Item	Description
1	Charger connector	Connects to an AC adapter.
2	HDMI Connector	HDMI 1.4,Supports high-definition digital video connections.
3	USB 2.0 Port	Connects to USB devices.
4	Type-C	USB 3.1 function,Connects to USB devices.
5	Camera & MIC	Web Camera for Video communication. Digital MIC for Talking communication
6	Display Panel	14.1inch High-definition Displays computer output
7	Keyboard	Backlight Keyboard, For entering data into your computer.
8	Touchpad	Touch-sensitive pointing device. The touchpad and selection buttons form a single surface.
9	USB 3.0	Connects to USB devices.
10	USB 3.0	Connects to USB devices.
11	Audio jack	Connects to headphone

Using the keyboard


To activate hotkeys, press and hold the **<Fn>** key before pressing the other key in the hotkey combination.

Hotkey	Function	Description
<Fn>+<Esc>	Sleep	Puts the computer in Sleep mode.
<Fn>+<F1>	WIFI toggle	Turns the WIFI on and off
<Fn>+<F2>	Voice toggle	Turns the voice on and off
<Fn>+<F3>	Touchpad toggle	Turns the built-in touchpad on and off.
<Fn>+<F5>	Bluetooth Toggle	Turns the Bluetooth on or off.
<Fn>+<F7>	Display toggle	Switches display output
<Fn>+<F8>	Display off	Turns the display screen backlight off to save power. Press any key to return
<Fn>+<F9>	Keyboard backlight	Turns the keyboard backlight on and off
<Fn>+<F10>	Prt Scr	Copy the current full screen section
<Fn>+<F11>	Scr Lk	Turns the scroll lock feather on or off
<Fn>+<F12>	Num Lk	Switch key of numeric keyboard in secondary keyboard.
<Fn>+<↑>	Brightness Up	Increases the Screen Brightness
<Fn>+<↓>	Brightness Down	Decreases the Screen Brightness
<Fn>+<↔>	Volume Down	Decreases the sound volume
<Fn>+<→>	Volume Up	Increases the sound volume


Chapter 2 Know the Bios

2.1 Bios Setting


Main menu: Set the system time, date, and view related information, such as BIOS, EC version, CPU, memory, etc.

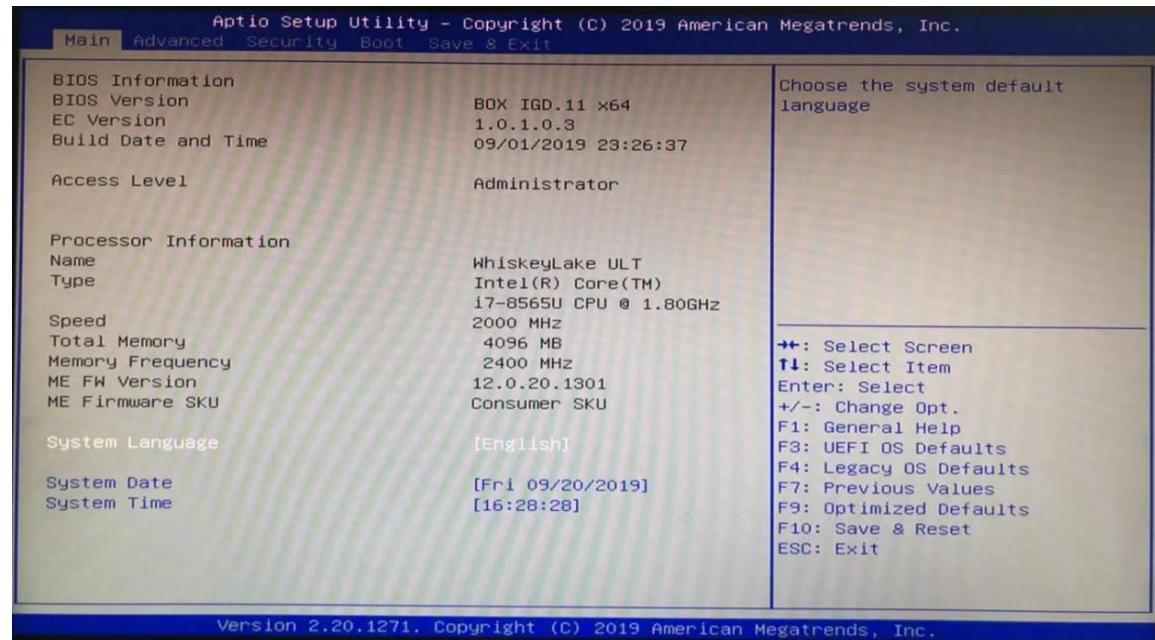

Advanced menu: The following advanced settings can be made, SATA mode selection: The hard disk working mode can be set.

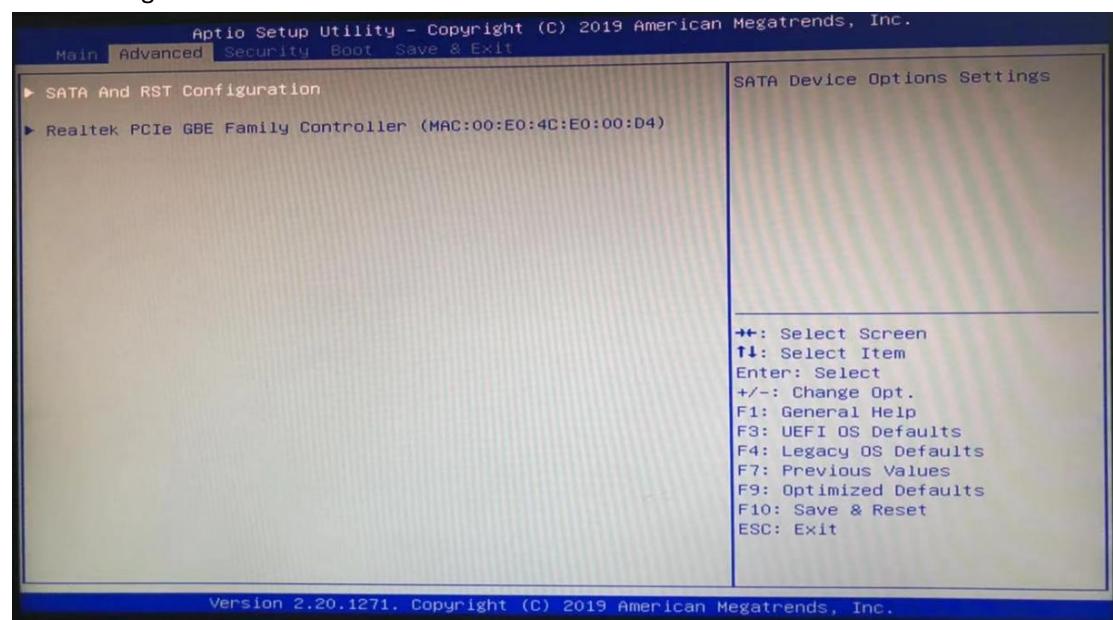


Security menu: You can enter the security settings of the system:

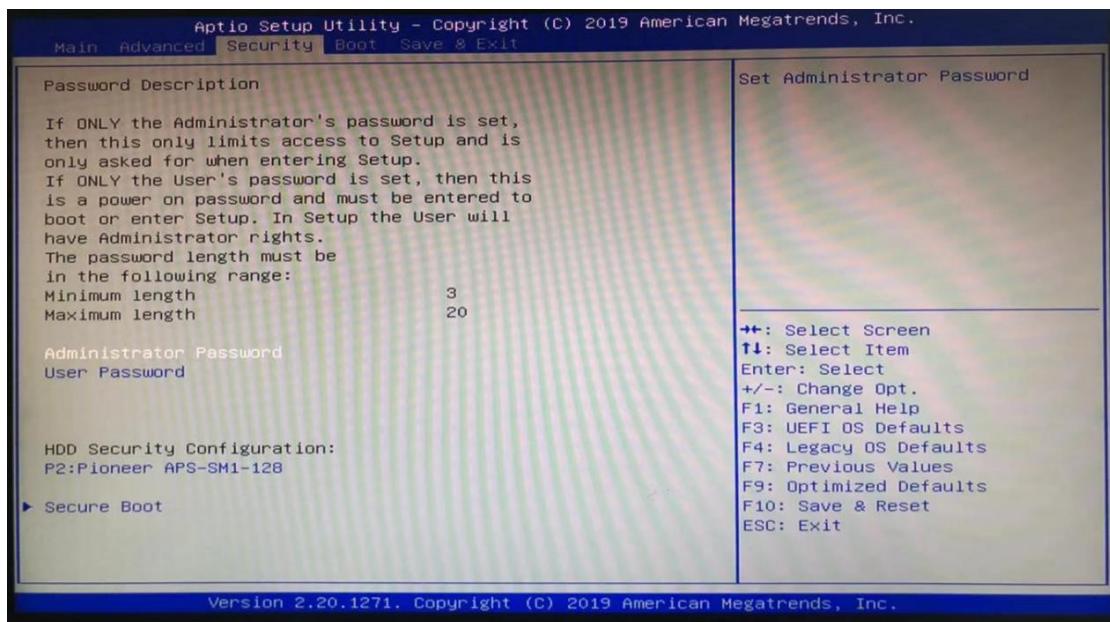

Administrator password	Set the password to enter the Setup menu
User password	Set the password to enter the Setup menu and machine startup
HDD Security Configuration	Set the hard disk protection password
Secure Boot	Secure Boot switch control sub-menu, this item should be Enabled when installing Windows 10 UEFI mode. When installing Legacy (non UEFI) system, such as DOS, Windows 8, this item should be Disabled, otherwise the system cannot be installed or booted.

Note: Please remember the password you set, otherwise it will bring you unnecessary losses.

Save & Exit menu: After completing the relevant settings, choose to exit BIOS Setup.

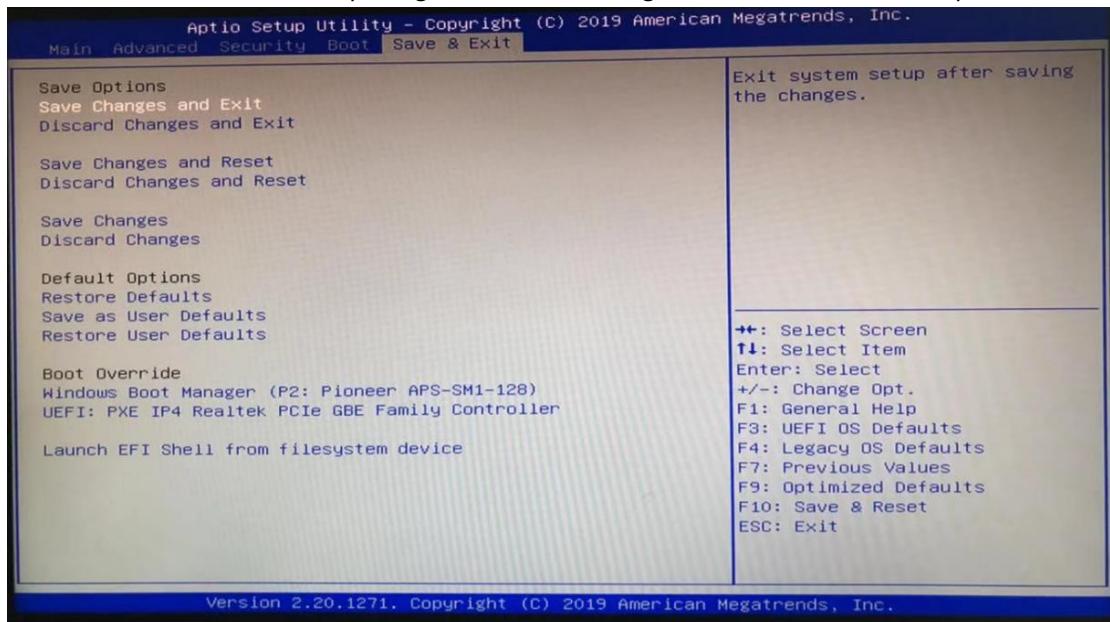

Chapter 3 Simple Troubleshooting

No.	Fault phenomenon	Troubleshooting
1	Can not turn on	<ol style="list-style-type: none">1. Make sure that the AC adapter is connected to the computer and that the power cord is plugged into a working electrical outlet;2. The computer is turned on (press the power button again to confirm whether it is turned on normally);3. If the above items are set correctly, the computer still does not turn on, please contact the supplier in time.
2	When the computer is turned on, the screen is not displayed	<ol style="list-style-type: none">1. Please connect the outside monitor by HDMI lines to check whether the laptop work2. Check if the display input mode is correct.
3	A black screen appears while the computer is running	<ol style="list-style-type: none">1. Check the status of the power indicator to confirm that the device is in sleep mode. Can you wake up by pressing the power button?2. Check if the monitor is sleeping
4	The computer is not responding	<ol style="list-style-type: none">1. To force the shutdown, please press the power button and then turn it back on;2. Or unplug the power cord and reconnect it.
5	No sound from the speaker or headphones	<ol style="list-style-type: none">1. Check if the mute function is off2. Did you choose a speaker or earphone as a playback device?-

Sincerely, if you encounter any problems during use, please feel free to contact us, thank you for your support and wish you a happy life!

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction