

User Manual

雷神游戏手柄

产品使用手册

G60

使用本产品前请仔细阅读说明书，妥善保存以备参考。
Please read the instructions carefully before using this product and keep it well for reference.

SECURITY INFORMATION

BEFORE USING AND OPERATING THE EQUIPMENT, PLEASE READ AND FOLLOW THE PRECAUTION BELOW TO ENSURE THAT THE EQUIPMENT IS PERFORMING BEST AND TO AVOID DANGEROUS OR ILLEGAL SITUATIONS.

1. Please use the equipment within the temperature -10°C ~ 40°C and store the equipment and its accessories within the temperature -10°C ~ 40°C . When the ambient temperature is too high or too low, it may cause equipment failure.

2. The equipment and its accessories may contain some small parts. Please place the equipment and its accessories out of the child's reach. Children may inadvertently damage the equipment and its accessories, or swallow small parts causing suffocation or other hazards.

3. Please avoid rain or dust of the equipment and its accessories, otherwise it may cause fire or electric shock.



4. Please keep the equipment and its battery away from the fire source, high temperature and direct sunlight. It is forbidden to throw the battery into the fire, dismantle, fall, squeeze or immerse the battery in water or other liquid to avoid external blow and pressure, so as not to cause battery leakage, fire, explosion or damage.

5. Do not replace the battery by yourself, otherwise it may damage the battery, and cause other hazards.



6. Do not disassemble or modify the equipment, otherwise the equipment and its accessories are not within the scope of the warranty.

7. Please dispose the equipment, batteries and other accessories according to the local regulations and they should not be treated as household garbage. If the battery is not disposed of properly, the battery may explode.

LAYOUT

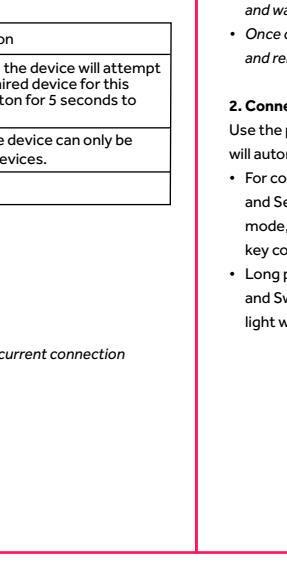
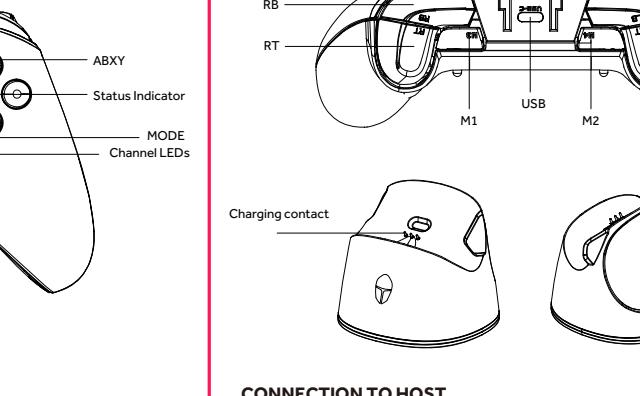


CONNECTION TO HOST

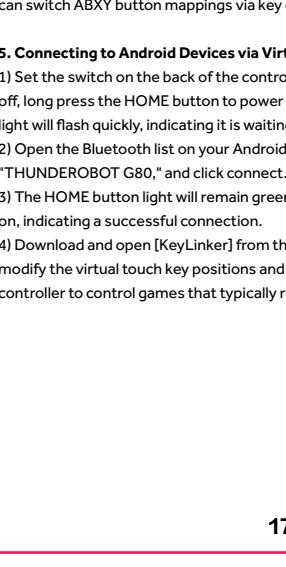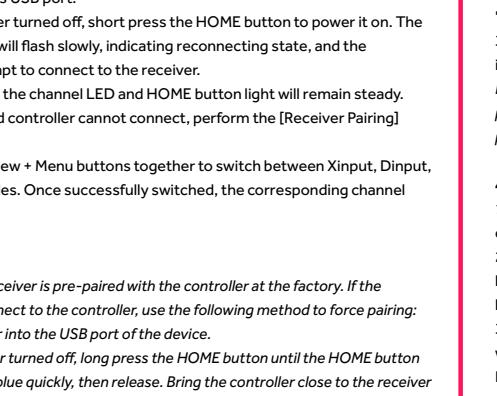



MAIN FUNCTION INTRODUCTION

1. Status Indicator Light Function

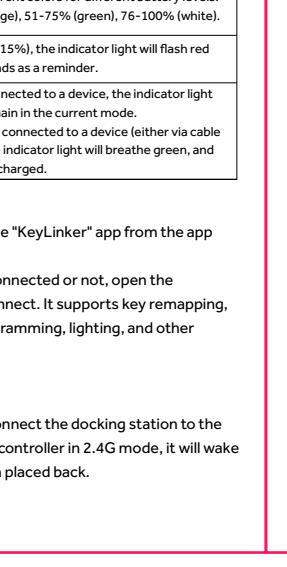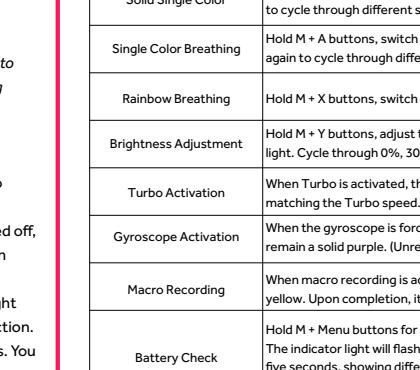



ADDITIONAL FUNCTIONS

6. Joystick and Trigger Calibration

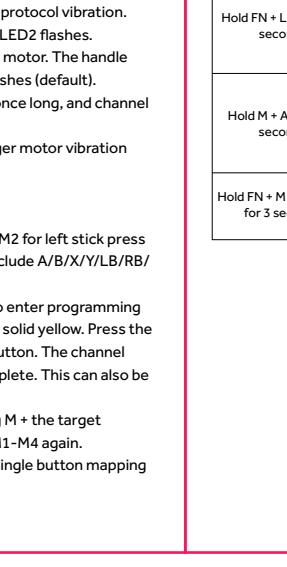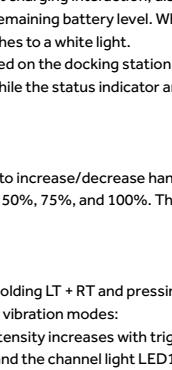


SPECIFICATION

1. Turbo Function Settings

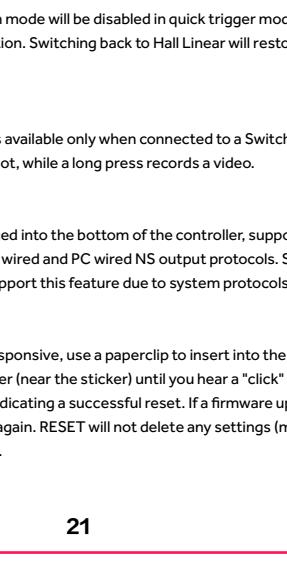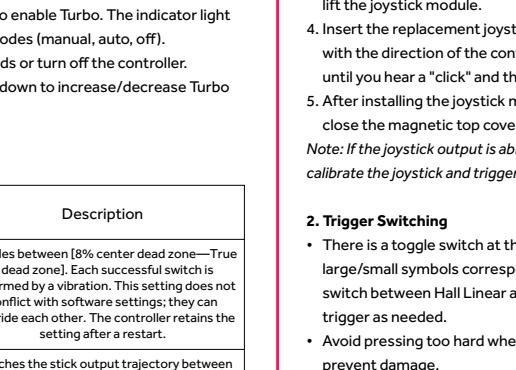



ATTENTION

7. Firmware Upgrade

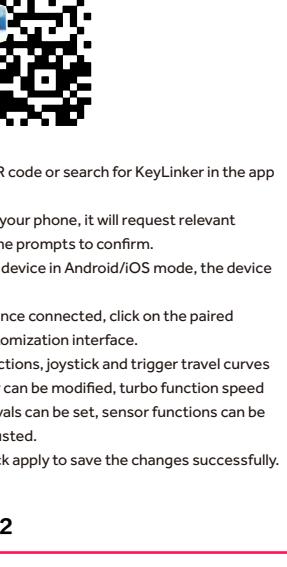



FORCING

8. Trigger Vibration Adjustment

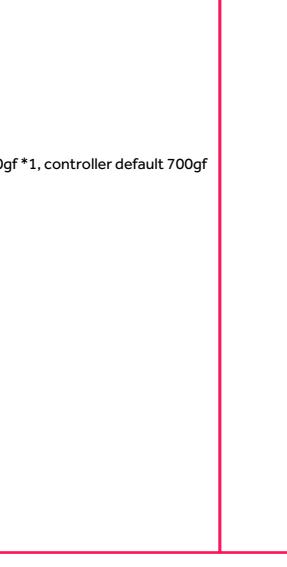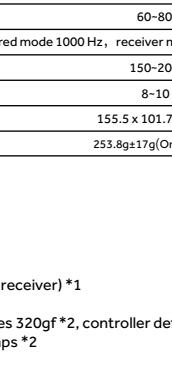


PACKING LIST

9. KeyLinker App User Guide

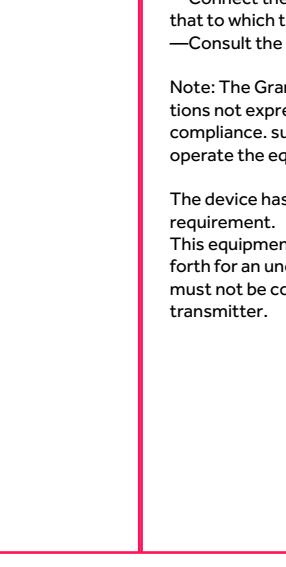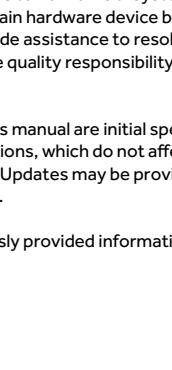

NOTICE

10. Device Compatibility

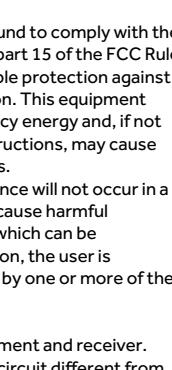



WARRANTY

11. Product Return





SAFETY INFORMATION



1. Connecting to PC via USB Receiver

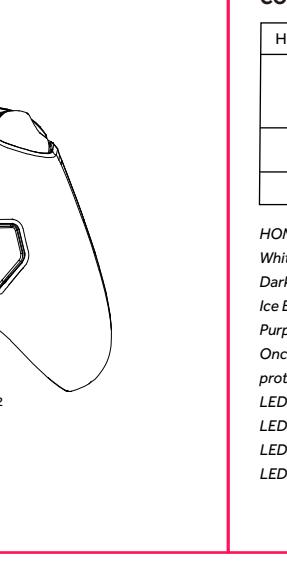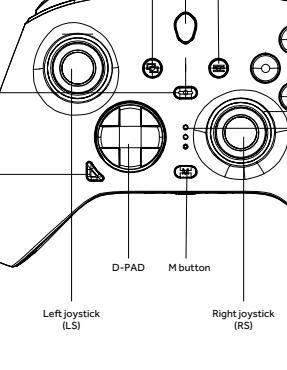

LAYOUT

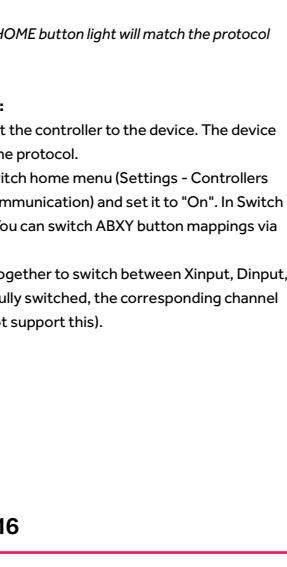
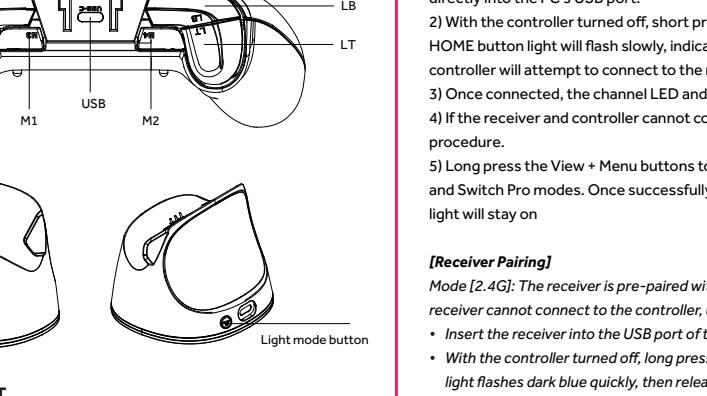


CONNECTION TO HOST

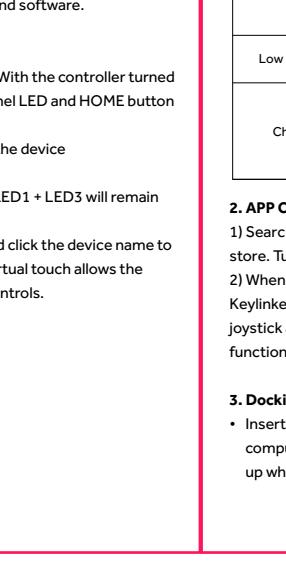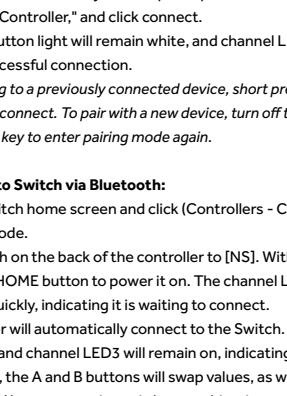



MAIN FUNCTION INTRODUCTION

1. Status Indicator Light Function

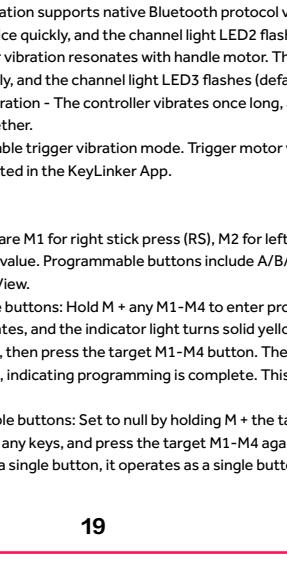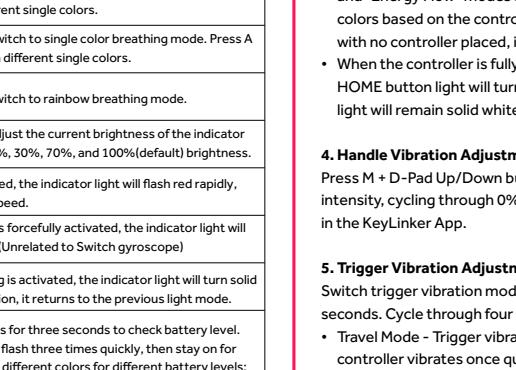



ADDITIONAL FUNCTIONS

6. Joystick and Trigger Calibration

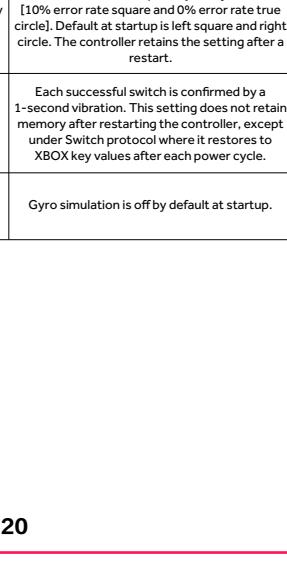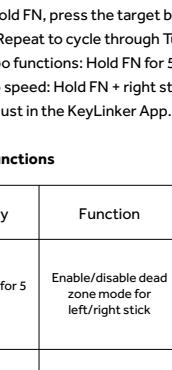


SPECIFICATION

1. Turbo Function Settings

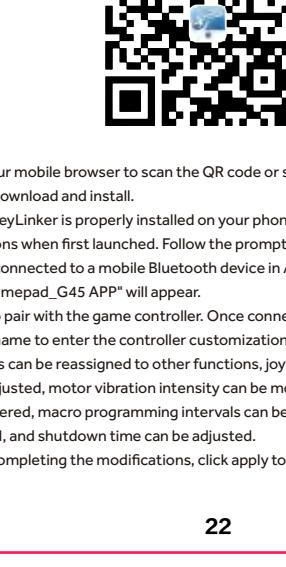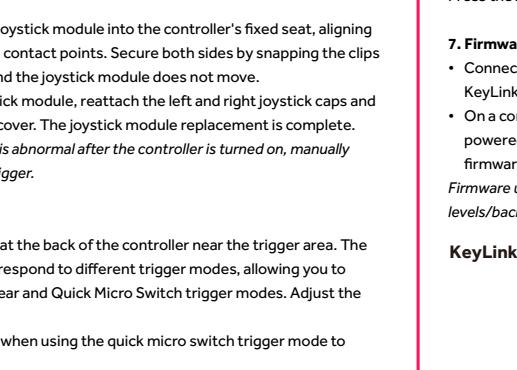


ATTENTION

7. Firmware Upgrade

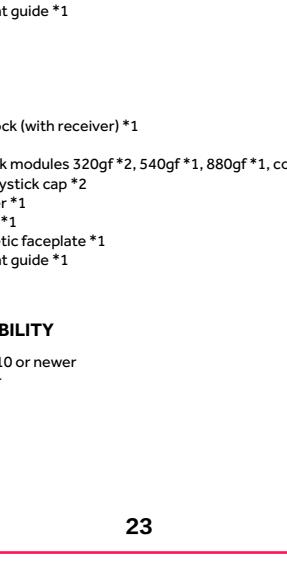



FORCING

8. Trigger Vibration Adjustment

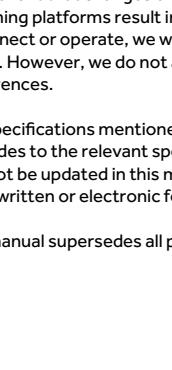


PACKING LIST

9. KeyLinker App User Guide

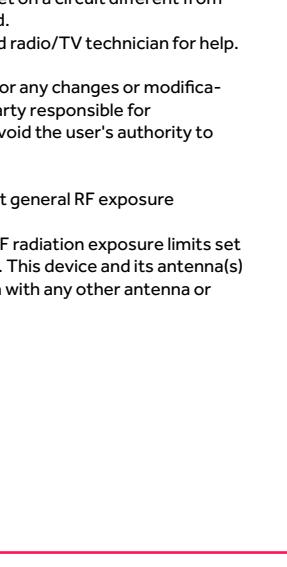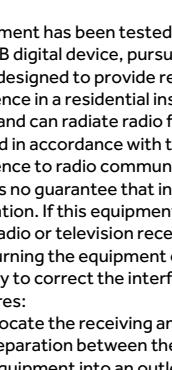

NOTICE

10. Device Compatibility

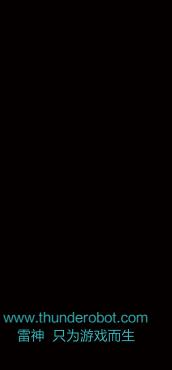

WARRANTY

11. Product Return



SECURITY INFORMATION

1. Connecting to PC via USB Receiver

LAYOUT

CONNECTION TO HOST

MAIN FUNCTION INTRODUCTION

1. Status Indicator Light Function

ADDITIONAL FUNCTIONS

6. Joystick and Trigger Calibration

SPECIFICATION

1. Turbo Function Settings

ATTENTION

7. Firmware Upgrade

FORCING

8. Trigger Vibration Adjustment

PACKING LIST

9. KeyLinker App User Guide

NOTICE

10. Device Compatibility

WARRANTY

11. Product Return

SECURITY INFORMATION

1. Connecting to PC via USB Receiver

LAYOUT

CONNECTION TO HOST

MAIN FUNCTION INTRODUCTION

1. Status Indicator Light Function

ADDITIONAL FUNCTIONS

6. Joystick and Trigger Calibration

SPECIFICATION

1. Turbo Function Settings

ATTENTION

7. Firmware Upgrade

FORCING

8. Trigger Vibration Adjustment

PACKING LIST

9. KeyLinker App User Guide

NOTICE

10. Device Compatibility