



Instruction Manual

Full HD Smart Projector - GP-1080SP



Enjoy it.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication s. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

CONTENTS

General Safety	4
Product Overview	8
Remote Control	9
First time setup	10
Initial Setup	11
Wi-Fi	13
Google	13
Acceptance - Terms of Service	14
Google Assistant Setup	15
Google TV - Dashboard	17
Google Assistant	18
Settings	
Menu	19
Picture	20
Sound	21
Date & Time	22
Google Assistant	23
FAQs	24
Specifications	25
Customer Helpline	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the Projector.

Store this manual, the completed warranty card, your receipt and the product packaging.


The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.

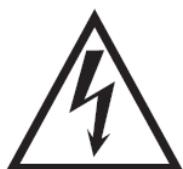

The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the projector or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Replace with same or equivalent type.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Projector set, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this Projector during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

GENERAL SAFETY (CONT.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

! CAUTION !

DO NOT look directly into Project LENS. This can cause damage to a persons or childrens eyes. Take all nessecary precautions to make sure that no one looks into the LENS while turned on.

MAKE SURE this project is out of reach of children or baby so that they do not stand and look into the project LENS.

DO NOT cover the vents, the vents are needed to let out hot air. Placing objects near or covering the vents can cause the product to overheat and permanently damage the projector.

GENERAL SAFETY (CONT.)


Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the Projector set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the Projector set.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.




“HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.”

PRODUCT OVERVIEW

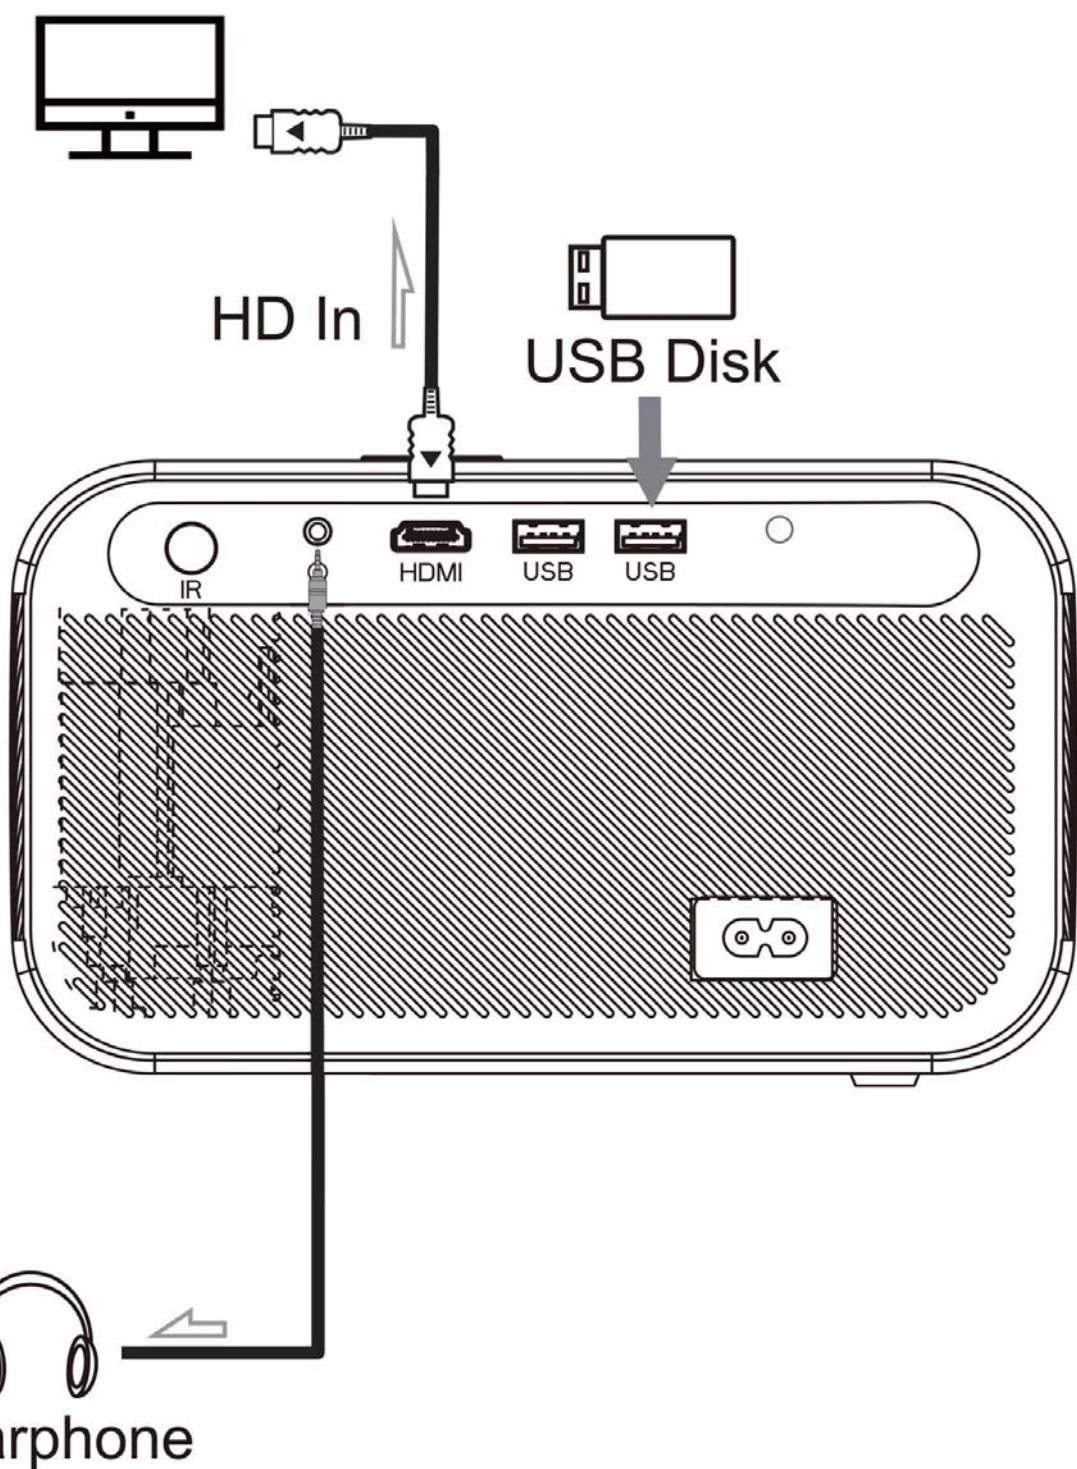

REMOTE CONTROL

Your projector comes with a Remote Control to access and control your projector from a distance. (Batteries not included).

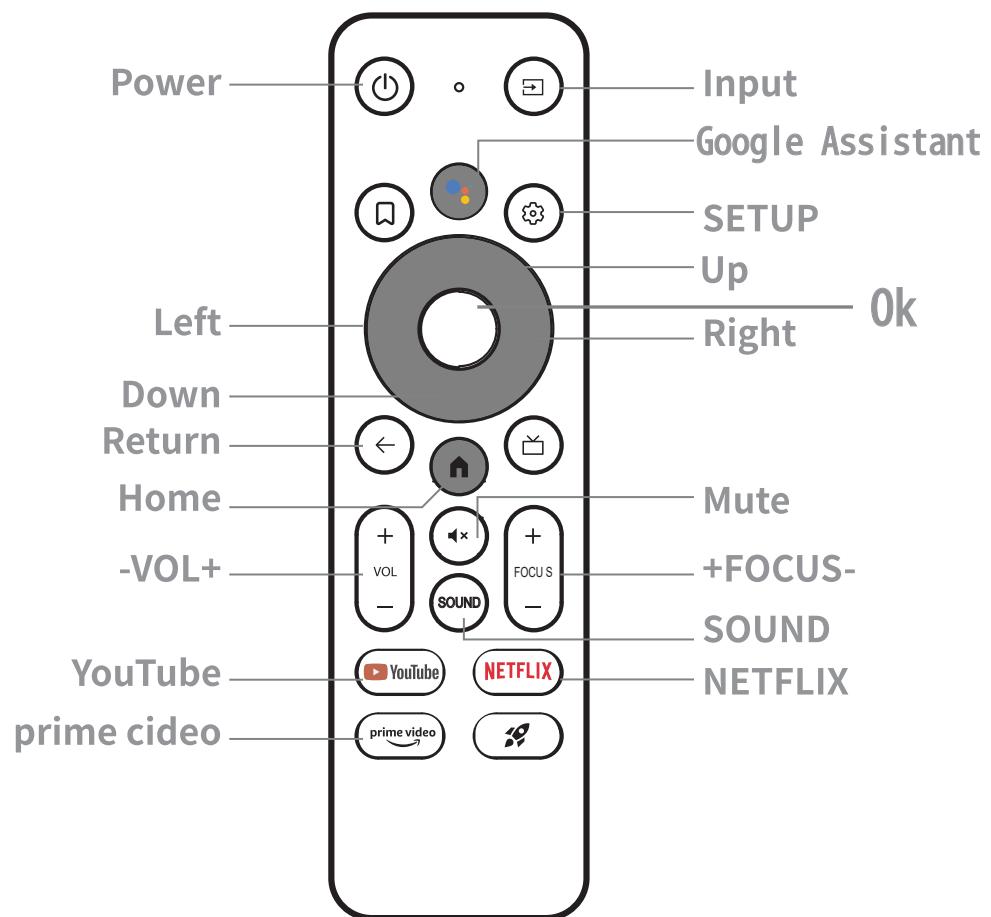


Using the Remote Control

- Do not mix old and new batteries in the remote
- Do not use different types of battery
- If you do not intend to use the unit for a long time, please remove batteries from the remote to avoid accident.
- Keep batteries away from children and pets.
- Never throw batteries into a fire.
- Do not drop, or impact the remote control as it void warranty immediately.
- The remote control operate at a range of 5 to 6M effectively
- Do not expose the remote control sensor to a bright light.

FIRST TIME SETUP (cont.)




1 Projector installation

You can choose horizontal placement

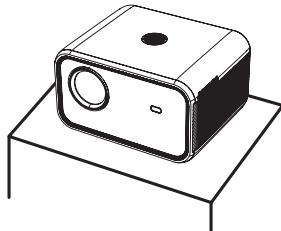

choose horizontal placement

2 Adjust the focus

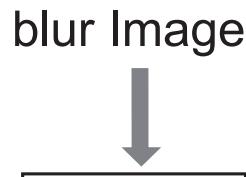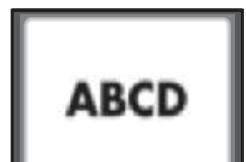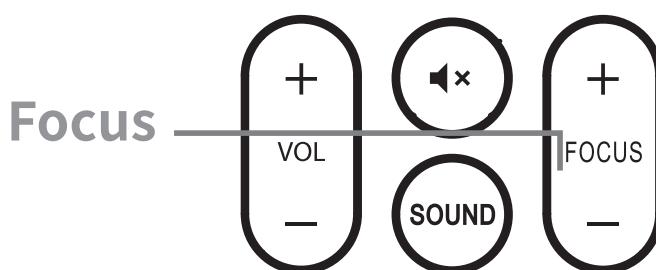


Focus: When the image is blurred (as shown on the right), adjust the focus ring to obtain a satisfactory image imaging effect. If you cannot obtain satisfactory clarity through adjustment, please move the product forward or backward as appropriate.

INITIAL SETUP

For the first initial setup, on screen setup wizard will guide you through setting up your projector. Please follow according to onscreen guide to setup your projector correctly.

Be sure to follow the below prompts to pair your Bluetooth remote control. After the pairing is successful, you can now operate the projector.

Press **BACK** and **HOME** buttons on RC at the same time for 3 seconds to enter pairing mode.

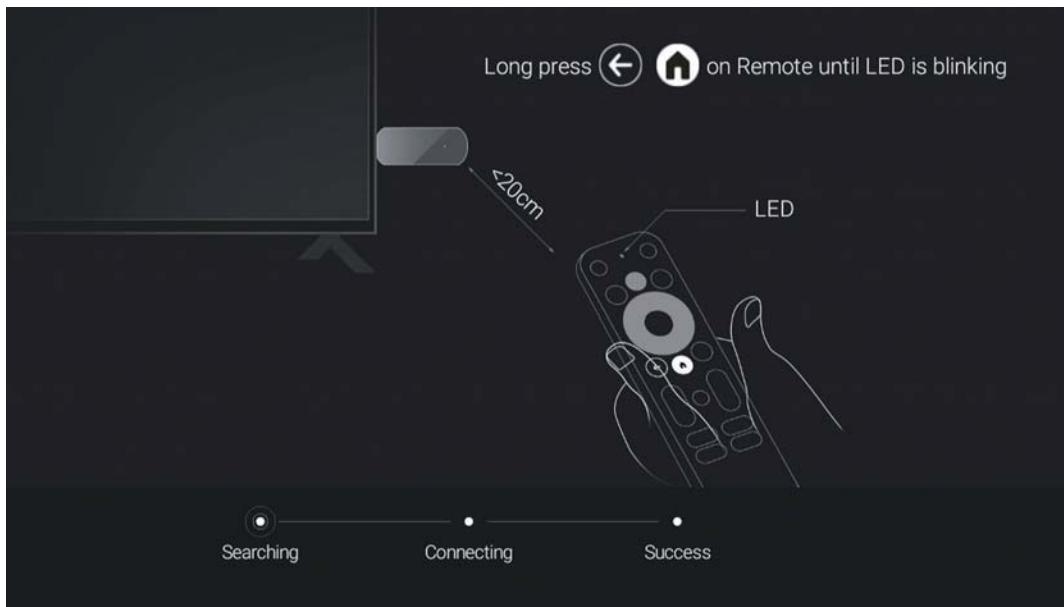

Use the **▲ / ▼** buttons to select system language, then press **OK/SELECT** to confirm.





Select CORRECT country you are located in otherwise Google projector will not work correctly.

INITIAL SETUP (Cont.)

At the Initial Setup you will be asked whether you want to setup your Google Projector now or just proceed with basic setup.


If you want to SKIP Google Projector Setup steps - SELECT "**SKIP**".

If you select "**CONTINUE**" please follow the below instructions below:

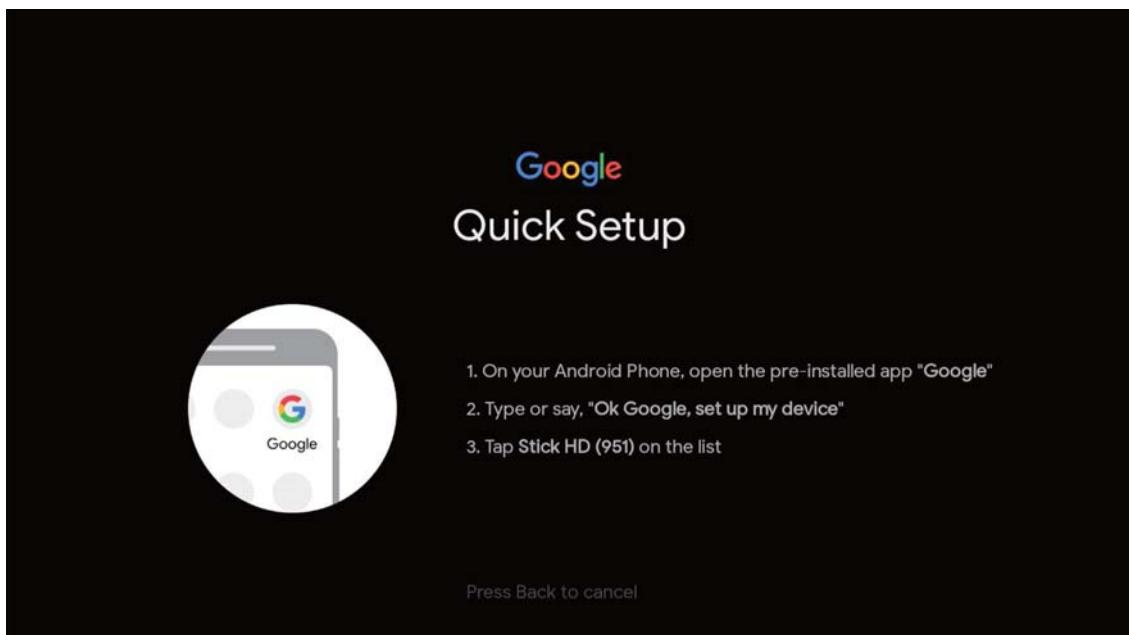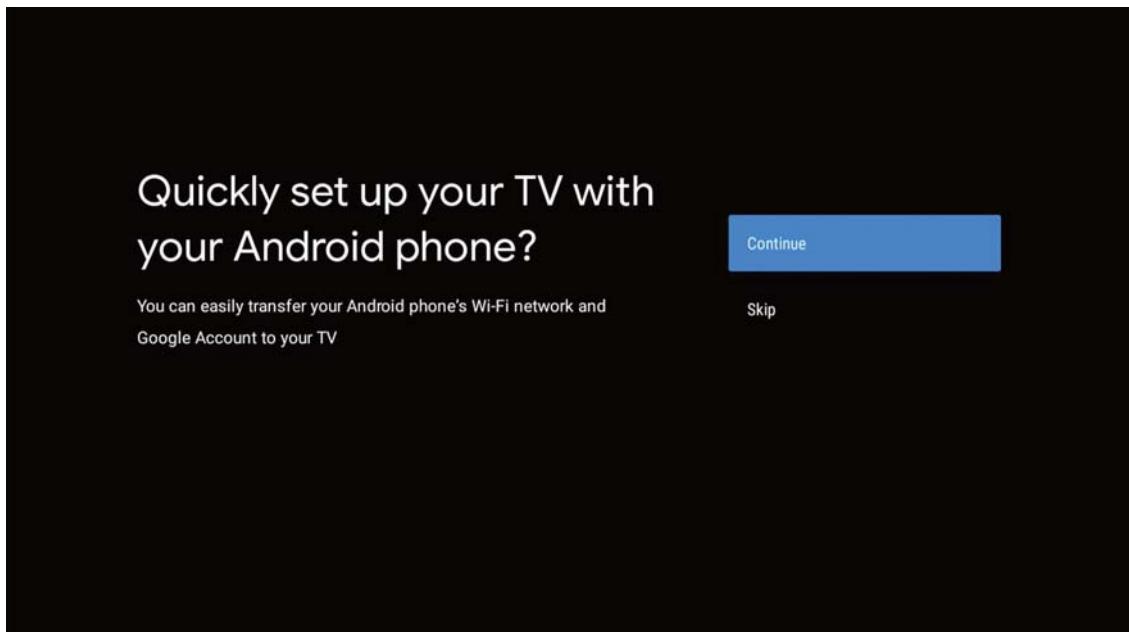


WI-FI

Select your home Wi-Fi network and enter in the password to start connection process. Once successfully connected you will proceed to the next step.

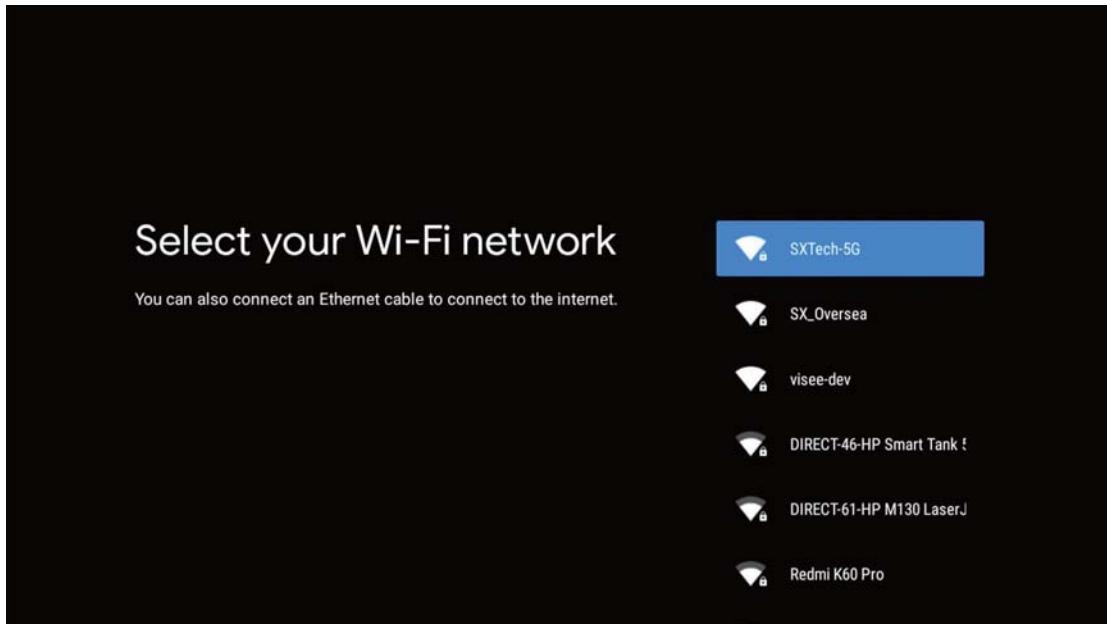



GOOGLE

To have access and to download applications from **Google Play**, you must sign in with a Google Account. Once you open **Google Play**, you will be prompted to sign in or create a new account.

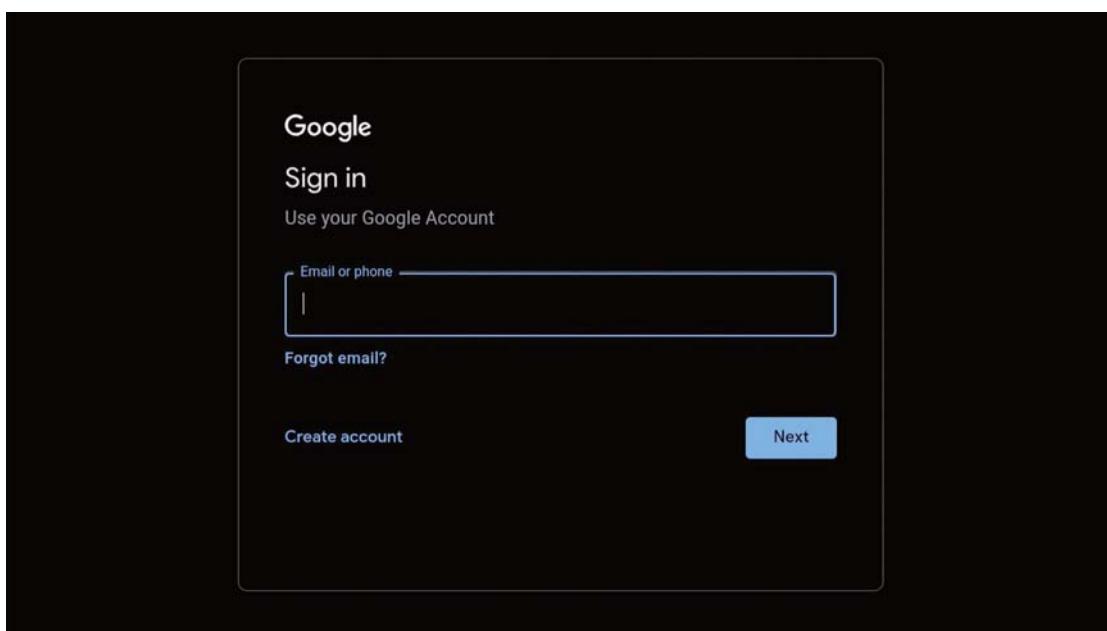


ACCEPTANCE - TERMS OF SERVICE

By accepting the Google Terms of Service to improve the product experience, Select "**ACCEPT**" to proceed with this condition.

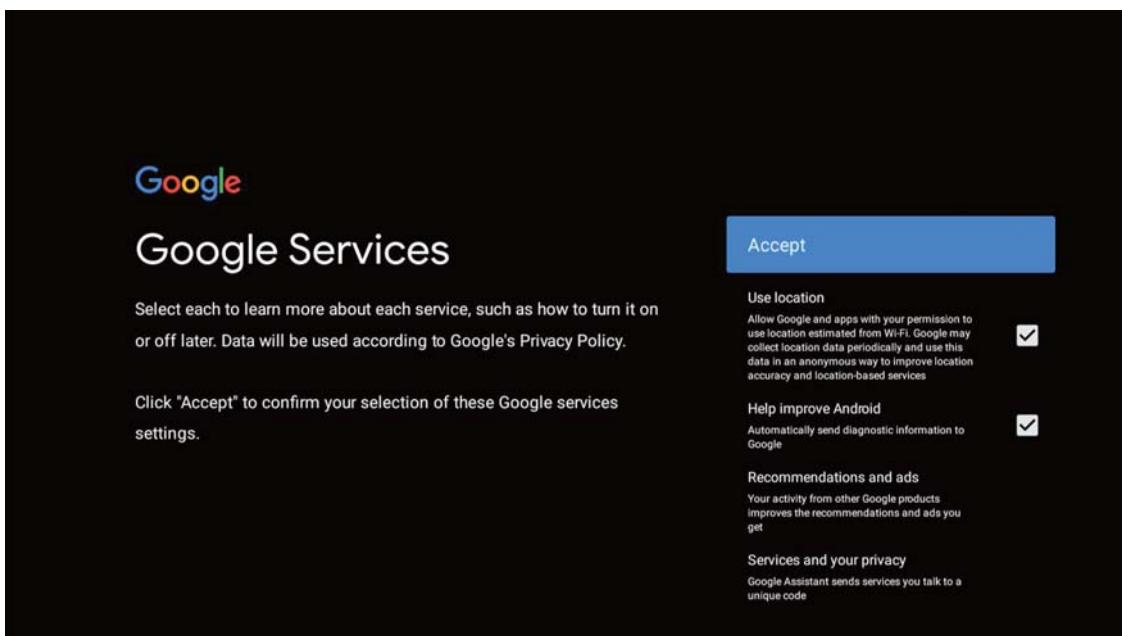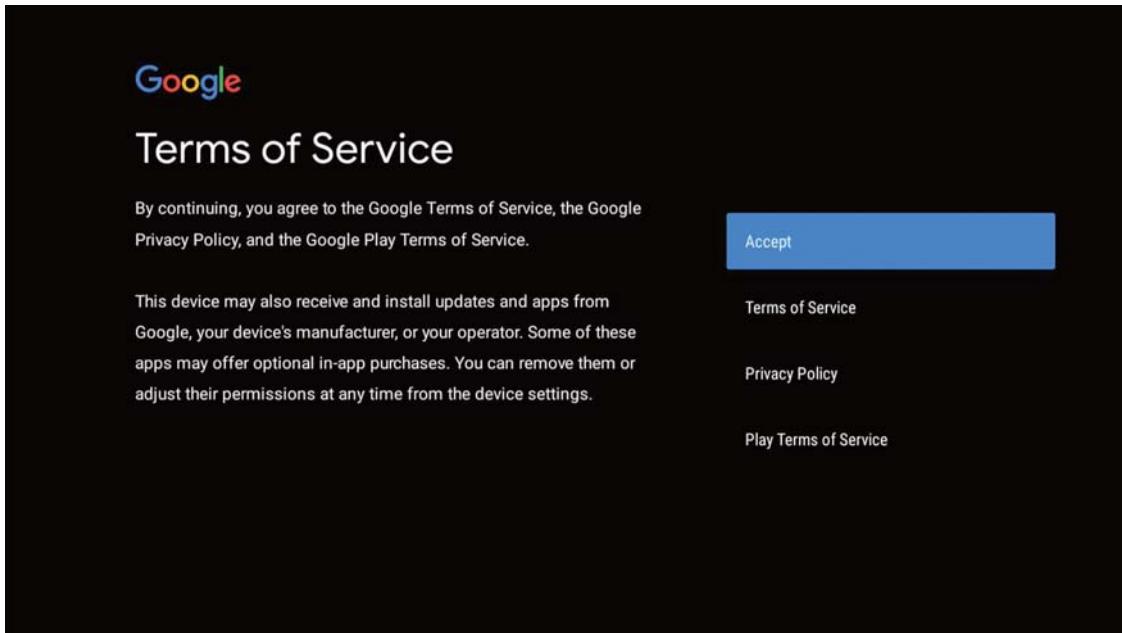


GOOGLE ASSISTANT SETUP

Now starts the process of setting up your Google Assistant to work best for you.
Please select Continue to start this process.

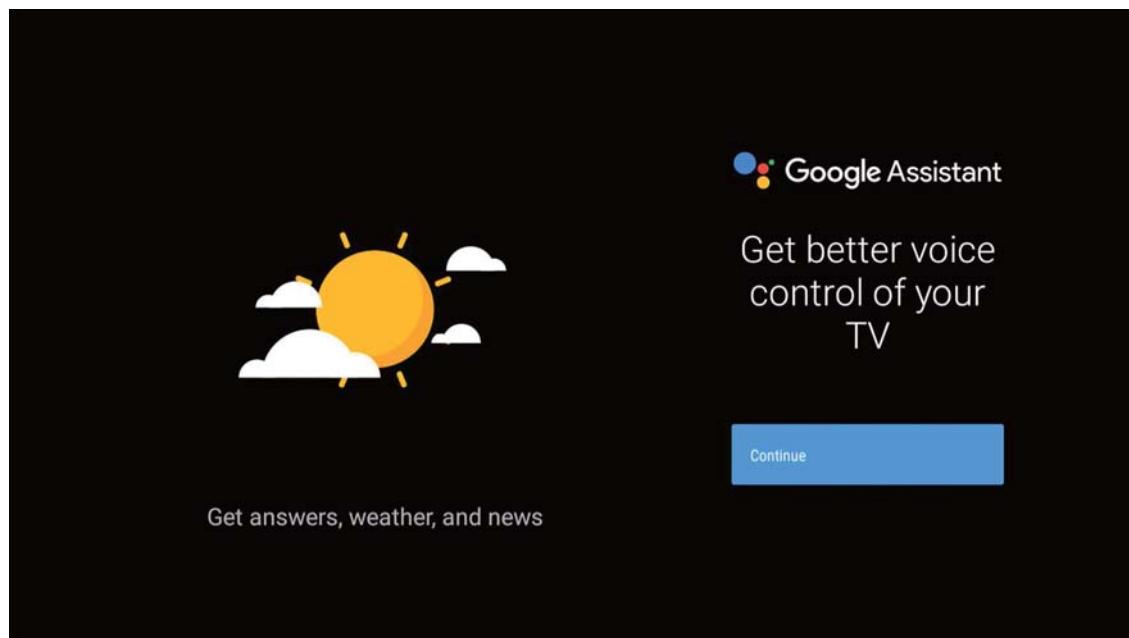



For the best experience with Google Assistant, please select "**Allow**" for Google Assistant to share requests with your Projector's Installed apps.

Without this permission, Google Assistant may not be able to find all the content from your Projector's Apps.

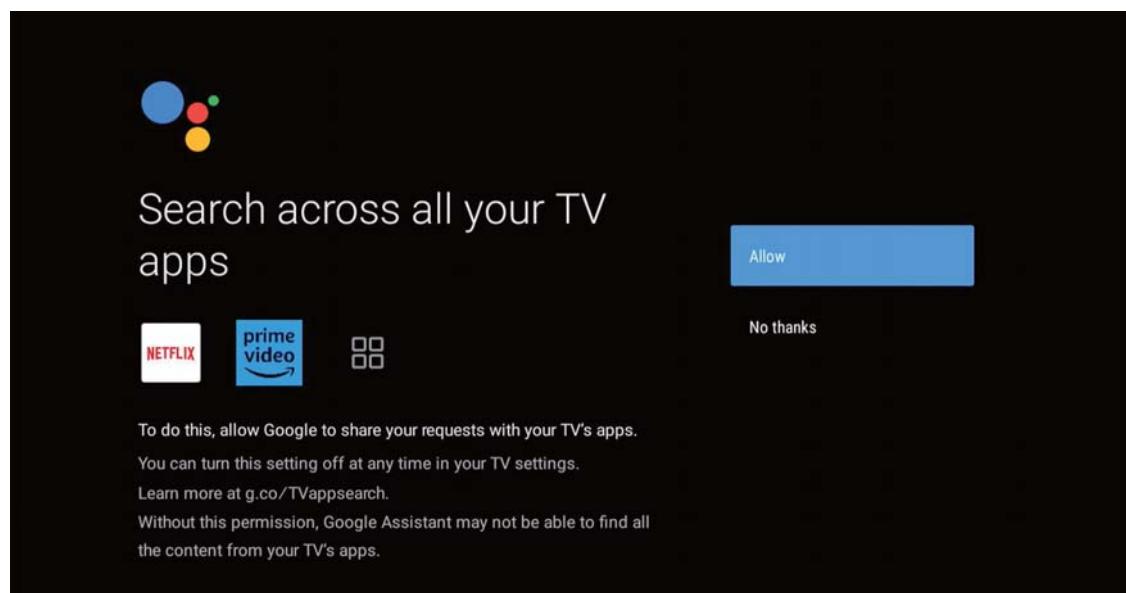


GOOGLE ASSISTANT SETUP (CONT.)

If you have selected “Allow” in the previous step, content recommendations can now be provided to you.

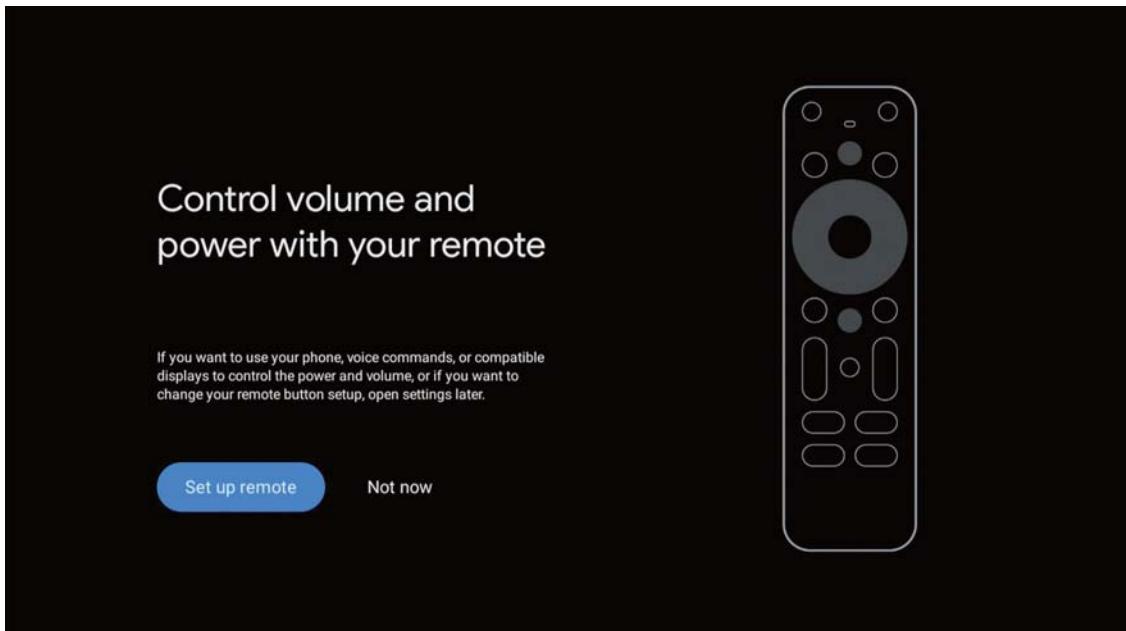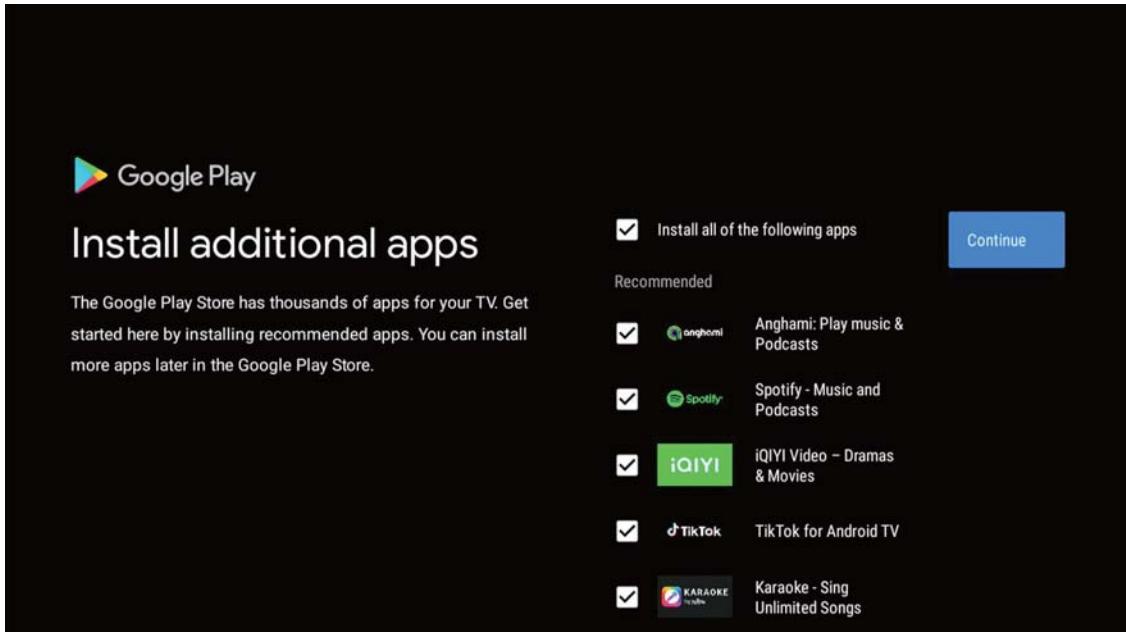

GOOGLE TV - DASHBOARD

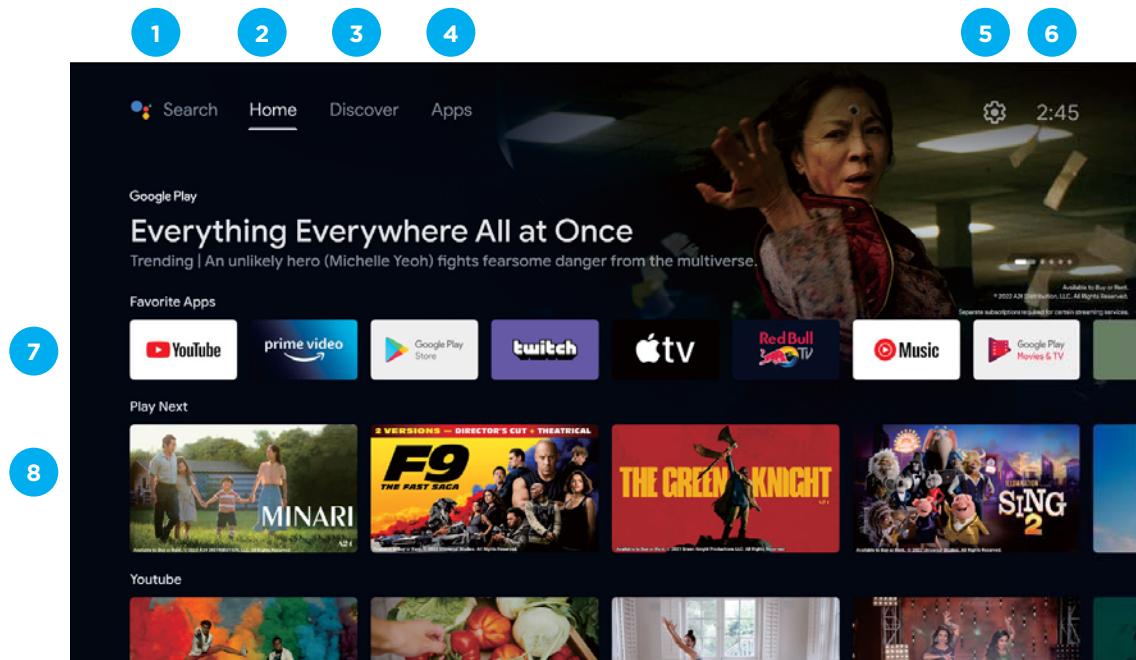

1. Press the Google Assistant button on your remote to do more on your TV with your voice.
2. **Home** - Main page to enter Live TV, view your pre-installed and downloaded applications.
3. **Discover** - Sign into your Google Account to get recommendations from your streaming services - organized into topics and genres based on what you watch.
4. **APPS** - Apps you have downloaded and apps you can search for to install.
5. **SETTINGS**: Select this if you want to access TV settings.
6. **TIME**: Displaying current time.
7. Each row past this point will display recommended content from the apps you already have installed.

Add Apps

At the end of this row of apps, Select the + box and add your app that you have downloaded and installed to the home screen of your Android TV.

8. Movies or Shows available to play next.

GOOGLE ASSISTANT

Do more on your Projector with your voice. Press the Google Assistant button on your remote to quickly search 400,000+ movies and shows, get recommendations to match your mood, control smart home devices, and more.




Ask Google to search for the latest blockbuster, stream shows, or open multiplayer games. Have it dim the lights by connecting smart home devices. Manage tasks and see your calendar. Or ask it questions and see the answers on your projector.



“What’s the
weather today?”

SETTINGS MENU



To access **SETTINGS** menu, select **SETTINGS (#5 on page 17)** via the HOME screen.

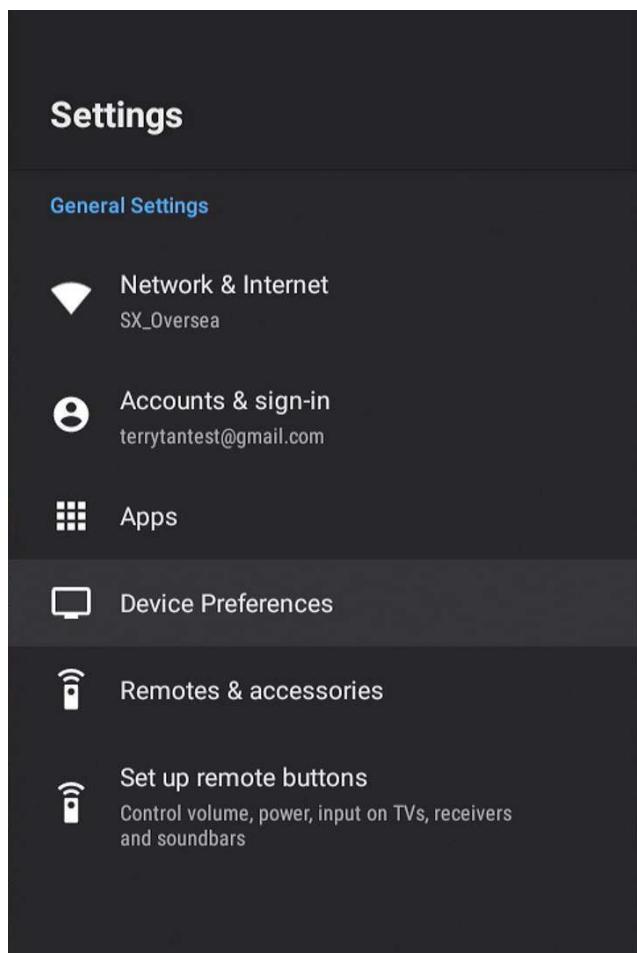

PICTURE MENU

To access **PICTURE SETTINGS** menu,

1. Select **SETTING icon (5)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“PICTURE”**.

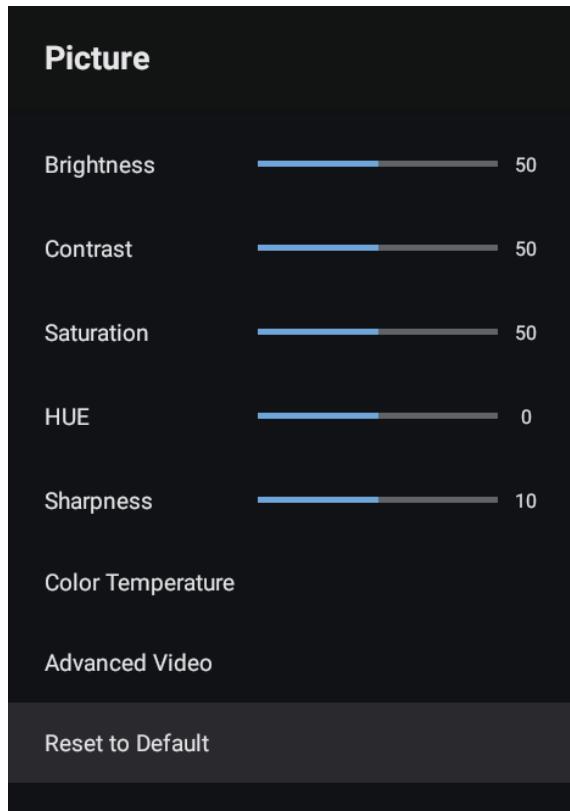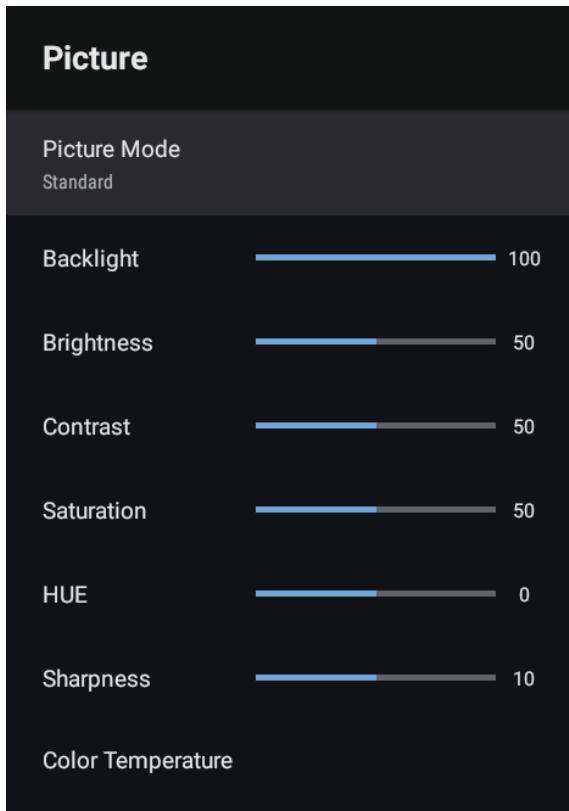


Picture Mode - Options to choose from - Standard, Vivid, Sport, Movie, Game, Energy Saving, User.

SOUND MENU

To access **SOUND SETTINGS** menu,

1. Select **SETTING icon (5)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“SOUND”**.

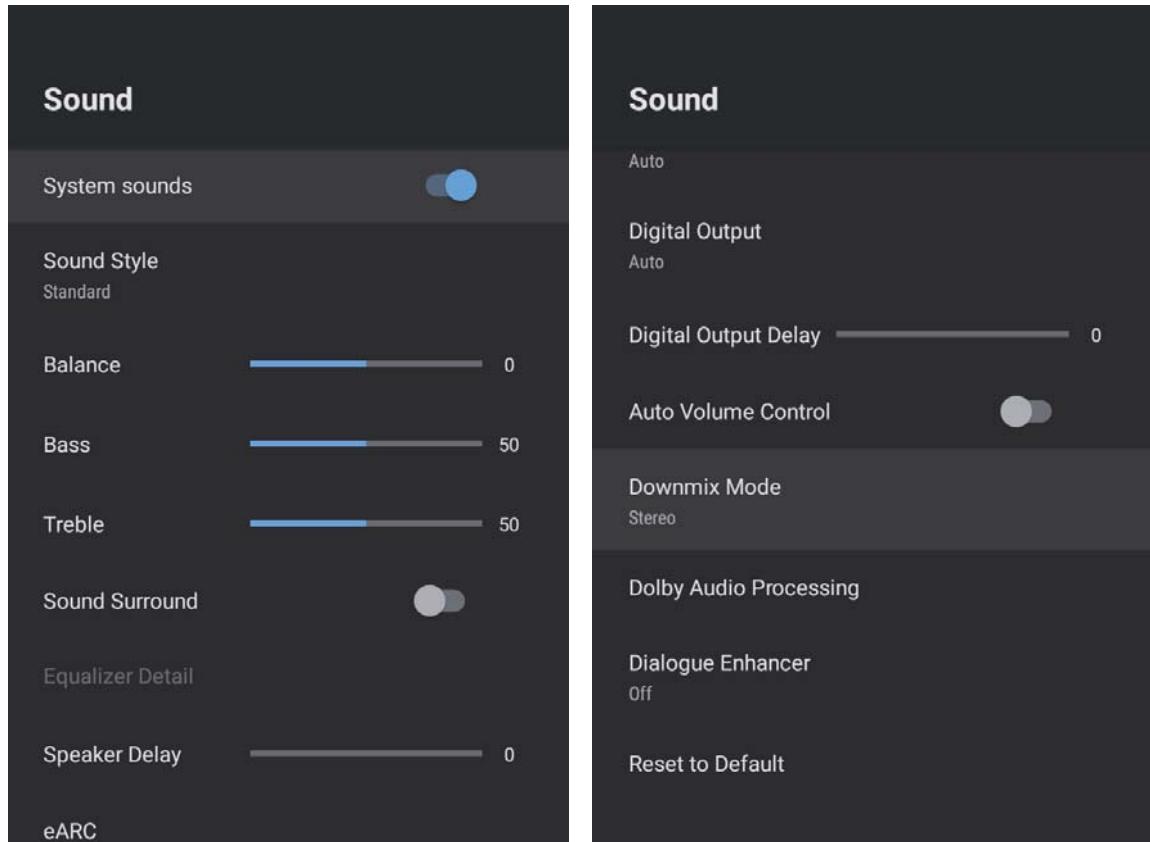


Sound Style - Options to choose from - Standard, Vivid, Sports, Movie, Music, News, User.

Digital Output - Auto, Bypass, PCM, Dolby Digital Plus, Dolby Digital.

(It is recommended to select **AUTO**, as this will automatically detect quality of sound being produced by content).

DATE & TIME

1. To access **DATE & TIME** menu, select **SETTING icon (#5 on page 17)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“DATE & TIME”**.

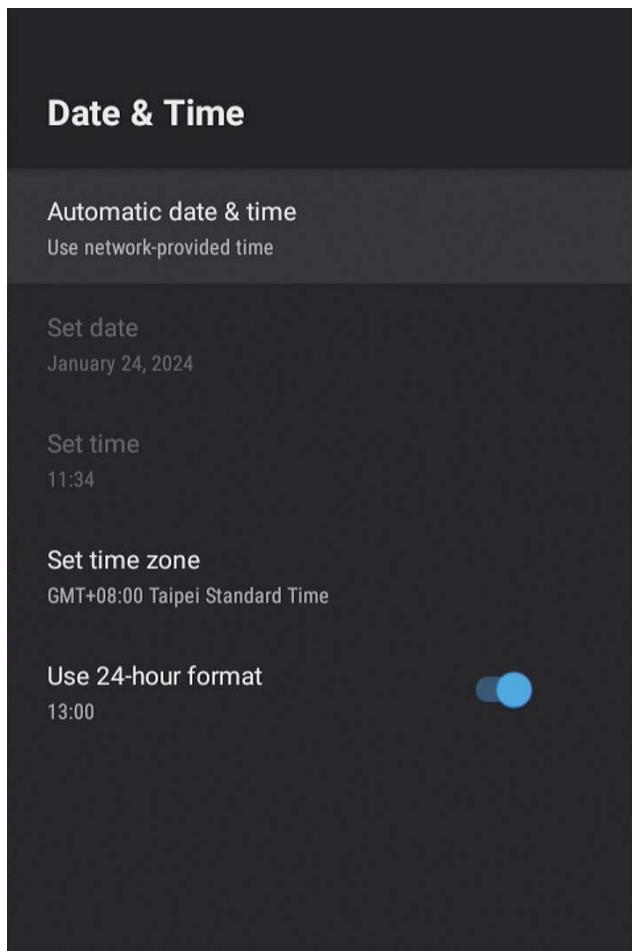


GOOGLE ASSISTANT

To access Google Assistant in the Settings menu

1. Select **SETTING icon (#5 on page 17)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“Google Assistant”**.

Accounts will only be accessible if you have connected a Gmail account on Google Play.
A Gmail account is needed in order to download and install applications on Google Play.

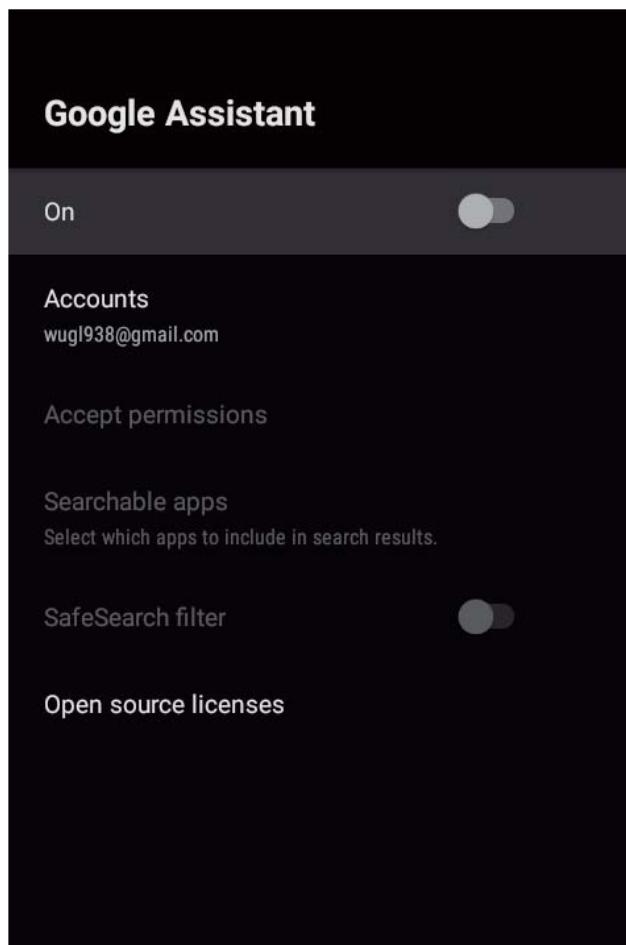

FAQS

MY REMOTE CONTROL ISN'T PAIRING WITH MY GOOGLE PROJECTOR?

If your remote control is not pairing or becomes disconnected, please reconnect it and pair it again in the Settings menu:

1. Press **SETTINGS** Icon
2. Select “**REMOTES & ACCESSORIES**”
3. Select “**PAIR ACCESSORY**”
4. Follow the onscreen instructions to pair your remote. Once you detect your Bluetooth Remote control, Press **OK** on remote control to select it and pair.

If it doesn't connect, try the process again until it pairs, otherwise contact our call centre.

NOTE: NOTE: You can still use your remote control without pairing. However, Google Assistant will not be available until the remote control is paired.

GOOGLE TV (REMOTE CONTROL) - APP

If you want to control your Projector via your smart device. Search for: “Google TV” app and download. Once following prompts to connect your smart device to your Google Projector, you will then be able to control your Projector from your smartphone.

SPECIFICATIONS

Resolution	1920 x 1080 Native Resolution	
Contrast ratio:	1000 : 1	
Lumens	250 ANSI	
Internet	Wi-Fi	
Bluetooth	5.0	
Aspect Ratio	16:9, AUTO	
Multimedia Playback Format under USB Mode	Movie: MKV, WMV, MPG, MPEG, DAT, AVI, MOV, ISO, MP4, RM	
	Music: WAV, MP3, MP2, FLAC	
	Photo: PNG, JPEG, BMP	
Power Source	220-240V ~ 50/60Hz	
Power Consumption	100W	
USB	5V == max. 500mA	
Dimensions	210 (w) x 163 (d) x 130 (h) mm	
Weight	Net: 1.4 kg	
	Gross: 2.0 kg	
Accessories	1 x Instruction Manual	1 x Remote Control
	1 x HDMI Cable	1 x Warranty Card

NOTE: This document is for reference only, the operation interface is subject to software.