


ULooka 智能可视门铃

使用说明书 V1.0

使用前请仔细阅读，并妥善保管以备后续参考

外观介绍:

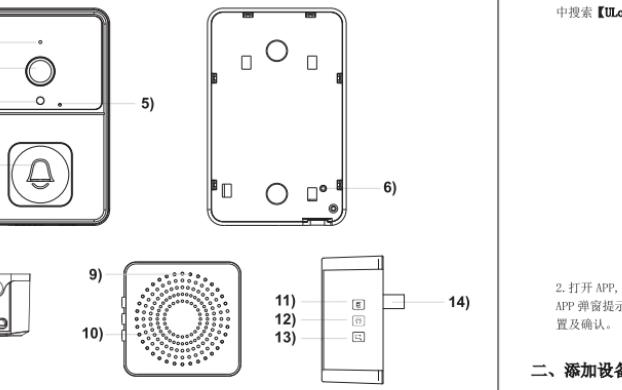

门铃:

- 1) 眼睛 2) 镜头 3) 光敏 4) 门铃键
- 5) 指示灯 6) 复位孔 7) 门铃喇叭 8) 充电口
- 叮咚:
- 9) 指示灯 10) 叮咚喇叭 11) 配对键 12) 音量大小
- 13) 音乐切换 14) USB 插电口

一、APP 下载方式:

1. Android 手机可在自带应用市场或应用宝搜索【ULooka】进行下载；iOS 手机在 APP Store 中搜索【ULooka】下载。



ULooka

2. 打开 APP, 阅读“隐私政策”，点击“同意”。

APP 弹窗提示：消息推送通知权限、APP 蓝牙连接和定位权限、开启手机蓝牙功能，请前往设置及确认。

二、添加设备（二维码配网）:

1. 按门铃键开机，长按 RESET 约 3 秒听到“滴”。
2. 打开 APP, 点击“+”添加设备, 选择“可视门铃：二维码配网”。



3.

3. 点击下一步，输入 WiFi 账号与密码。
4. 请将门铃镜头对准手机扫描二维码（扫码时请撕下镜头保护膜），保持 10-15cm 的距离，直到听到提示音，点击“听到提示音”。

三、配置设备 WiFi 连接:



5.

5. 设备添加成功，点击视频接听进入实时界面。
- （备注：如未连接成功，请检查 WiFi 名称和密码是否正确，仅支持 2.4G 无线网络；或者复位设备按上述步骤重新连接）



四、手机信息推送:

四、手机信息推送

新用户打开 APP, 系统会提示“应用通知权限被禁用”，请根据弹窗设置。或者前往手机设置→应用通知管理，找到 ULooka APP 打开允许通知权限，具体可参考 APP【关于】→【APP 消息推送设定指引】。



五、界面说明:




六、功能介绍:

1. 信息推送：当有人按门铃时，手机会收到 APP 推送信息，点击接听进入视频通话。
2. 视频通话：按住麦克风键对讲，打开喇叭监听。
3. 门铃分享：APP 可以将门铃分享给别人，打开 APP→设置→分享→二维码，被分享者需下载 APP 及扫描二维码，输入设备默认密码“8888”。
4. 低电量提醒：当电池电量比较低时，APP 会推送低电量提醒，请及时充电。
5. 工作指示灯：
 - 蓝灯闪烁：未配网
 - 蓝灯快闪：配网中
 - 蓝灯常亮：已配网
 - 蓝灯熄灭：设备休眠
 - 红灯常亮：充电中
 - 红灯熄灭：充满电

七、注意事项:

- 设备为低功耗门铃，无人按门铃时，设备进入休眠离线，属正常现象。
- 扫码配网时请撕下镜头保护膜。
- 因手机型号不同，推送设置不同，请根据需求及机型设置。
- 仅支持 2.4G WiFi，暂不支持 5G 或带有中文名字、特别符号的 WiFi。
- 由于金属易干扰 WiFi 信号，请尽量避免将设备安装在金属壁上。
- 使用前先将门铃与叮咚配对，安装在有效区域。

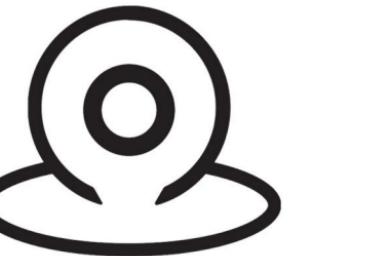


ULooka

Smart Visual Doorbell

Operating Instruction Manual V1.0

Please read carefully before use and keep it properly for future reference

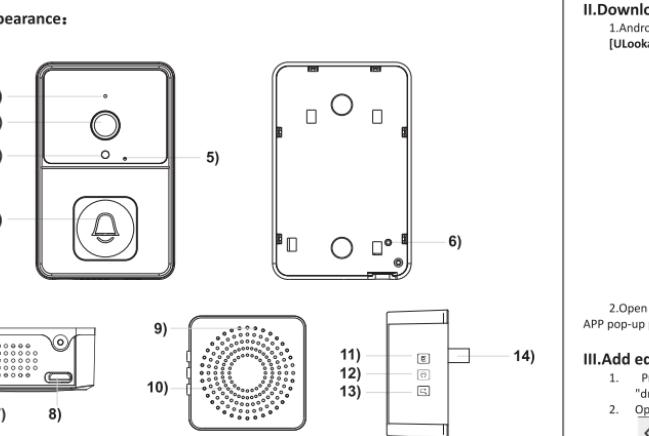

Doorbell:

- 1) Mic
- 2) Lens
- 3) Light sensitive
- 4) Doorbell key
- 5) Indicator light
- 6) Reset
- 7) Speaker
- 8) Charging port
- 9) Indicator light
- 10) Speaker
- 11) Pairing key
- 12) Volume size
- 13) Music toggle
- 14) USB plug port

Ding dong:

- 9) Indicator light
- 10) Speaker
- 11) Pairing key
- 12) Volume size

II. Download method:

1. Android mobile phones can be downloaded in its own application market or by searching [ULooka] on App Store; iOS mobile phone searches [ULooka] in the APP Store to download.




ULooka

2. Open the APP, read the "Privacy Policy", and click "Agree". APP pop-up prompt: message push notification permission, APP Bluetooth connection and location permission, and enabling mobile phone Bluetooth function. Please go to Settings and Confirm.

III. Add equipment (QR code distribution network):

1. Press the doorbell key to start the machine, and press and hold RESET for about 3 seconds to hear "drip".
2. Open the APP, click "+" to add the device, and select "Video Doorbell with QR code".

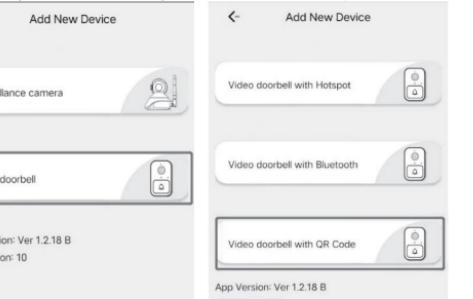

3. Click Next and enter the WIFI account and password.
4. Please aim the doorbell lens at the mobile phone to scan the QR code(Please remove the lens protector when scanning the code), keep a distance of 10-15cm until you hear the prompt tone, and click "Hear the prompt tone"

IV. Door bell and ding Dong machine match:



Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

The camera never responded

V. Mobile phone information push:

New users open the App system will prompt 【Application notifications disabled】. Please set the popup. Or go to the mobile phone Settings → Apply permission management, find ULooka app to open the permission notification permission. For details, please refer to APP 【About】 - 【APP push message guidelines】

ULooka




Door Bell Calling!

Doorbell



Only voice

VI. Interface Description:

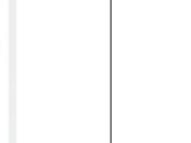

Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

 

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

The camera never responded

VI. Interface Description:

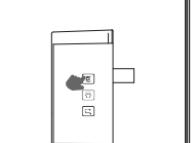

Setup Device WiFi


Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:

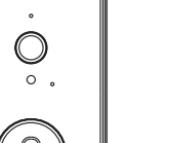

Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

 

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:

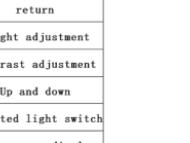

Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

 

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:

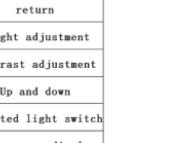

Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

 

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:

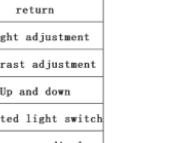

Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

 

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:

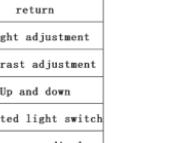

Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

 

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:

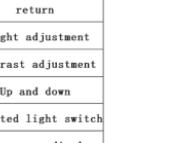

Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

 

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:

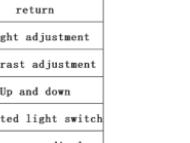

Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

 

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:

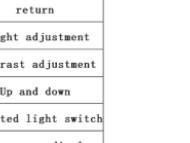

Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

Step 2 Select the network and input the password, then click on the button "Next". WiFi Name: If your router releases 2.4 and 5.0GHz dual WiFi, please select 2.4GHz only. Password:

Next

Please aim the camera lens to scan the QR code. Keep a distance of 10-20cm. Until you hear a prompt tone or the slow flashing indicator light changed.

Hear a prompt tone!

VI. Interface Description:



Setup Device WiFi

Step 2 Select the

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction