

BLAISE



 
FULL HD 1080P

 
1080P

S1 PRO HD INTERCOM CAMERA RECORDER

CONTENTS

English	P3-10
中文	P11-18
Lengua española	P19-25
Русский	P26-32
Indonesia	P33-40

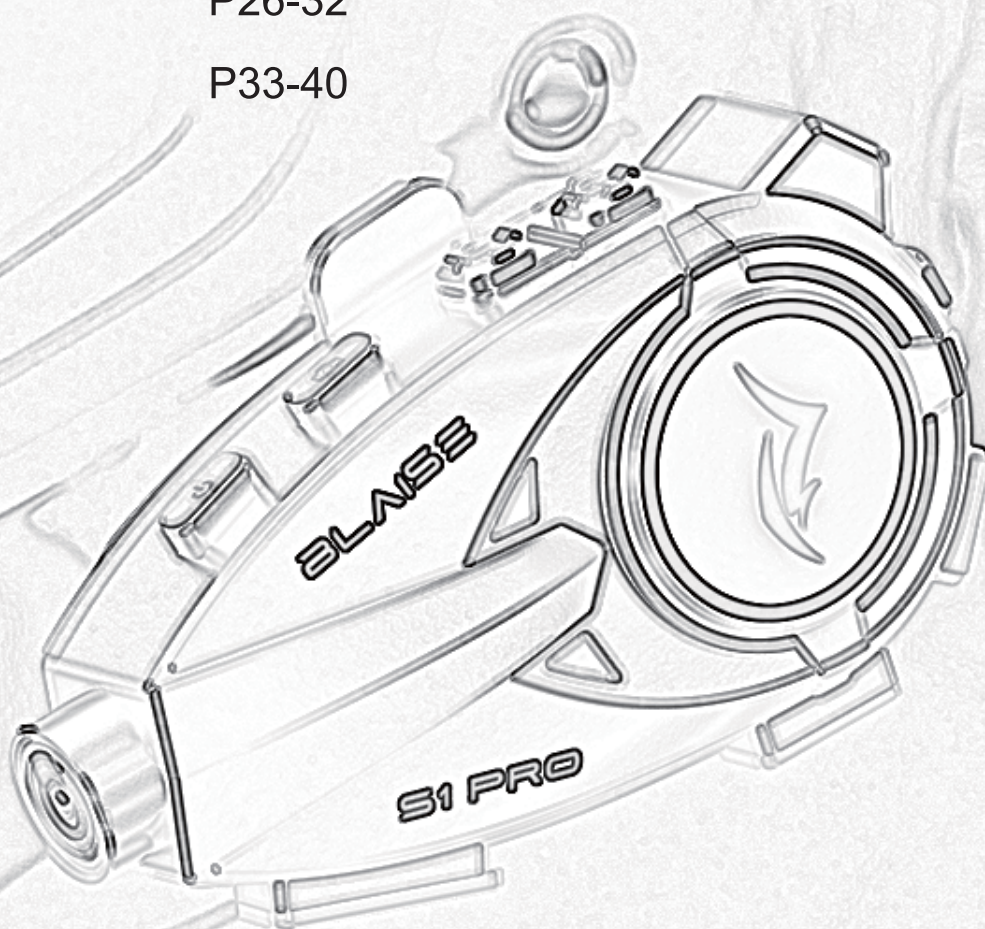

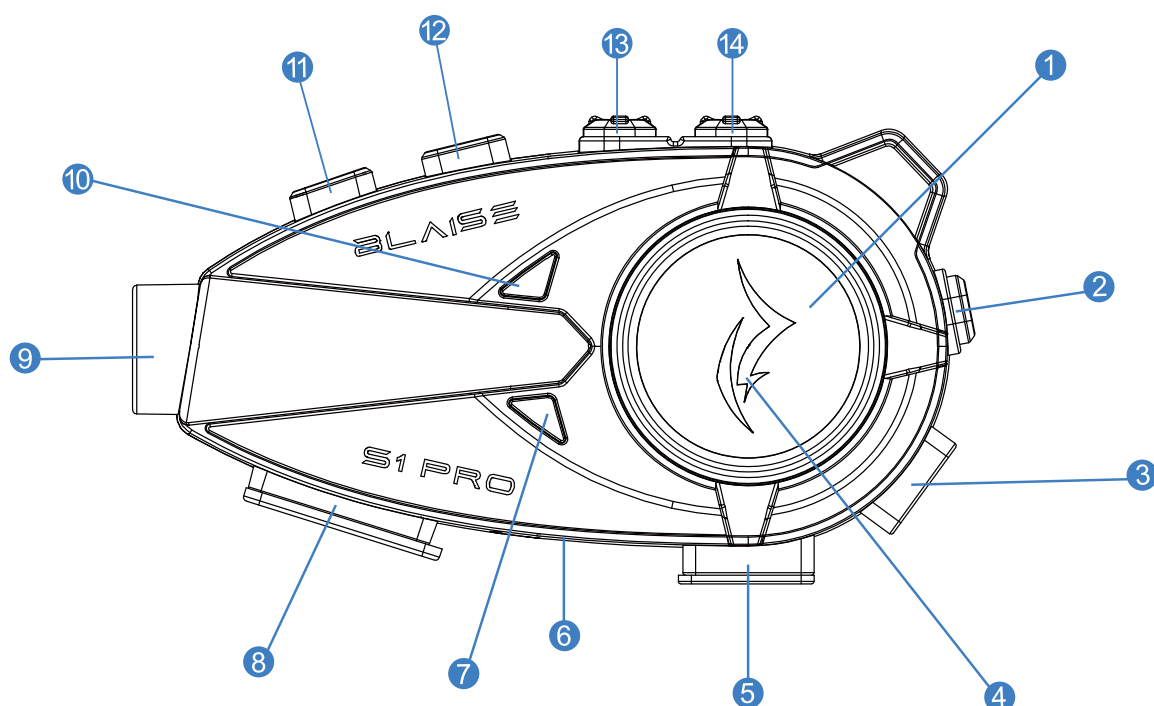

- | | | |
|---|---|-----------------------------------|
| 1. Turn on and off / Answer and hang up / Play pause | 2. Intercom button | 3. Speaker / microphone interface |
| 4. Charging indicator (red)
Bluetooth operating indicator (blue) | 5. Charging port | 6. Recorder mic |
| 7. Video indicator (blue)
WiFi indicator (red) | 8. Recorder TF Card | 9. Camera lens |
| 10. Intercom indicator (green) | 11. Recorder switch on / off
Turn on or stop recording | 12. Photo / wifi on or off |
| 13. Volume down / previous song / voice assistant | | 14. Volume up / next song |

Important Notice:

Before installing the headphones, follow the Quick Manual instructions to connect your phone and listen to the sound and volume. If there is a large difference in sound effect and volume after installing it on the helmet, please adjust the position of the speaker in the helmet.

 
Power on / off

Power on: Long press 【Multi-function button】 for 3 seconds, hear the power-on tone, LED light flashes quickly;

Power Off: Long press 【Multi-function button】 for 3 seconds, hear the shutdown beep and the LED light turns off;

Toggle Voice Announcement: Double-click 【Multi-function button】 to switch between Chinese and English voice broadcasting.

Multi-function button

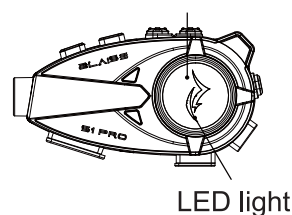


Intercom pairing

Intercom pairing: After the two machines are turned on, before connecting the Bluetooth, either one of them can long press the intercom button to enter the intercom mode and intercom pairing;

Intercom Indicator Status: Before the intercom is not connected, the intercom indicator light is flashing green; after successful pairing, the green light will be on for a long time, and the intercom call will be carried out when a "thud" sound is heard.

 Intercom Indicator Light

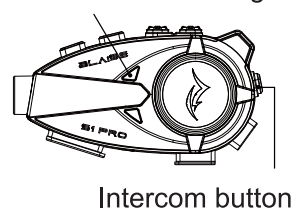


Bluetooth connection

Bluetooth connection: Long press 【multi-function button】 for 3 seconds to turn on the phone, the phone opens the Bluetooth, search and connect the Bluetooth name "S1 Pro";

Bluetooth indicator status: Before Bluetooth is not connected, the LED light blinks fast; after Bluetooth is connected, the LED light blinks slowly.

 Multi-function button

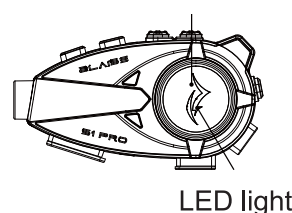

Telephone function

Toggle auto/manual answer: When Bluetooth is not connected, double-click 【Volume + button】 to switch manual answer/auto answer;

Auto answer: Wait 10 seconds for an incoming call and then answer it automatically;

Manual answer: Short press 【Multi-function button】 to answer the call;

 
Refuse to answer: Long press 【Multi-function button】 for 2 seconds to refuse to answer during an incoming call;

End call: Short press 【Multi-function button】 to end the call;

End code replay: Double press 【Multi-function button】 to replay the end code;

Cancel call: Short press 【Multi-function button】 to cancel call when calling.

Volume + button

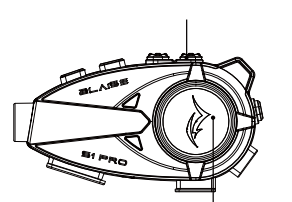

Multi-function button

Music function

 
Music play and pause: When music is paused, short press 【Multi-function button】 to play music; when music is playing, short press 【Multi-function button】 to pause music;

Previous song/volume down: short press 【Volume-button】 to switch to the previous song during music playback, long press 【Volume - button】 to reduce volume;

Next song/volume up: short press 【Volume + button】 to switch to the next song during music playback, long press 【Volume + button】 to increase volume.

Volume + button

Volume - button

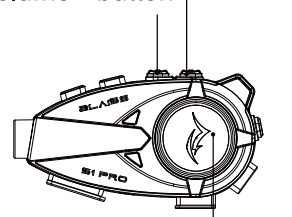


Multi-function button

Recorder / Video

Recorder on/off: Long press 【11 button】 for 3 seconds to turn on or off the tachograph

Recording on/off: (when the recorder is on) press 【11 button】 to turn on or off the recording

 
Note: Dashcam must be inserted memory card to use.

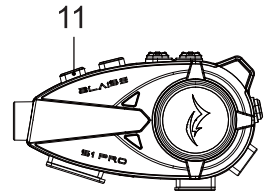

WIFI / Photography

Take photos: (need to disconnect the WIFI used by the software and not in the recording state) press 【12 button】 to take photos;

 WIFI on/off: Double click 【12 button】 to turn on or off WIFI.

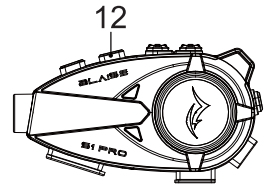


Intercom reset

I: Bluetooth intercom connection operation introduction (intercom connection is successful, Bluetooth music sound is off state, the phone comes will automatically switch to talk mode, the end of the call to restore the intercom):

1. The two machines are connected to the intercom for the first time: after the machine is turned on, in the case of no Bluetooth connection, One of the machines long press the intercom button to enter the intercom mode, and the green light flashes quickly, accompanied by Prompt tone "Intercom pairing", start the intercom pairing, after the pairing is successful, there will be a prompt tone for pairing Successfully "intercom connection", when you hear a "dong" sound, start the intercom call, at this time the intercom indicates that the green light is long.

2. After power on, if both machines have been connected to the cell phone Bluetooth, this time to connect to the intercom, one of them long press the intercom button to enter the intercom pairing mode, the other double-click the intercom button to enter the Bluetooth pairing mode, intercom pairing, intercom connection is successful, the green indicator light will be on.

 3. After power on, the intercom has been connected successfully, at this time to connect the Bluetooth, double-click the intercom button, enter the Bluetooth pairing mode, use the cell phone to search for connections

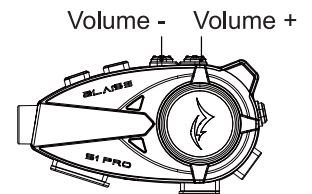

II: Intercom back to connect

1. Two machines have been connected, after powering on, short press one of the machine intercom button will automatically be connected back to the intercom indicator light is long after the connection.

2. Answer the phone: the two machines are successfully connected to the intercom, Bluetooth is also connected to the cell phone, when there is a phone call, it will automatically switch to the phone to answer the call, and after hanging up, the intercom will be restored.

III: Clear the intercom pairing, restore factory settings

Power on without connecting Bluetooth and intercom, press and hold the 【volume up and down button】 5S at the same time, when you hear the "thud" sound let go, that is, to restore the factory settings, clear all the pairing information.

IV: Use the machine to connect a third-party helmet Bluetooth headset for intercom calls

 
After booting, the two machines are not connected to the phone Bluetooth, talk to the machine boot long press the talk button to enter the talk mode, Bluetooth headset boot into Bluetooth mode, the two began to connect, connect successfully, there will be a prompt to talk to the connection, hear the "thud" sound, that is, start talking to each other.

Voice assistant / charging

Voice assistant: (Bluetooth has been connected state) double-click **【13 button】** to wake up the voice assistant;

Charging indicator status: red light is on when charging, full light is off;

Note: In the boot state, insert the charger to charge, the Bluetooth part will automatically shut down, and the car recorder will automatically turn on. The car recorder will automatically turn on; it is recommended to turn off the car recorder when charging.

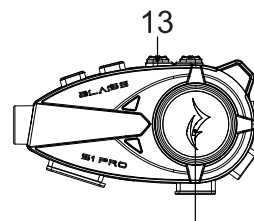

Charging Indicator

Video description / TF card reader

Video time and size: default every 5 minutes a file (APP can choose the video time and video file size) such as in the APP end of the slow download video, it is recommended that the APP end of the video time to change the short; video video in the APP to view only the image does not have the sound, you need to be in the car recorder APP end of the download down or in the computer to view before the video sound will come out;

 
Recording mode: Cyclic video (i.e. after a memory card is finished recording, it will automatically cover the previous video file, and so on);

Video function use: Long press the car recorder switch button to boot, the blue light is long bright, in standby mode, and then short press this button, start recording, the blue light flashes slowly;

Low power shutdown: In the process of use, due to the car recorder power consumption, the use of a short period of time will be shut down early, at this time the bluetooth function can continue to use, is a normal phenomenon; support (insert the TF card, insert the USB cable, one end of the head of the machine charging port, one end of the head connected to the computer, the machine automatically enters the card reader mode: the video indicator red and blue lights alternately flashing slowly); can be copied or deleted files on the computer);

Micro SD card (support ≤256G)

In the case of full card recording or more content, when using APP to view, the cache speed will become slower, it is recommended to use the card reader to open the view on the computer.

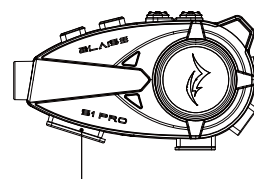

TF card insertion port

WIFI connection name / car recorder APP

WIFI connection name: S1-Pro-WIFI (APP connects to LAN, after connecting successfully, the phone can not connect to other WIFI, and can not use cell phone traffic, otherwise APP will disconnect) When using APP to view the video, the phone is in a no-network state, at this time, some other cell phone APP information over, the phone may automatically jump to connect to the network of other WIFI, resulting in the interruption of the phenomenon; at this time, we also need to To connect to WIFI again, you need to restart the wifi connection.

Car recorder APP operation mode: (Car recorder working conditions, must be inserted into the memory card to work normally)

1. Download APP: Open your cell phone Android or IOS in the cell phone application market or APP STORE directly search and download APP name: Roadcam after installation

2. Host connection APP: Long press the host car recorder switch on, double-click the photo button to open the WIFI, use the phone to open the WIFI function, search for the WIFI name: S1-Pro-WIFI After clicking connect successfully (the phone will be in no network state), open the downloaded Roadcam, click to connect to the recorder, after the connection is completed, the main interface of the APP will show that the recorder is connected successfully, click to enter to see the video recording.

3. View the recorded video or photo: Repeat the operation of point 2 above, enter the video interface, pause the recording, and then click on the video button on the window to view the recorded video; photo view the same operation.

4. APP running in the background, so when you need to exit the APP mobile phone running in the background, first in the APP interface to pause the video or the machine end to exit the WIFI connection, in the exit of the mobile phone APP running in the background, so as to avoid the phenomenon of the machine crash.

APP Installation and Connection

1 Download APP



Open the cell phone Android or IOS in the cell phone application market or APP STORE directly search and download APP name: **Roadcam** after the installation can be, or WeChat scanning code to download; and install to allow information services and camera access

**Android / IOS
APP Download QR Code**

2 Cell phone connection to recorder WIFI

After the recorder is turned on, you need to manually turn on WIFI to connect (**WiFi is only for this software**)



Long press the power on button to turn on the power.
Recorder indicator blue light long on.

 


Double click the photo button to open WIFI.
Recorder indicator light red and blue light long light.




Open **Roadcam** software interface, click Add Recorder button, automatically jump to the WIFI interface, search and connect "**S1-Pro-WIFI.....**". Then return to the software interface again, this time it shows that the logger has been successfully connected (Note: After connecting the logger LAN, cell phone traffic and other WiFi can not be used, and you must use this network to view the APP video).

3 Real-time video recording

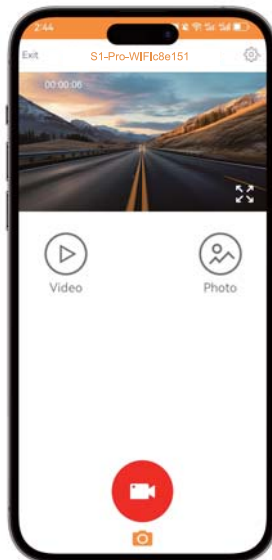


Click on the Recorder button in the software interface to view the real-time video.

 4 Setting parameters

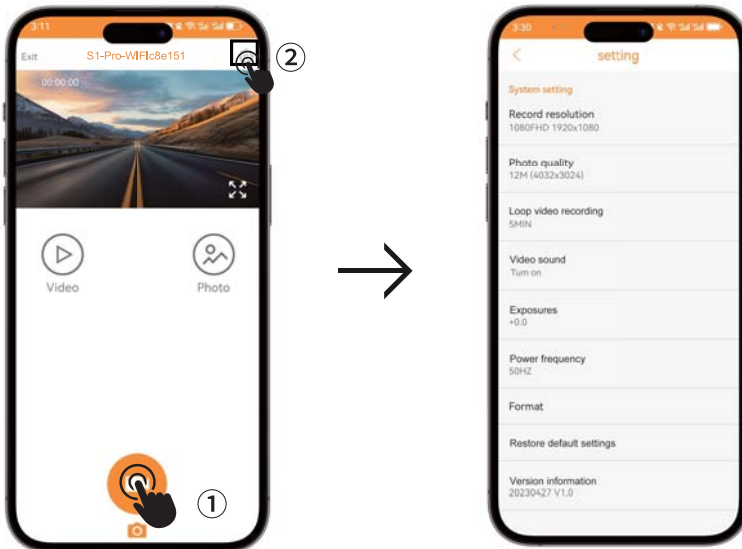


- ① Pause live video recording
- ② Click on the "Settings" button in the upper right corner to set various parameters.

 5 View Recorded Video / Pictures

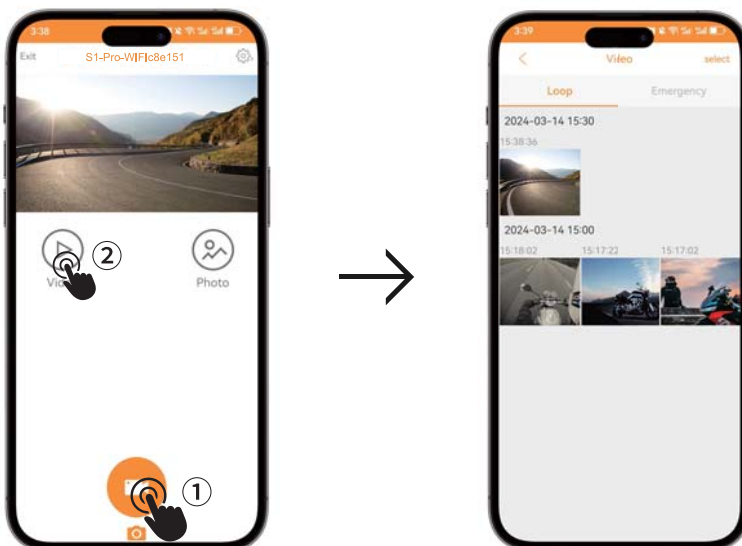


- ① Pause the live video recording
- ② Click the "Video" button, you can view the picture operation as above.

 6 View downloadable videos / images

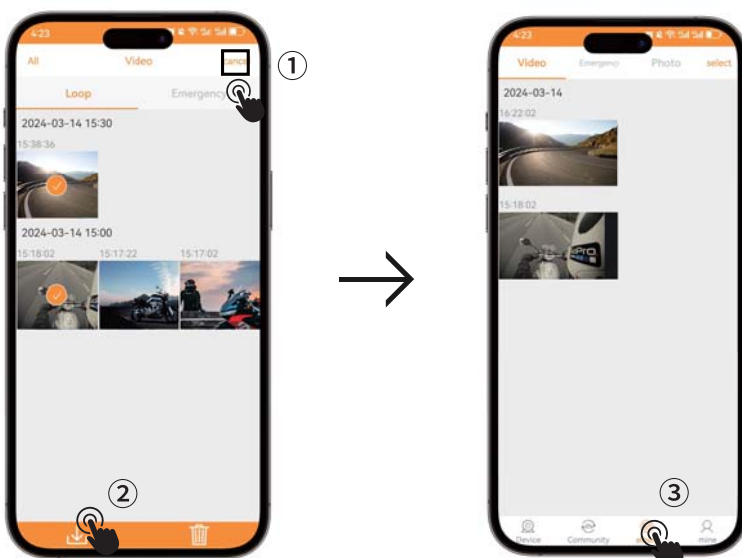


- ① Click the "Select" button and check the videos you want to download.
- ② Click on the "Download" button
- ③ Click on the "Albums" button to view downloaded local videos.

 
Product List

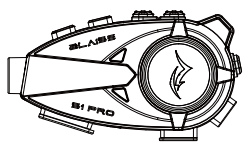





S1 PRO device*1

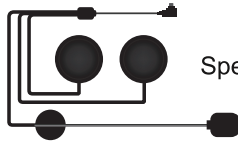 

Speaker Microphone*1

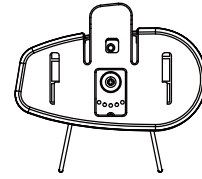 

Clip-on Base*1

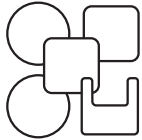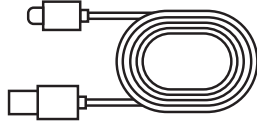    Hook and loop stickers
installation package*1Type-C Charging
Cable*1Instruction manual*1
32G high-speed card *1

Light Status

Functional status	Logger Indicator Status
Power on	Blue light always on
Power off	Lights out
Start recording	Blue light flashing
Pause the video	Blue light
Turn on WIFI	The red light stays on
Turn off WIFI	Red light out
SD card abnormality	Red and blue lights blink 7 times at the same time to shut down the machine
Connect to PC card reader function	Red and blue lights flash alternately

Product Parameters

Product Model	S1 PRO
Video pixels	2 million
Wide-angle lens	Wide 120°
Waterproof rating	IP66
Video duration	6.5H (no music on)
WIFI device name	S1-Pro-WIFI.....
Recording format	Video file format:MOV Photo format:JPG
Maximum memory	≤256G
Lithium battery	1500MAH
Charging time	About 3H
Charging Voltage	5V/1A
Applicable models	Motorcycle/Electric Vehicle

Frequently Asked Questions

S1 PRO use common problems:

1. Boot connected to the bluetooth, play music without sound, please confirm that the mark line in the correct interface or mark line interface has been completely accessed in the corresponding interface;
2. In the normal use of the process, due to the car recorder power consumption is higher than the Bluetooth, the car recorder will first shut down, Bluetooth normal work, is a normal phenomenon;
3. The cell phone connects to the WIFI of the car recorder, and the cell phone has no signal, which is a normal phenomenon;
4. Car recorder connection APP is not successful, confirm that the cell phone WIFI connection is the machine's WIFI name; or cell phone exit APP, machine switch to reconnect;
5. If the charging red light is not on, confirm that the charging cable is on the correct charging interface, or the voltage may be too low, need to charge for half an hour;
6. When the machine is plugged into the charging cable for charging, the Bluetooth function will be automatically shut down, and the car recorder terminal will be turned on, which is a normal phenomenon. Recommended in the charging process, turn off the car recorder, do not use the machine;
7. Car recorder memory card, due to high-definition video read and write into, such as the need to buy, it is recommended to buy a brand of high-speed memory card (Class10);
8. In the process of using the car recorder, in case of crash, please long press the car recorder at the same time to reset the button and photo button, and then reboot to use.

Caveat

1. Do not put the product into open flame to avoid explosion;
2. Do not disassemble the product to avoid damage to the product's electronic components;
3. Please do not close to sharp objects to cause damage to the product;
4. Please place it in a dry place if it is not used for a long time;
5. Before using the Bluetooth device, please fully charge it first;
6. In order to extend the life of the built-in polymer battery, please charge the device at least once a month.

Instruction warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

 
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

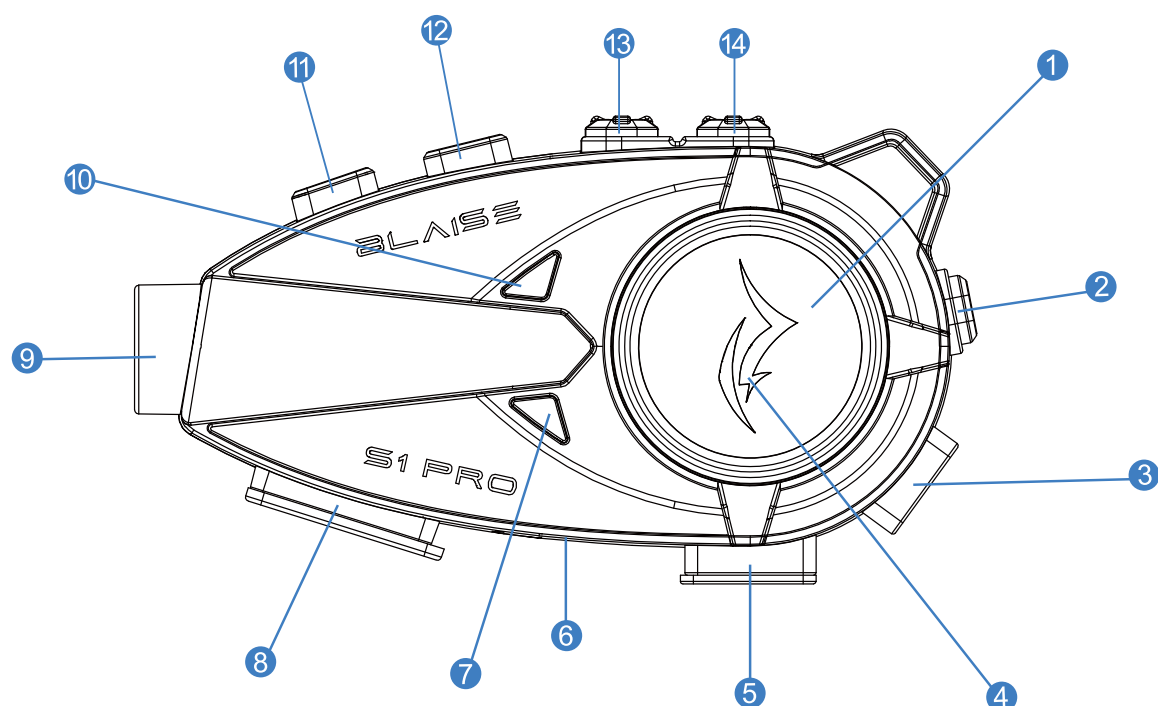

- | | | |
|-------------------------------|---------------------------|-----------------------|
| 1. 开关机键/接听挂断/
播放暂停 | 2. 对讲键 | 3. 喇叭/唛接口 |
| 4. 充电指示灯 (红)
蓝牙工作指示灯 (蓝) | 5. 充电口 | 6. 行车记录仪唛 |
| 7. 录像指示灯 (蓝色)
WIFI开启灯 (红色) | 8. TF卡 | 9. 摄像头 |
| 10. 对讲指示灯 (绿色) | 11. 行车记录仪开关机/
开启或关闭录像键 | 12. 拍照键/
WIFI开启关闭键 |
| 13. 语音助手
音量减/上一曲 | 14. 音量加/下一曲 | |

重要提醒：

耳机安装前，请按快速手册指引连接手机，试听音效和音量。

 
如安装到头盔后，音效和音量有较大的差异，请调整喇叭在头盔内的位置。

开机/关机

开机:长按【多功能键】3秒, 听到开机提示音, LED灯快闪;

关机:长按【多功能键】3秒, 听到关机提示音, LED灯关闭;


切换语音播报:双击【多功能键】, 切换中英文语音播报.

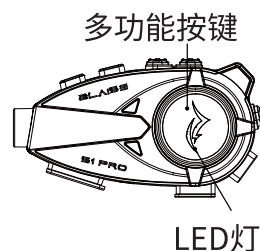

对讲配对

对讲配对:两台机器开机后, 未连接蓝牙前, 其中任意一台长按对讲键, 进入对讲模式, 进行对讲配对即可;

 
对讲指示灯状态:对讲未连接前, 对讲指示灯绿灯快闪; 配对成功后, 绿灯长亮, 当听到“咚”声, 进行对讲通话.

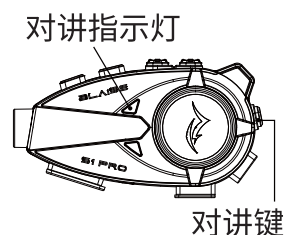

蓝牙连接

蓝牙连接:长按【多功能键】3秒开机, 手机打开蓝牙, 搜索并连接蓝牙名“S1 Pro”;

 蓝牙指示灯状态:蓝牙未连接前, LED灯快闪; 蓝牙连接后, LED灯慢闪.

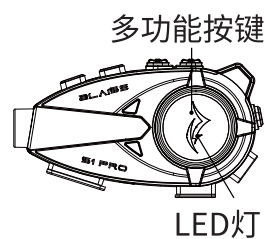

电话功能

切换自动/手动接听:未连接蓝牙时, 双击【音量+键】切换手动接听/自动接听

自动接听:来电中等待10秒后自动接听;

 
手动接听:来电中短按【多功能键】接听;

拒绝接听:来电中长按2秒【多功能键】拒绝接听;

结束通话:通话时短按【多功能键】结束通话;

末码重播:双击【多功能键】末码重播;

取消去电:去电时短按【多功能键】取消去电.

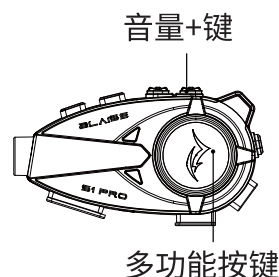


音乐功能

音乐播放与暂停:音乐暂停时, 短按【多功能键】播放音乐; 音乐播放时, 短按【多功能键】暂停音乐;

上一曲/音量减:音乐播放时短按【音量-键】切换上一曲, 长按【音量-键】音量减小;

 下一曲/音量加:音乐播放时短按【音量+键】切换下一曲, 长按【音量+键】音量加大.

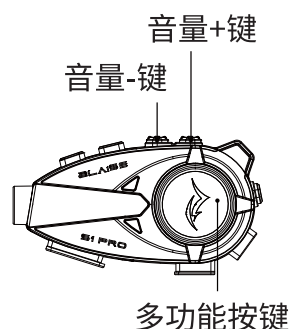


记录仪/录像

记录仪开启/关闭:长按【11键】3秒开启或关闭行车记录仪

录像开启/关闭:(记录仪开机状态下)短按【11键】开启或关闭录像;

 注:行车记录仪必须插入内存卡才能使用。

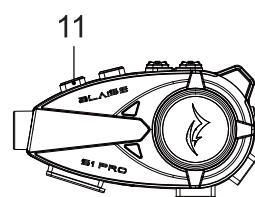


WIFI/拍照

拍照:(需要断开软件使用的WIFI和不在录像状态)

短按【12键】拍照;

 WIFI开启/关闭:双击【12键】开启或关闭WIFI.

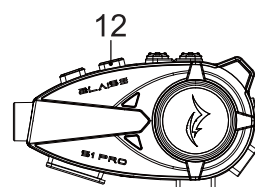


对讲重置

一:蓝牙对讲连接操作简介(对讲连接成功后, 蓝牙的音乐声音是关闭状态, 电话来时会自动切换到通话模式, 通话结束恢复对讲):

1.两台机器首次连接对讲:机器开机后,在没连接蓝牙的情况下,其中一台机器长按对讲键进入对讲模式,绿灯快闪,并伴有提示音“对讲配对”,开始对讲配对,配对成功后会有提示音提示配对成功“对讲连接”,当听到“咚”的一声后,开始对讲通话,此时对讲指示绿灯长亮.

2.开机后,若两台机器蓝牙都已连接手机时,此时要连接对讲,其中一台长按对讲键进入对讲配对模式,另外一台双击对讲键进入蓝牙配对模式,进行对讲配对,对讲连接成功后,绿色指示灯长亮.

 3.开机后,对讲已连接成功情况下,此时要连接蓝牙,双击对讲键,进入蓝牙配对模式,使用手机搜索连接.

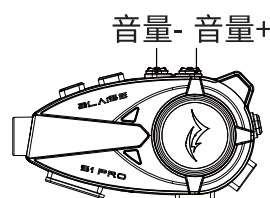

二:对讲回连

1.两台已连接过的机器,开机后,短按其中一台机器对讲键会自动回连,回连后对讲指示灯长亮.

2.电话接听:两台机器对讲连接成功,蓝牙也连接手机,当有电话进来,自动切换到电话接听,挂断后,对讲恢复.

三:清除对讲配对,恢复出厂设置

开机在没连接蓝牙和对讲的情况下,同时按住【音量加减键】5S,当听到“咚”声松手,即恢复出厂设置,清除所有配对信息.

四:使用机器连接第三方头盔蓝牙耳机进行对讲通话

 
开机后,两台机器都不连接手机蓝牙,对讲机器开机后长按对讲键进入对讲模式,蓝牙耳机开机进入蓝牙模式,两台开始连接,连接成功后,会有提示对讲连接,听到“咚”声后,即开始对讲.

语音助手/充电

语音助手: (蓝牙已连接状态下) 双击【13键】唤醒语音助手

充电指示灯状态: 充电时红灯长亮, 充满灯灭;


注: 在开机状态下, 插入充电器充电, 蓝牙部分会自动关机, 行车记录仪会自动开机; 建议充电时, 把行车记录仪关闭。

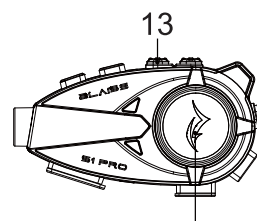

充电指示灯

录像说明/TF卡读卡器

 录像视频时间和大小: 默认每5分钟一个文件 (APP可选择录像时间和录像文件大小) 如在APP端下载视频较慢, 建议在APP端把录像时间改短; 录像视频在APP上查看只有图像没有声音, 需在行车记录仪APP端下载下来或在电脑上查看才会有视频声音出来;

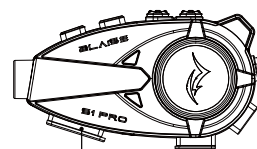

TF卡插入口

录像方式: 循环录像 (即一张内存卡录完后, 会自动覆盖前面的录像文件, 以此类推);

录像功能使用: 长按行车记录仪开关机键开机, 蓝灯长亮, 处于待机状态, 再短按此键, 开始录像, 蓝灯慢闪;

低电关机: 在使用过程中, 由于行车记录仪功耗较大, 使用时间短会提前关机, 此时蓝牙功能还可以继续使用, 属于正常现象; 支持 (插入TF卡, 插入USB数据线, 一头接机器充电口, 一头接电脑, 机器自动进入读卡器模式: 录像指示灯红蓝灯交替慢闪); 可在电脑上进行拷贝或删除文件;

Micro SD卡 (支持≤256G)

在卡录满或者内容较多的情况下, 使用APP查看时, 缓存速度会变慢, 建议使用读卡器在电脑上打开查看。

WIFI连接名/行车记录仪APP

WIFI连接名: S1-Pro-WiIFI.... (APP连接局域网, 连接成功使用后, 手机不能连接其它WIFI, 也不能使用手机流量, 否则APP会断开连接) 在使用APP查看录像时, 手机处于无网络状态, 此时某些手机其他APP有信息过来, 手机可能会自动跳转连接有网络的其他WIFI, 导致中断, 属于正常现象; 此时还要再次连接WIFI, 需重启wifi连接。

行车记录仪APP操作方式: (行车记录仪工作条件, 必须插入内存卡才能正常工作)

1. 下载APP: 打开手机安卓或者IOS在手机应用市场或者APP STORE上直接搜索下载APP名: Roadcam后安装即可;

2. 主机连接APP: 长按主机行车记录仪开关机键开机, 双击拍照键打开WIFI, 使用手机打开WIFI功能, 搜索到WIFI名: S1-Pro-WIFI....., 点击连接成功后 (手机会处于无网络状态), 打开下载好的Roadcam, 点击连接记录仪, 连接完成后, APP主界面会显示记录仪连接成功, 点击进入即可看到录像视频;

3. 查看已录好的视频或照片: 重复上述第2点操作方式, 进入查看视频界面后, 先暂停录制, 然后点击窗口上的视频按钮即可进入查看已录好的视频; 照片查看操作一样。

4. APP在后台运行时候, 如此时需要退出APP手机后台运行, 先在APP界面暂停录像或机器端退出WIFI连接, 在退出手机后台运行, 以免出现机器死机现象。

APP安装与连接

1 下载APP



打开手机安卓或者IOS在手机应用市场或者APP STORE上直接搜索下载APP名:**Roadcam**后安装即可,或者微信扫码下载;并安装允许信息服务和摄像头访问。

安卓/IOS系统
APP下载二维码

2 手机连接记录仪WIFI

记录仪开机后,需手动打开WIFI进行连接
(WiFi仅限此软件使用)



长按开机键开机
记录仪指示灯蓝灯长亮

 


双击拍照键开启WIFI
记录仪指示灯红蓝灯长亮



打开**Roadcam**软件界面,点击添加记录仪按钮,自动跳转WIFI界面,搜索连接“**S1-Pro-WIFI.....**”,再次回到软件界面,此时显示记录仪已连接成功(注:连接记录仪局域网后,手机流量和其他WiFi都不能使用,且必须使用此网络查看APP视频)

3 实时录像

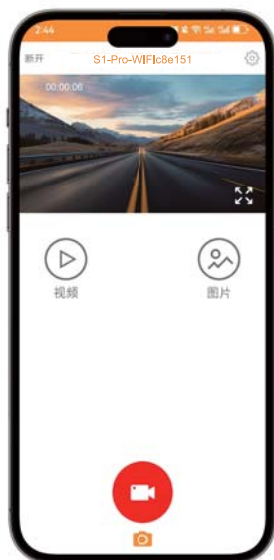

点击软件界面记录仪按钮即可查看到实时录像

4 设定参数



 
- ① 暂停实时录像
- ② 点击右上角“设置”按钮，可设定各种参数

5 查看录制视频/图片




- ① 暂停实时录像
- ② 点击“视频”按钮，即可查看，图片操作同上

6 查看下载视频/图片

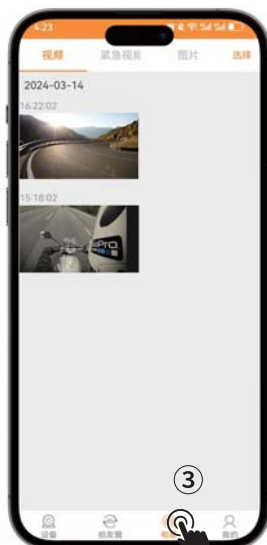


- ① 点击“选择”按钮，勾选需要下载的视频
- ② 点击“下载”按钮
- ③ 点击“相册”按钮即可查看下载的本地视频

 
产品清单

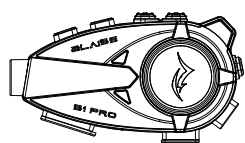


S1 PRO 主机*1

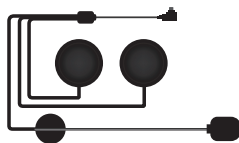 


喇叭麦克风*1

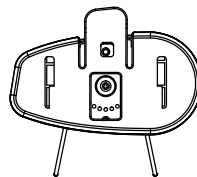 

夹式底座*1

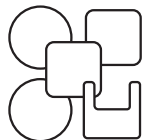 


魔术贴安装包*1

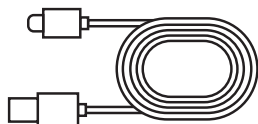 

TYPE-C充电线*1



 使用说明书

使用说明书*1
32G高速卡*1

灯光状态

功能状态	记录仪指示灯状态
开机	蓝灯长亮
关机	灯光熄灭
开始录像	蓝灯闪烁
暂停录像	亮蓝灯
开启WIFI	红灯光长亮
关闭WIFI	红灯熄灭
SD卡异常	红蓝灯同时快闪7次关机
连接电脑读卡器功能	红蓝灯交替闪烁

产品参数

产品型号	S1 PRO
录像像素	200万
广角镜头	广角120°
防水等级	IP66
录像时长	6.5H(不开音乐)
WIFI设备名	S1-Pro-WIFI.....
录制格式	录像文件格式:MOV 照片格式:JPG
最高内存	≤256G
锂电池	1500MAH
充电时间	约3H左右
充电电压	5V/1A
适用车型	摩托车/电动车

使用常见问题

S1 PRO使用常见问题：

- 1.开机连上蓝牙，播放音乐没有声音，请确认唛线在正确接口上或唛线接口已完全接入对应的接口中；
- 2.在正常使用过程中，由于行车记录仪耗电高于蓝牙，行车记录仪会先关机，蓝牙正常工作，属于正常现象；
- 3.手机连接上行车记录仪的WIFI，手机无信号，属于正常现象；
- 4.行车记录仪连接APP不成功，确认手机WIFI连接的是本机的WIFI名称；或手机端退出APP，机器开关机重新连接；
- 5.如果充电红灯不亮，确认充电线在正确的充电接口上，或者可能是电压过低，需充电半个小时；
- 6.机器插入充电线充电，蓝牙功能会自动关机，行车记录仪端会开机，属于正常现象。建议在充电过程中，关闭行车记录仪，勿使用机器；
- 7.行车记录仪内存卡，由于高清视频读写入，如需购买时，建议购买品牌的高速内存卡 (Class10)；
- 8.在行车记录仪使用过程中，如遇死机情况，请同时长按行车记录仪的开关键和拍照键复位，再重新开机使用。

注意事项

- 1.请勿将产品投入明火中，避免发生爆炸；
- 2.请勿拆卸产品，避免产品电子器件损坏；
- 3.请勿靠近尖锐器物对产品造成损坏；
- 4.长时间不用，请放置干燥处；
- 5.使用蓝牙设备前，请先将其充满电；
- 6.为了延长内置聚合物电池的使用寿命，请每月至少为设备充电一次。

产品信息

产品型号：S1 PRO

 
认证型号：S1 Pro

公司名称：宁波摩航智能科技有限公司

执行标准：GB 4943.1-2022

售后电话：15267848841

公司地址：浙江省宁波高新区菁华路188号(甬港现代铭楼)B座041幢

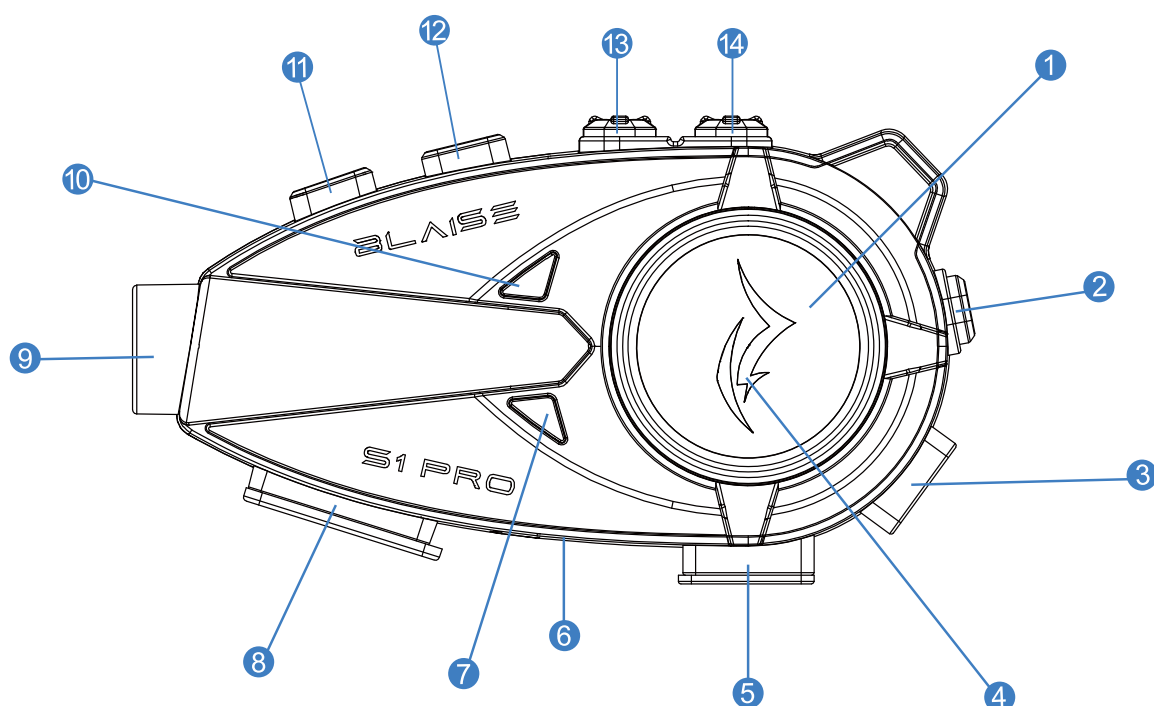

1. Encender y apagar / Contestar y colgar / Pausa de reproducción

2. Botón de intercomunicación

3. Altavoz / micrófono interfaz

4. Indicador de carga (rojo) / Indicador de funcionamiento del Bluetooth (azul)

5. Puerto de carga

6. Micrófono grabador

7. Indicador de vídeo (azul) / Indicador WiFi (rojo)

8. Tarjeta del registrador TF

9. Objetivo de la cámara

10. Indicador de intercomunicación (verde)

11. Interruptor de encendido / apagado de la grabadora Encienda o detenga la grabación

12. Foto / wifi encendido o apagado

13. Volume Down / Previous Song / voice Assistant (en inglés)

14. Volume up / Next Song (en inglés)

Recordatorio importante:

Antes de instalar el casco, conecte su teléfono móvil de acuerdo con la guía rápida del manual para comprobar el efecto de sonido y el volumen.

Si hay una gran diferencia en el efecto de sonido y el volumen después de la instalación en el casco, por favor, ajuste la posición del altavoz dentro del casco.

Encender / apagar

Encendido: Pulse **【Tecla multifunción】** durante 3 segundos, oirá el tono de encendido y la luz LED parpadeará;

Apagado: Mantenga pulsada la tecla **【Tecla multifunción】** durante 3 segundos, oirá el tono de apagado y la luz LED se apagará;

Cambio del anuncio de voz: Haga doble clic en **【Tecla multifunción】** para cambiar entre el anuncio de voz en inglés y en chino.

Emparejamiento de intercomunicadores

Emparejamiento del intercomunicador: Después de encender los dos equipos, antes de conectar el Bluetooth, uno de ellos pulsa prolongadamente el botón del intercomunicador para entrar en el modo de intercomunicador y, a continuación, se puede llevar a cabo el emparejamiento del intercomunicador;

Estado del indicador de intercomunicación: Intercomunicador no está conectado antes, la luz indicadora de intercomunicación parpadea en verde; después de emparejar con éxito, la luz verde estará encendida durante mucho tiempo, cuando se oye el sonido "ruido sordo", llamada de intercomunicación.

Conexión Bluetooth

Conexión Bluetooth: pulsa prolongadamente **【Tecla multifunción】** durante 3 segundos para encender el teléfono móvil, abre el Bluetooth, busca y conecta el nombre Bluetooth "S1 Pro";

Estado del indicador Bluetooth: Antes de que el Bluetooth no esté conectado, la luz LED parpadea rápidamente; después de conectar el Bluetooth, la luz LED parpadea lentamente.

Función de teléfono

Conmutar respuesta automática/manual: cuando no esté conectado a Bluetooth, haz doble clic en **【Tecla Volumen +】** para conmutar entre respuesta manual y automática;

Respuesta automática: espera 10 segundos a recibir una llamada y contesta automáticamente;

Respuesta manual: pulsa brevemente **【Tecla multifunción】** para responder a la llamada;

Rechazar respuesta: pulsación larga de **【Tecla multifunción】** durante 2 segundos para rechazar la respuesta durante una llamada entrante;

Finalizar llamada: pulse brevemente **【Tecla multifunción】** para finalizar la llamada;

Repetición del código de fin de llamada: pulse dos veces **【Tecla multifunción】** para reproducir el código de fin de llamada;

Cancelación de llamada: pulse brevemente **【Tecla multifunción】** para cancelar la llamada.

Función música

Reproducción y pausa de música: cuando la música está en pausa, pulsa brevemente

【Tecla multifunción】 para reproducirla; cuando la música se está reproduciendo, pulsa brevemente **【Tecla multifunción】** para pausarla;

Canción anterior/bajar volumen: pulsación corta de **【Tecla Volumen -】** para pasar a la canción anterior durante la reproducción de música, pulsación larga de **【Tecla Volumen -】** para bajar el volumen;

Siguiente canción/subir volumen: pulsación corta de **【Tecla Volumen +】** para pasar a la siguiente canción durante la reproducción de música, pulsación larga de **【Tecla Volumen +】** para subir el volumen.

Grabadora / vídeo

Encendido/apagado de la grabadora: pulse **【11 Teclas】** durante 3 segundos para encender o apagar la grabadora;

Vídeo encendido/apagado: (grabador encendido) pulsación corta **【11 Teclas】** para encender o apagar el vídeo;

 
Nota: La grabadora del coche debe estar insertada en la tarjeta de memoria que se va a utilizar.

WIFI / Foto

Tomar una foto: (es necesario desconectar el WIFI utilizado por el software y no en el estado de grabación) pulsación corta **【12 Teclas】** para tomar una foto;


WIFI on/off: doble clic en **【12 Teclas】** para encender o apagar el WIFI.

Teclas multifunción

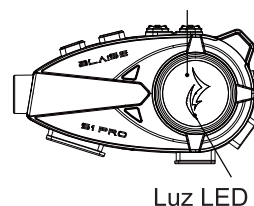


Luz LED

 Indicador de interfono

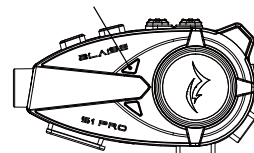


Botón del intercomunicador

 Teclas multifunción

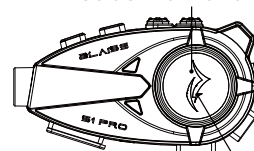


Luz LED

 Tecla Volumen +

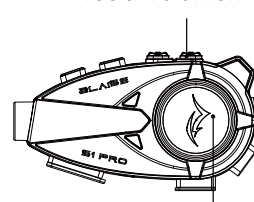


Teclas multifunción

 Tecla Volumen +

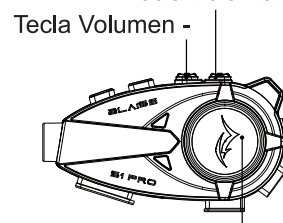

Teclas multifunción

 11

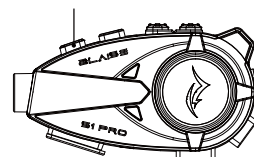

12

