

BLAISE V15S

HELMET WIRELESS HEADSET  
PRODUCT MANUAL




# CONTENTS

---

English	P3-8
中文	P9-13
Lengua española	P14-18
Русский	P19-23
Indonesia	P24-28



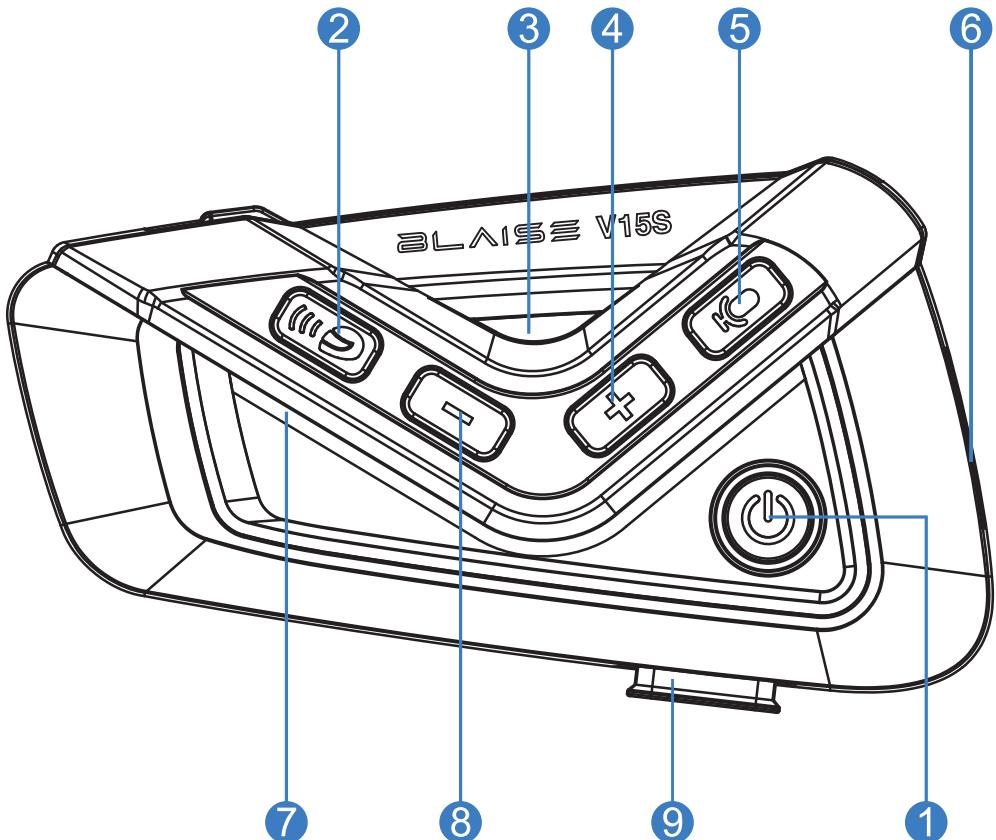

1.Power on or off button / Play or pause / Answer or hang up/  
Charging indicator (red) / Wireless indicator (blue)

2.Intercom button

3. Intercom light (green light) / Music sharing light (blue light)

4.Volume up / Next song

5.Music Sharing /  
Voice assistant

6.Charging port

7.RGB lights

8.Volume down /  
Previous song

9.Speaker&Microphone  
Interface

#### Important Notice:

Before installing the headphones, follow the Quick Manual instructions to connect your phone and listen to the sound and volume.

If there is a large difference in sound effect and volume after installing it on the helmet, please adjust the position of the speaker in the helmet.


## Power on/off

**Power on:** Long press 【Power on/off button】 for 3 seconds, hear the switch-on tone, Blue LED flashes quickly

**Power off:** Long press 【Power on/off button】 for 3 seconds, you will hear the switch-off tone and the Blue LED off.

**Switch voice announcement:** When the device is switched on without connecting to intercom, wireless or music sharing, double-click the 【Power on/off button】 to switch the voice announcement.

**Power voice announcement:** after power on, announce the current remaining power (low power, power 20%, 50%, 80%, 100%)

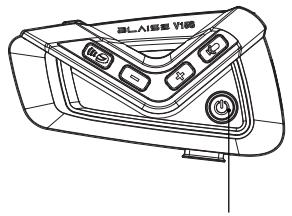


Power on/off button  
Blue LED light

## Wireless connection

**Wireless connection:** long press 【Power on/off button】 3 seconds to boot, mobile phone open wireless, search and connect wireless name 'BLAISE V15S' (in intercom mode, if the intercom is not connected successfully, the mobile phone can not search for wireless devices, you must intercom connection is successful or exit the intercom mode in order to search for wireless devices)

**Wireless indicator status:** before wireless not connected, blue LED flashes fast; after wireless connection, blue LED flashes slowly; when the music is paused, blue LED flashes slowly; when the music is playing, blue LED lights up long time

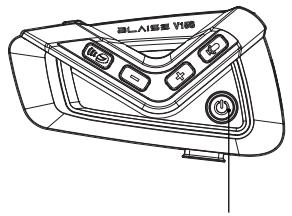


Power on/off button  
Blue LED light

## Intercom pairing/mode switching

**Intercom pairing:** after the machine is switched on, long press 【intercom button】 for 3S to enter intercom network pairing (intercom pairing tone), long press again to exit the network pairing.

**Intercom indicator status:** Before intercom is connected, the green LED light flashes twice at 3S intervals, after intercom is successfully connected, the green LED light flashes twice at 3S intervals, accompanied by intercom connection success tone, at this time you can make intercom calls.

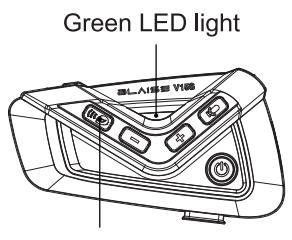

Green LED light  
Intercom button

## Telephone function

**Switch automatic/manual answer:** not connected to the wireless, intercom, music sharing, double-click the 【volume + button】 switch manual answer/automatic answer

**Auto answer:** wait 15 seconds for an incoming call and then answer it automatically.


**Manual answer:** Incoming call,Short press 【Power on/off button】 to answer the call.

**Refuse to answer:** Long press 【Power on/off button】 for 2 seconds to refuse to answer during an incoming call.

**End call:** Short press 【Power on/off button】 to end the call while on a call

**End code replay:** double press 【Power on/off button】 to replay the end code.

**Cancel call:** short press 【Power on/off button】 to cancel call when calling.

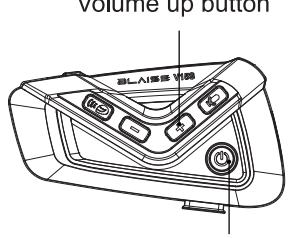


Volume up button  
Power on/off button

## Music function

**Music play and pause:** When music is paused, short press 【Power on/off button】 to play music; when music is playing, short press 【Power on/off button】 to pause music

**Previous song/Volume Down:** When no intercom is connected, Short press 【Volume - button】 to switch to the previous song while music is playing, long press 【Volume - button】 to decrease the volume.

**Next song/Volume up:** When no intercom is connected, short press 【Volume + button】 to switch to the next song while music is playing, long press 【Volume + button】 to increase the volume.

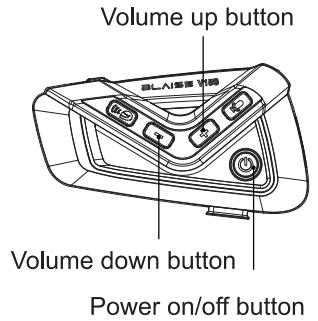


## Music Sharing Mode and Pairing

**Music Sharing Mode:** After the machine is switched on, short press 【Music Sharing button】 to enter Music Sharing Pairing (Music Sharing Mode Beep); short press again to exit Music Sharing Pairing.

**In Music Sharing Mode:** Double press 【Music Sharing button】 to switch between transmit and receive modes.

**Music Sharing Pairing Indicator Status:** In the pairing music sharing indicator status, the blue LED light on the transmitting end flashes fast, and the blue LED light on the receiving end flashes slowly; after pairing is successful, the blue LED light on the transmitting end flashes fast, and the blue LED light on the receiving end lights up longly; after the music sharing is successful, long-press 【Volume Up/Down Button】 on the transmitting end to adjust the volume of wireless volume and the volume of music sharing at the same time, and long-press 【Volume Up/Down Button】 on the receiving end to adjust the volume of this camera, short press 【On/Off button】 to mute or play.

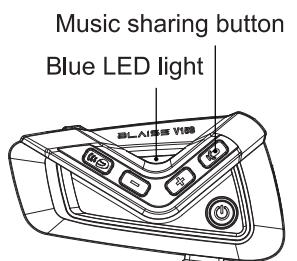

## Mixing function


**Mixing:** Intercom and wireless can work independently without affecting each other, when the intercom and wireless are connected successfully, the two voices can be mixed out to the speaker end, you can hear the sound of the two modes at the same time (navigation/music, intercom)

**When the intercom is successfully connected, the volume up and down operation is as follows:** ① short press the volume up and down keys to adjust the volume size of the wireless music ② long press the volume up and down keys to adjust the volume size of the intercom ③ double-click the volume up and down keys to switch the wireless music of the next song and the previous song

## RGB light on/off

**RGB light effect:** after the machine is switched on, the RGB light is off by default, and press 【switch button+ intercom button】 at the same time to turn on the RGB light effect.


**Light effect switching:** short press 【switch button + intercom button】 at the same time, switch RGB light effect, the last mode to close the RGB light.

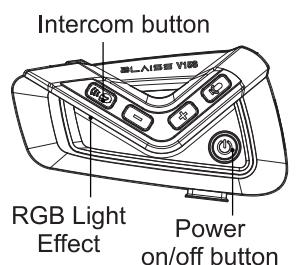

# Charging function/voice assistant

**Charging indicator status:** red light is on when charging, light is off when fully charged(power on state, plug in the charger, the machine will automatically shut down)

**AI voice assistant:** in case of wireless connection, long press 【voice button】 to wake up the voice assistant; long press again to exit the voice assistant (exit the voice assistant depends on the mobile phone)

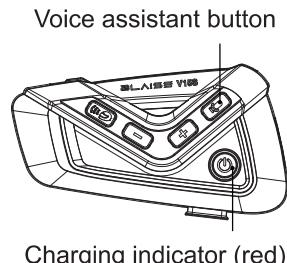

## Introduction to wireless intercom connection operation (intercom and music sharing are switched off by default every time you switch on the computer)

**I: MESH Networking Pairing.** The corresponding channel or intercom mode will be broadcast when the intercom is switched on.

### 1. Channel Selection

Switch on intercom mode, channel 1 channel 2 channel 3 channel 4 channel 5 channel 6 channel 7 channel 8 ..... 【Under power on condition (without entering intercom mode), press 'intercom button + volume up button' at the same time to select】.

Channel 0 Channel 10 Channel 20 Channel 30 Channel 40 Channel 50 Dual Intercom Mode 【Under power on state (without entering intercom mode), press 'intercom key + volume down key' at the same time briefly to select】.

Only those with the same channel can be grouped into a network link, and they can come and go whenever they want. After setting the channel, the next time you switch on the phone, it will remember the previous channel.

### 2. Switch on all the units.

**3. Select one of them to be the host and long press 'volume plus + intercom button' to activate the network, prompt: group 1, start to group network.**

Example: 15 units are all set to channel 10, one of them is the host, long press 'volume up + intercom button' to activate the network, 15 units can be connected, and the other new members, also set channel 10, will automatically join the 15-member mode.

### II: Link status and location query

After establishing the network, click the intercom button to check the number of people and location of the link, such as No. 4 click, prompt: intercom number 15, group 4. exit intercom mode: just long press the intercom button for 3s, prompt: close the intercom mode, that is, you can exit. If No.4 exits, No.3 will automatically connect with No.5, and next time No.4 enters the intercom mode, it will automatically fill in the end.

### III: Clear intercom pairing, restore factory settings

Under power on state, long press 'Volume Up + On/Off' button for 5 seconds, the music indicator and wireless indicator will flash 3 times, then it will restore factory settings and clear all pairing information.

### IV: Music Sharing

After the device is switched on, one mobile phone connects to the device to play music by wireless, and enters the music sharing transmitting mode, the blue indicator light flashes fast, the other device short presses the music sharing key to enter the music sharing receiving mode pairing, the blue indicator light flashes slowly, after pairing is successful, the indicator light of the receiving end is long lit, the indicator light of the transmitting end flashes fast, and the music sharing is successful.

### V: RGB light

After switching on the phone, the RGB light is off by default, short press the switch key + intercom key at the same time to switch the RGB light effect.

**VI: Use the machine to connect a third-party helmet wireless headset for intercom calls.**

When the machine is switched on, it enters intercom mode (adjusted to two-person mode) and then simultaneously long press the intercom button with the volume up button for 3 seconds, hear the tone: search, wireless headset boot into wireless mode, the two began to connect, connect successfully, there will be a prompt to intercom connection, hear the 'thud' sound, that is, to start intercom. Recommended to connect the third-party wireless headset, first use the mobile phone to connect to the local wireless, to prevent the intercom connected to the local wireless


**VII: Auto Answer On/Off**

Switch on the power, in the case of not connecting wireless, intercom, music sharing: double-click the volume up key to switch between manual and auto answer mode, default auto answer.

**VIII: Dual Language Tone Switching**

After switching on, in the case of not connecting wireless, intercom, music sharing: double-click the power on/off button to switch.

## Product List

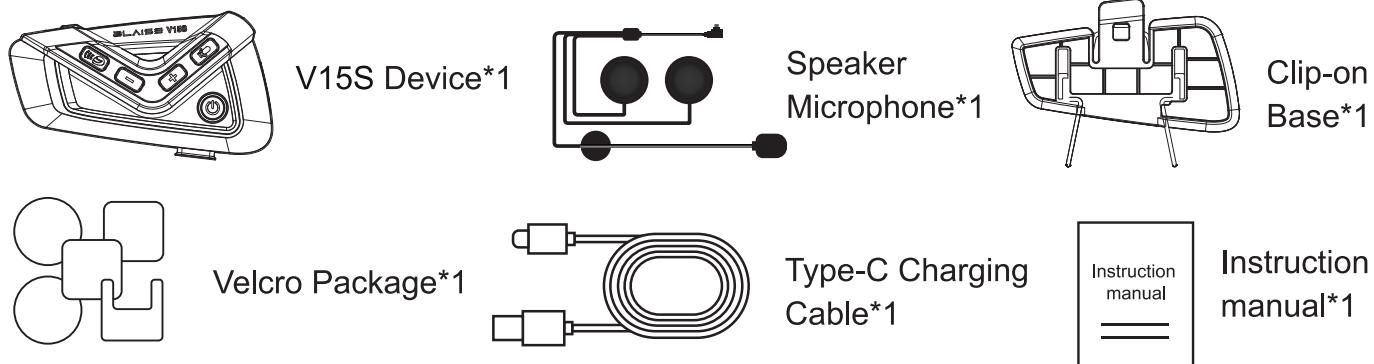

## Product Parameter

Product model	V15S
Waterproof rating	IPX6
Lithium battery	1000MAH
Charging time	≤2.5H
Number of interlocutors	15 people
Intercom hours	15H
Endurance	25H
Standby time	270H
Charging voltage	5V/1A
Applicable models	Motorcycle / Electric Vehicle

## Caveat

1. Do not put the product into open flame to avoid explosion;
2. Do not disassemble the product to avoid damage to the product's electronic components;
3. Please do not close to sharp objects to cause damage to the product;
4. Please place it in a dry place if it is not used for a long time;
5. Before using the wireless device, please fully charge it first.
6. If the red light does not come on when charging, the voltage may be too low;
7. In order to extend the life of the built-in polymer battery, please charge the device at least once a month.

## Instruction warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference wil not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1)This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device can be used in portable exposure condition without restriction.