


157g铜版纸

76x130mm

折页 分割线无需印刷

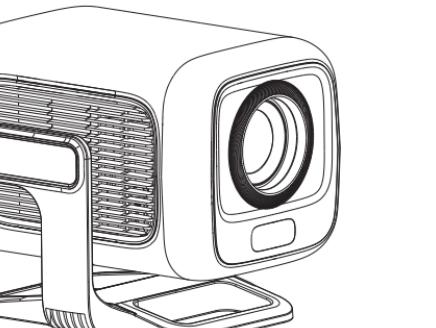


## User Manual X3AQ

### Safety Instructions


Read all instructions before you use this device. Do not make any changes or create settings that are not described in this manual. If physical damage, loss of data or damage is caused by failure to follow instructions, the warranty does not apply.

- To reduce the risk of fire or electric shock, do not expose the device to rain or moisture. Objects filled with liquids, such as vases, should not be placed on this device.
- Do not place this device on soft surfaces such as tablecloths or carpets, otherwise the device could be a fire hazard.
- Do not place this device in areas susceptible to excessive dust and dirt or near any appliance generating a strong magnetic field.
- To prevent overheating, do not block or clog the ventilation holes.
- Never place this device in a confined space. Always leave enough space around this device for ventilation.
- Protect this device from overexposure to direct sunlight, heat, large temperature fluctuations and moisture. Avoid extreme temperatures.
- When this device is running for a long period of time, the surface may become hot. Shut it down immediately and unplug the charger. Resume operation after this device has cooled down.
- Always handle this device with care. Avoid touching the lens. Do not allow children to handle the device without supervision.
- Use attachments or accessories specified by the manufacturer only.
- Avoid extreme vibration as it may damage the internal components.


### Package List

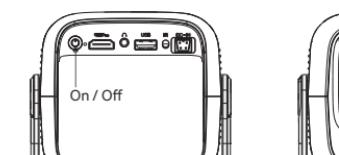

Projector x 1

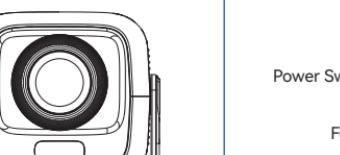


Remote Control x 1  
(Batteries are not included)

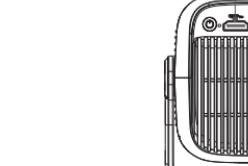


Adapter x 1



 HDMI Cable x 1






Projector User Manual x 1

 

Clean Tool x 1

### Overview

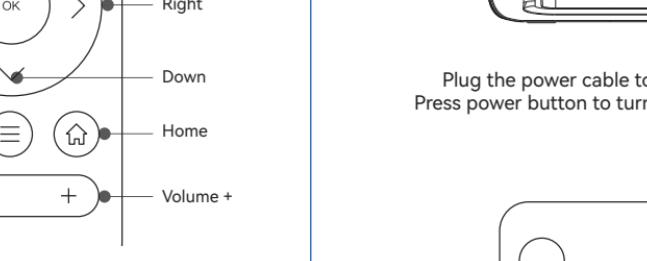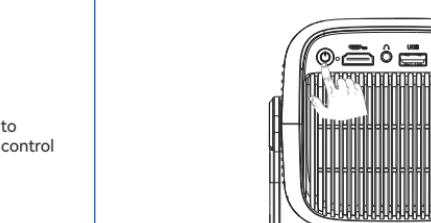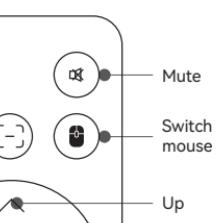

#### Tips:


##### 1. Blurry Image

Go to Settings - Projection Settings - Auto Four Keystone Correction - Turn on the Auto Four Keystone Correction or enter Manual Keystone to adjust the image. Press the focus button on remote control to get the best clarity.


##### 2. Mounting Hole

Adopting a single mounting hole dual-use design, the projector is compatible with the standard camera tripod and 1/4 inch screw projector tripod stand.


### Getting Started

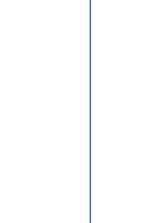

1. Get the screwdriver ready, unscrew the screws.

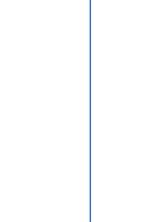

2. Clean the projector by the cotton swab.

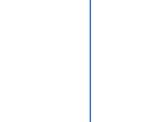



3. Reinstall the bottom cover after cleaning.

Use the manual focus by pressing the "Focus" button on the remote control.

#### Tips:

Make sure the projector is horizontal to the projector screen.

### Remote Control

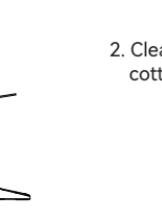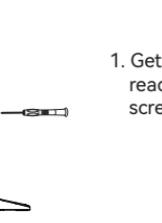

Power Switch

Focus

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Power Socket

IR receiver

HDMI Input

USB Input

3.5mm Stereo Jack

IR receiver

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

Return

Home

Volume -

Volume +

Focus

Power

OK

Up

Left

Right

Down

Menu

