 
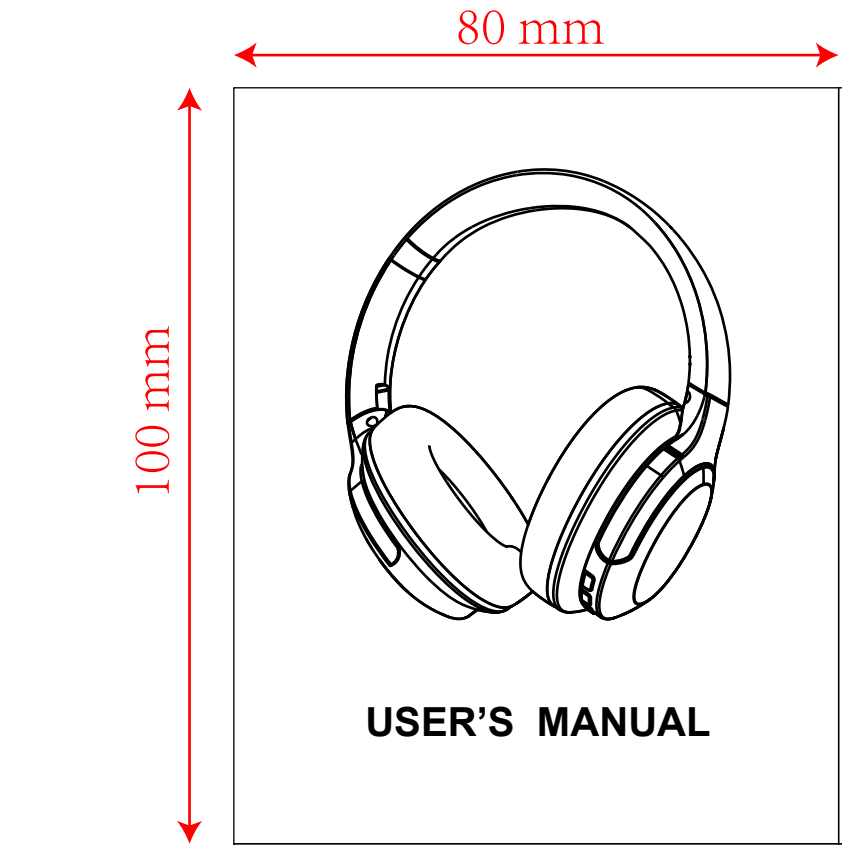 
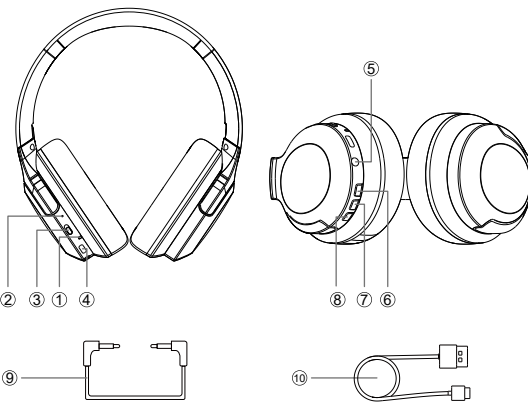 


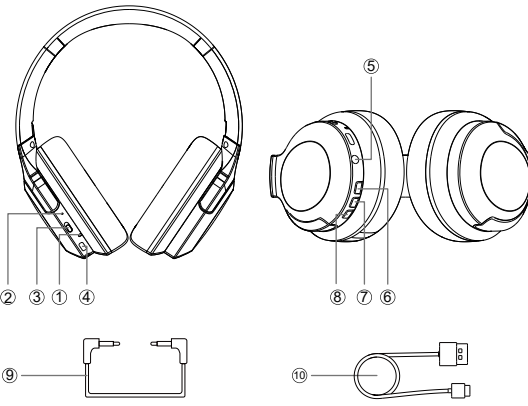

 USER’S MANUAL	 1- LED indicator 2- Microphone 3- Power button 4- TYPE-C USB charging port 5- 3.5mm earphone port 6- Volume down (short press)/ Previous song(long press) 7- Multifunction button (play/ pause, Answer/ Hang up calls/ Reject call/ Last outgoing number redial) 8- Volume up(short press)/Next song(long press) 9- 3.5 mm audio cable 10- Charging cable	Power on/ off the headset - Power on: Flip the Power button to turn on , the indicator light start quickly flashing (the headset will have reminder sound). - Power off: Flip the Power button to turn off (the headset will have reminder sound). Pair to your mobile phone or other products - Flip the Power button to turn on , the indicator light start quickly flashing (the headset will have reminder sound). - Turn on the Bluetooth function of your phone or other products. - Search for the Bluetooth devices and select "DECIBEL BLACKBEATPRO" If pairing is successful, the light indicator starts slowly flashing(the headset will have short reminder sound). - Please make the headphone is on before pair. - It will connect to the Pre-set phone automatically when turns on(please make sure the Bluetooth function of your phone is on). - If the pairing is not successful, please switch off headset firstly, and then switch on the headset to re-pair again.
Aux line-in - Insert the 3.5mm audio cable into the 3.5mm earphone port, and insert the other 3.5mm jack into mp3 / mp4 player / your mobile phone or other compatible device to play your Music. Answer/ End calls, reject call, last outgoing number redial(in the switch button) - Answer call: short press multifunction button - Hang up call:short press multifunction button - Reject call: triple click multifunction button - Last number redial: double click the multifunction button. When the phone call out or answer the call, the music will pause automatically and enter the waiting state if the headphone is playing music. Listen to music operation instructions Play/Pause: Single Click multifunction button Previous Song : Long press - Next Song: Long press + Volume Up: Single click + Volume Down: Single click - Voice assistant: triple click multifunction button	FM operation instructions FM On: Long press multifunction button 3S FM Off: Short press multifunction button Automatic station search: Long press multifunction button 2S after FM ON Switching station: Long press +/- 2S after FM ON Charging the headset - Insert USB charging cable into USB port which supports 5V power(such as AC/DC USB adapter or PC USB port). Connect charging cable to the charging port of headset. When the red light is on, the headset is in charging. The red light will be off when the headset is fully charged. It takes about 2-2.5 hours to charge the headset fully. - The battery is rechargeable. Low-voltage alert: When the alert tone"toot" sounds and the indicator turns red that means the battery has run out, and it needs to charge as soon as possible. Note: Please be sure the battery has been charged fully before first time using.	Specification Chipset:Jieli Bluetooth Version :5.3 Battery:400mAh Protocol :HFP/A2DP/AVRCP/SPP Frequency :20Hz-20KHz Connection Distance :10m (33ft) Charge Voltage :5V / 500mA Charging Time :2-2.5 hours Play Time: 23 hours Charging Port: Type-C Precautions - Please be gentle when using this headphone. The maximum tolerance of the button is 250g. Excessive force or be stroked bu something all will damage buttons. - Please do align the USB port when plug or pull USB cable in case that damages the USB cable and fail to charge the headphone. - If you do not use the headset for long periods, please turn off the headset and be sure to store it in a dry place, free from extreme temperature conditions and dust. - Please do not vibrate or shock the headset violently, and do not let it fall down from high place.

 MANUAL DEL USUARIO	 1- Indicador LED 2- Micrófono 3- Botón de encendido 4- Puerto de carga USB TIPO C 5- Puerto para auriculares de 3,5 mm 6- Bajar volumen (pulsación corta)/ Anterior canción (pulsación larga) 7- Botón multifunción (reproducir/pausar, responder/finalizar llamadas/ rechazar llamadas/volver a marcar el último número saliente) 8- Subir volumen (pulsación corta)/Siguiente canción (pulsación larga) 9- Cable de audio de 3,5 mm 10- Cable de carga	Encender/apagar los auriculares - Encendido: Gire el Botón de encendido para encender , la luz indicadora se enciende, parpadeando rápidamente (el auricular emitirá un sonido recordatorio). - Apagado: Gire el Botón de encendido para apagar (el auricular tendrá un sonido recordatorio). Emparejar con su teléfono móvil u otros productos - Dar la vuelta a la Botón de encendido para encender , la luz indicadora comienza a parpadear rápidamente (el auricular tendrá un sonido recordatorio). - Active la función Bluetooth de su teléfono u otros productos. - Busque los dispositivos Bluetooth y seleccione " DECIBEL BLACKBEATPRO "Si el emparejamiento es exitoso, el indicador luminoso se enciende lentamente. parpadeando (el auricular emitirá un breve sonido recordatorio). - Asegúrese de que los auriculares estén encendidos antes de emparejarlos. - Se conectará automáticamente al teléfono preestablecido cuando se encienda (asegúrese de que la función Bluetooth de su teléfono esté activada). - Si el emparejamiento no es exitoso, apague primero los auriculares y luego enciéndalos para volver a emparejarlos.
Entrada de línea auxiliar - Inserte el cable de audio de 3,5 mm en el puerto de auriculares de 3,5 mm e inserte el otro conector de 3,5 mm en el reproductor de mp3/mp4/su teléfono móvil u otro dispositivo compatible para reproducir su música. Responder/finalizar llamadas, rechazar llamadas, volver a marcar el último número saliente (en el botón de cambio) - Respuesta: pulse el botón multifunción - Cuelgue la llamada: pulse el botón multifunción - Rechazar llamada: botón multifunción de triple clic - Redial del último número: haga doble clic en el botón multifunción Cuando se realiza una llamada telefónica o se responde una llamada, la música se pausará automáticamente y entrará en el estado de espera si los auriculares están reproduciendo música Instrucciones de funcionamiento para escuchar música Reproducir/Pausa: Botón multifunción de un solo clic Canción anterior : Pulsación larga - Siguiente canción: Pulsación larga + Subir volumen : Un solo clic + Bajar volumen : Un solo clic - Asistente de voz: botón multifunción de triple clic	Instrucciones de funcionamiento de FM FM encendida: mantenga presionado el botón multifunción durante 3 segundos FM apagada: presione brevemente el botón multifunción Búsqueda automática de estaciones: mantenga presionado el botón multifunción durante 2 segundos después de encender FM Cambio de estación: mantenga presionado +/- durante 2 segundos después de encender FM Cargando los auriculares - Inserte el cable de carga USB en el puerto USB que admita alimentación de 5 V (como un adaptador USB de CA/CC o un puerto USB de PC). Conecte el cable de carga al puerto de carga de los auriculares . Cuando la luz roja esté encendida, los auriculares se estarán cargando. La luz roja se apagará cuando los auriculares estén completamente cargados. La carga completa de los auriculares demora entre 2 y 2,5 horas. - La batería es recargable. Alarma de bajo voltaje: cuando suena el tono de alerta " toot " y el indicador se pone rojo,significa que la batería se ha agotado y es necesario cargarla lo antes posible Nota: asegúrese de que la batería esté completamente cargada antes del primer uso.	Especificación Conjunto de chips: Jieli Versión de Bluetooth: 5.3 Batería : 400mAh Protocolo: HFP/A2DP/AVRCP/SPP Frecuencia: 20 Hz-20 KHz Distancia de conexión: 10 m (33 pies) Voltaje de carga: 5 V/500 mA carga : 2-2.5 horas Tiempo de juego: 23 horas Puerto de carga: Tipo C Precauciones - enga cuidado al utilizar estos auriculares. La tolerancia máxima de los botones es de 250 g. Si se aplica una fuerza excesiva o se golpea con algo, los botones se dañarán. - Alinee el puerto USB al conectar o desconectar el cable USB en caso de que se dañe el cable USB y no se puedan cargar los auriculares. - Si no utiliza los auriculares durante períodos prolongados, apáguelos y asegúrese de guardarlos en un lugar seco, libre de condiciones extremas de temperatura y polvo. - No vibre ni golpee violentamente los auriculares y no los deje caer desde un lugar alto.

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.