

SOUNDBAR

MODEL: LK-M825-44



User Manual

Important Safety Instructions

WARNING: To reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

- Read the user manual before use. Keep all instructions for future reference.
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
- This product is intended for indoor, household use only.
- To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
- Do not use this product in the immediate vicinity of water such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing occurs.
- Keep the unit away from heat sources like radiators, heat registers, stoves or other products that produce heat. No open flame sources like candles should be placed on the unit.
- Use only with attachments/accessories specified by the manufacturer. Use of attachments/accessories not recommended can be hazardous.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
- Do not cover the unit during use. Do not impede ventilation by covering ventilation openings with cloths, curtains or similar items.
- Do not operate the product with a damaged cord or plug or if the product malfunctions, or is dropped or damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- For safety reasons, do not remove any covers or attempt to access the inside of the product.
- Do not clean the unit with any harsh chemicals as this might damage the finish. Wipe clean with a dry cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug; never pull on the cord.
- Do not expose the batteries to excessive heat, direct sunlight, fire or similar.
- Do not throw used batteries in your household rubbish. Dispose of it responsibly according to local regulations.

1

Remote Control Description

Using the remote control:

1.POWER
Press this button to power on or power off.

2.MODE
Press this button to switch the mode within Bluetooth, USB, Aux-in, HD-in(ARC-in).

3.VOL+
Press VOL+ to up the volume of the soundbar

4.⏮
Under Bluetooth and USB mode, press this button will go to previous song.

5.MOVIE
Press this button will enter MOVIE mode sound effect.

6.PAIR
Under bluetooth mode, press this button will disconnect the connection between soundbar and sound sourcing device(such as your mobile phone), press this button will reconnect the previous sourcing device again.

7.RESET
Press this button will resume the factory sound setting.

8.MUTE
Under work mode, press this button to turn off sound of soundbar, press it again to turn on the sound.

9.⏯
when playing music, press this button to pause playing, and repress to play continue


10.▶
Under Bluetooth and USB mode, press this button will go to next song.

11.VOL-
press VOL- to down it.

12.MUSIC
Press this button will enter MUSIC mode sound effect.

13.NEWS
Press this button will enter NEWS mode sound effect.


14.🔂
USB file loop.

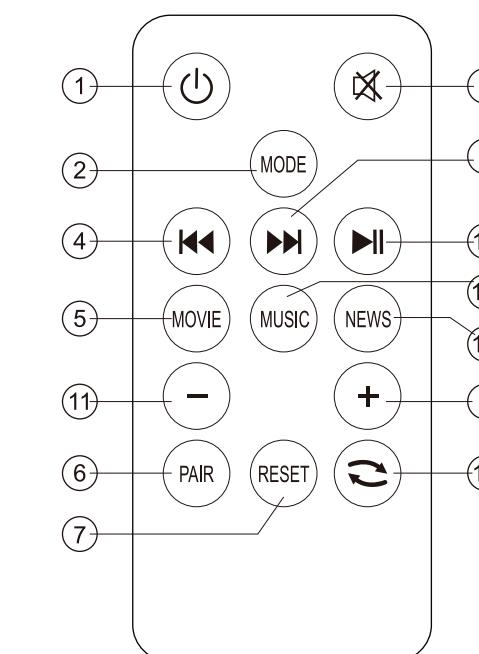

2

Connection schematic

RECOMMENDED PLACEMENT

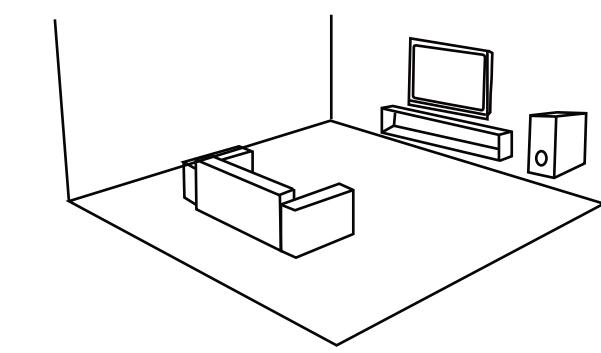


Soundbar: Under the TV(if wall-mounted)/in front of the TV
Subwoofer: on the floor, alongside the TV(or in the front corner of the room)

Soundbar Specification

Drive Unit	Soundbar:2pcs; Subwoofer:1pc
Impedance(Ω)±20%	Soundbar:4Ω; Subwoofer:4Ω
Main channel output power	20W
Bass output power	20W
Input Voltage	AC 110-240V 50Hz
Power consumption	40W
Input signal source	AUX,Bluetooth, HD/ARC
Dimensions for sound bar	400*63*66mm
Dimensions for subwoofer	120*200*300mm
ACCESSORIES:	Remote control, Audio line

CONNECTING THE SOUNDBAR TO OTHER DEVICES

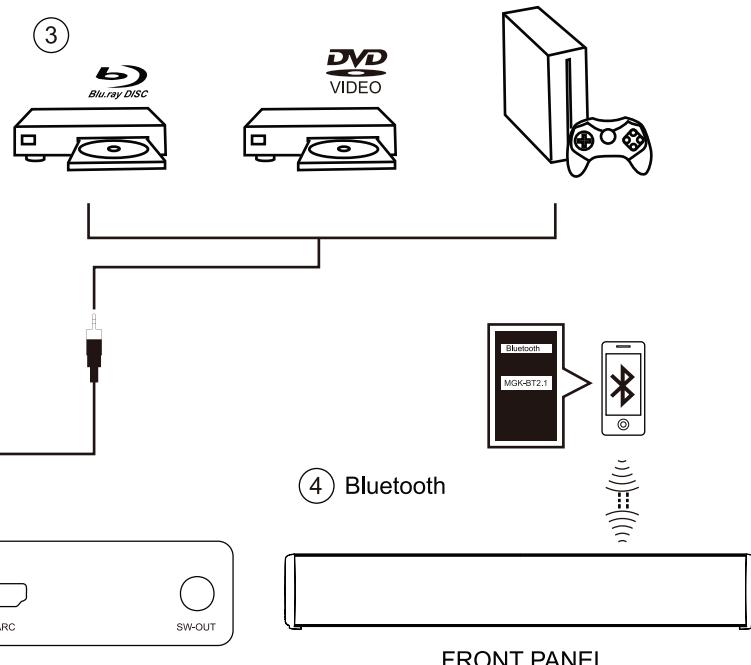

Operating Instructions:

After connecting to the Speaker, the display glows with prompt voice, which means that successfully power on. Long press the Power/Mode button on the side panel or the Mode key on the remote control to choose the required mode.

Bluetooth Mode:

- Press the "MODE" button repeatedly until Bluetooth Mode is selected. Display shows "BT".
- On your Bluetooth-enabled device choose "MGK-BT2.1", the name of the sound bar. The display blinks indicating that it is waiting for pairing, once pairing is successful, the indicator remains on, display shows "BT" and stop flashing.
- Now you can play music from your Bluetooth-enabled device on the sound bar. Press the ⏪ or ⏹ button on the remote control to play the previous or next song.

5

Aux Input

If using the Aux cable connect the Speaker to audio equipment, select "AUX" by using the Mode key on the remote control or the Power/Mode key on the side panel. "AUX" will be displayed on the display accompanied by "AUX" voice prompt.

HDMI Input

If using HDMI cable connect Speaker to audio equipment, through the mode button on the remote control or the Power/Mode key on the side plate to select "HD", screen displays "ARC".

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines. This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

6

Front/Back panels

FRONT




1.M/()
Press this button to power on or power off.

2.⏯
when playing music, press this button to pause playing, and repress to play continue.

3.⏮
Short press — for next song
Long press — for volume down.

4.▶
Short press + for previous song
Long press + for volume up.


BACK

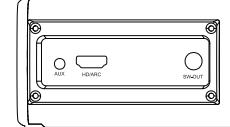

1.AUX

2.HD/ARC

3.SW-OUT

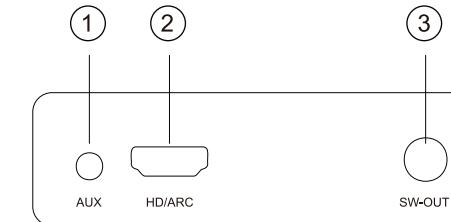

3

Connection schematic

CONNECTING THE SOUNDBAR TO TV


1. Subwoofer to SW-OUT

2. Connection to TV: HDMI Input on the sound bar to HD/ARC Output on TV

Note: Alternatively, you can use the AUX cable (included) to connect the 'AUX-IN' port on the sound bar to the Auxiliary out or the Headphone jack on the TV.

3. AUX

After switching on the soundbar, change to AUX input mode
Plug in the 3.5mm AUX cable to the AUX IN connector on the soundbar and start playing from the music device

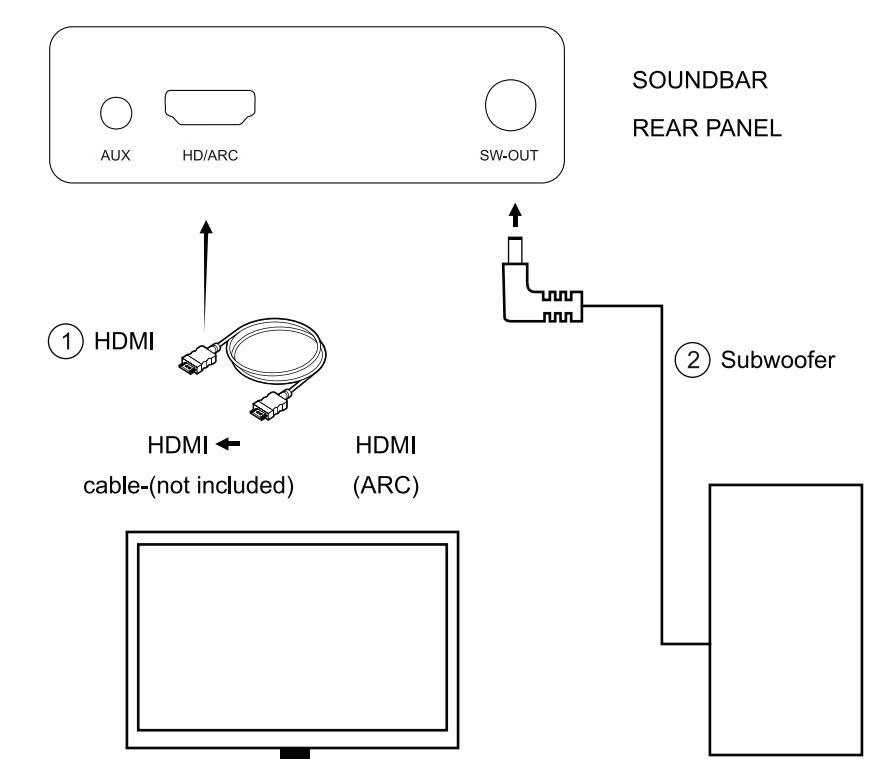

4