

1	2	3	4	5	6
				修改区域 1	描述 XXXXXXXXXXXXXXXXXXXX 日期 XXXXXX 担当 XXXXXX



76.20 mm

95.25 mm

**INTRODUCTION**  
Whether you want to plug in your personal mixtape, play tunes from your phone, or want to add an extra 'oomph' to your sound system, this Bluetooth-enabled boombox will optimize your listening experience with crisp sound quality.


**FEATURES**

- Portable Wireless Boombox
- Bluetooth/USB/TF/AUX
- Built-In Handle
- Custom Light Settings

**WHAT'S INSIDE THE BOX**


- OKKO Speaker
- 23in. Type-C USB Charging Cable
- User Guide

**PRODUCT DIAGRAM**

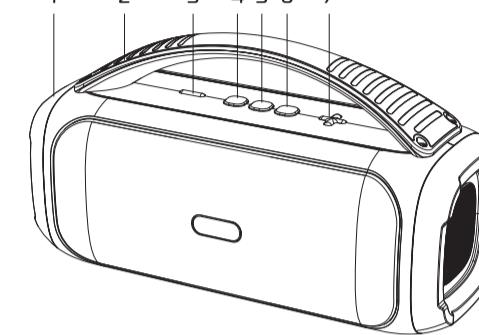

1: Speaker  
2: Handle  
3: Volume - / Previous Track Button  
4: Mode Button  
5: Power / Light Button  
6: Play / Pause Button  
7: Volume + / Next Track Button

**BACK DIAGRAM**

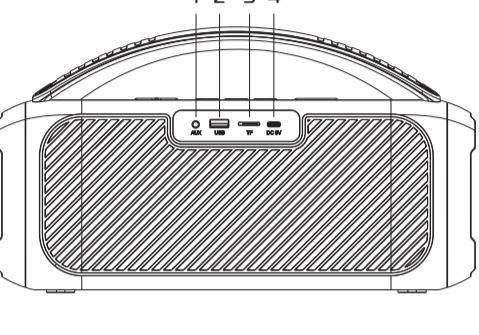


1: AUX Port  
2: USB Port  
3: TF Card Slot  
4: USB-C Charging Port

**CHARGING THE SPEAKER**

- Plug one end of the included USB-C charging cable into the USB-C port on the speaker and the other end into a USB power source.
- When charging, the red indicator light will turn on. When fully charged, the red indicator will turn off.

**USING THE SPEAKER**

- Press and hold Power Button to turn the speaker ON or OFF.
- Press the Mode button to cycle through the following different modes:
  - a. Bluetooth (BT)
  - b. AUX
  - c. USB
  - d. TF Card Mode
- Press the "+" button to increase the volume, press and hold the button to play the next track.
- Press the "-" button to decrease the volume, or press and hold the button to play the previous track.
- Press the Power button to cycle through the following lighting settings:
  - a. Green
  - b. Rainbow Flash
  - c. Transition Rainbow
  - d. Dynamic Light Show
  - e. Red
  - f. Fade In/Out Rainbow
  - g. Cyan
  - h. Loading Rainbow
- Press the Play/Pause button to pause the audio or play the current song.

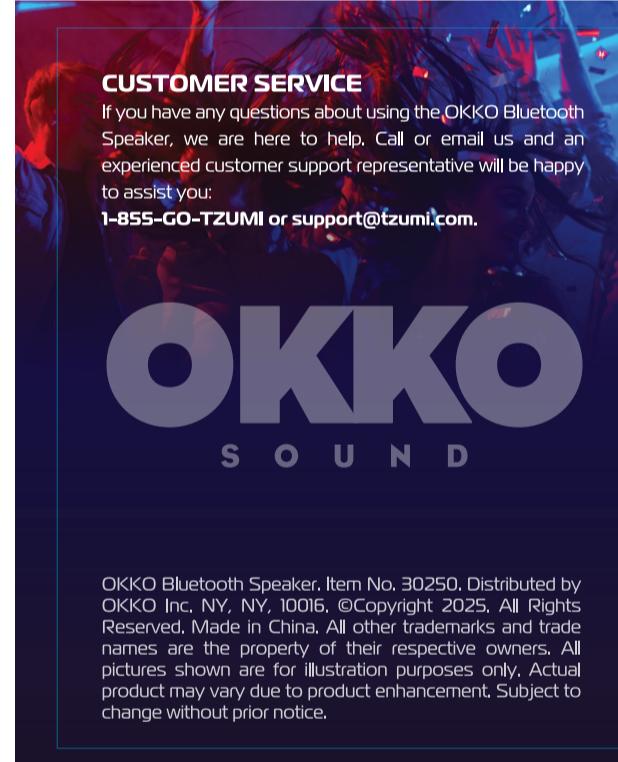

**CUSTOMER SERVICE**  
If you have any questions about using the OKKO Bluetooth Speaker, we are here to help. Call or email us and an experienced customer support representative will be happy to assist you:  
1-855-GO-TZUMI or support@tzumi.com.

**OKKO SOUND**

OKKO Bluetooth Speaker, Item No. 30250. Distributed by OKKO Inc., NY, NY, 10015. ©Copyright 2025. All Rights Reserved. Made in China. All other trademarks and trade names are the property of their respective owners. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Subject to change without prior notice.

**PAIRING THE BLUETOOTH SPEAKER**

- Make sure that the Bluetooth function is available on your device.
- Once powered on, the speaker will be in Bluetooth mode if there's nothing inserted in the TF card slot or USB drive.
- Keep the distance between the pairing device and the speaker within 3 feet for pairing.
- Go into your device's Bluetooth settings, search and select "OKKO Speaker" from the devices list to connect and pair. You will hear a prompt sound when the pairing is successful. Use your device to select and play music from the speaker.

**Notes:**

- After successfully pairing, the speaker will automatically connect to the device upon being turned on and within range.
- To connect to a different device, disconnect the speaker from the original paired device.

**PAIRING THE SPEAKER WITH ANOTHER SPEAKER**

- Press and hold the Play/Pause button on the OKKO speaker and another speaker to pair them together.
- Once the devices are connected, refer to the instructions on pairing the OKKO speaker to Bluetooth to play audio from both devices.

**USING THE AUX PORT**

- Insert one end of an AUX cable into the AUX port on the back of the speaker, and the other end into your device.
- Use the device's volume and playback settings to control the music on the speaker.

**USING THE USB PORT OR TF CARD**

- Insert a USB drive with your favorite music into the USB port on your speaker or insert a TF card into the TF card slot.
- The speaker will go into USB or TF mode when a USB cable or TF card is inserted.
- Use the speaker interface to play and pause your music.
- When the TF card or USB connection is removed, the speaker will revert to Bluetooth mode.

**CARE AND MAINTENANCE**

- Clean, wipe with a soft cloth.

**SPECIFICATIONS**

Bluetooth Version: V 5.0  
Size: L 13" x W 5.5" x H 7.4"  
Power: 20 W  
Battery: 2400mAh Lithium-Ion  
Charging Time: Up to 5 hours  
Usage Time: Up to 8 hours

**WARNINGS & SAFETY INFORMATION**

- Keep the speaker away from heat sources, direct sunlight, humidity, water, or any other liquid.
- Do not expose the speaker to extremely high or low temperatures, as they may damage the battery.
- Do not operate the speaker if it is wet or moist to avoid electrical shock and/or injury to yourself and damage to the unit.
- Do not drop, apply excessive force to the controls, or put heavy objects on top of the speaker.
- Do not attempt to repair, disassemble, or modify the product. There are no user-serviceable parts inside this device.
- Keep away from children. This product is not a toy.
- If you do not plan to use the product for long periods of time, store it in a dry place, free from extreme temperatures, humidity, and dust.

**FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **WARNING:** Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

折后尺寸: 76.20\*95.25MM 157g双铜 正反面彩色印刷 覆哑膜 风琴折

 <b>广东万圣科技有限公司</b> GUANGDONG WANSHENG SCIENCE AND TECHNOLOGY CO.,LTD	<b>本厂型号:</b> LK-M610 <b>料号:</b>
<b>设计:</b> 吴梓鹏 <b>业务:</b>	<b>文件编号:</b>
<b>电子:</b>	<b>名称:</b> 30250TD 说明书 TU 美国
<b>结构:</b>	<b>审核:</b>
	<b>核准:</b>

1	2	3	4	5	6
---	---	---	---	---	---