

E-5011说明书 80g书写纸 尺寸：280*100MM 双面对折

家庭电视音响 YXHDZ-(JT)5011

使用手册

本产品不带电源适配器销售,若使用电源适配器供电,则应购买配套使用获得CCC认证并满足标准要求的电源适配器。

基本参数


无线有效距离:	≥10M
音频信噪比:	≥75dB
音频输入:	3.5mm转RCA
输出功率:	10W (THD+N=3%)
频率范围:	60Hz-16KHz
供电电压:	BATT 3.7V

产品特点

- 1、支持无线连接音乐播放;
- 2、支持无线连接回连功能;
- 3、支持TF卡输入;
- 4、支持U盘输入;
- 5、支持AUX音频输入;
- 6、支持同轴输入

音响配件

您的家庭电视音箱包含以下配件:

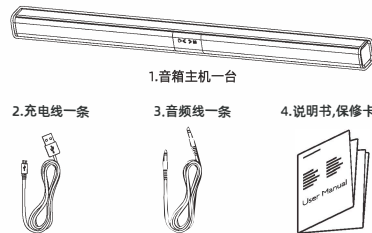

按键与功能:

1.开/关机
开机:按“ON”
关机:拨到“OFF”

2.无线连接
a.进入无线模式后用手机或其它设备搜索,无线设备名进行“E-5011”配对连接,如需输入配对码为0000°,配对成功后进入无线播放模式
b.设备配对成功后,下次进入无线模式会进行10秒的自动回联,回联超时进入配对状态

3.上一首切换、下一曲切换、暂停播放/继续播放切换
长按“◀”键上一曲切换
长按“▶”键下一曲切换
短按“▷”键是停止播放/继续播放切换
短按“⏮”模式切换(播放USB文件/播放TF卡文件/播放AUX连接设备/蓝牙模式切换)

4.音量控制
短按“▶”键音量增加键
短按“◀”键音量递减键

播放U盘/TF卡:

在开机状态下,插入U盘/TF卡时,音响会自动转换到U盘/TF模式,并发出提示音,2秒钟后将自动播放歌曲,U盘/TF卡内必须有MP3、WAV格式的音频文件;

外部音频AUX输入模式:

在开机状态下,使用出厂配送线将外接设备(如手机、电脑、MP3等音频输入设备)音频头插入“MICRO充电口”,此时音响会自动切换到外部音频输入模式,即可播放设备上的音频。

保养与维护

- 在使用时,请阅读以下建议有助于您遵守保修条款,并延长产品的使用寿命。
- 保持产品干燥,勿放在潮湿的地方,以免影响产品内部电路。
- 勿将产品放置在太阳直射或者温度高的地方。高温会缩短电子部件的使用寿命、使某些塑料部件变形。
- 勿将产品放在过冷的地方,以免损坏内部电路板。
- 勿试图拆开产品。如果非专业人员,可能会损坏产品。
- 不要跌落、强烈震动、用硬物撞击产品,以免会损坏内部电路。
- 不要用尖锐在产品表面上乱划,以免损坏外壳和影响外观。
- 如果产品不能正常工作,请将其送至您的合格维修机构,工作人员会热心帮您解决问题的。

产品保修卡

型号/名称:	
用户姓名:	
购机地点:	
购机日期:	
颜色:	
保修期限:	
说明: 1、可凭保修卡进行维修,本保修卡遗失不补,请妥善保管; 2、本公司产品售后服务规定:所售产品一年保修; 3、本产品检修应送专业维修单位或指定销售商进行,用户不得擅自修拆,否则后果自负。	

合格证

日期: _____
检验员: _____

Home TV Speaker YXHDZ-(JT)5011

User's manual

This product is sold without a power adapter. If you use a power adapter for power supply, you should purchase a supporting power adapter that has obtained CCC certification and meets the standard requirements.

Basic parameters


Effective distance:	≥10M
SNR:	≥75dB
Audio input:	3.5mm转RCA
Output power:	10W (THD+N=3%)
Frequency range:	60Hz-16KHz
Supply voltage:	BATT 3.7V

Product features

- 1、Support wireless connection, music playback and call function;
- 2、Support wireless connection back connection function;
- 3、Support TF card input;
- 4、Support USB flash disk input;
- 5、Support aux audio input;
- 6、Support coaxial input

Audio accessories

Your home TV speaker includes the following accessories:

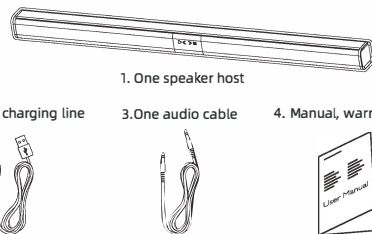

Keys and functions:

1. ON / OFF
Power on: dial “ON”
Shutdown: dial to “OFF”

2. Wireless connection
a. After entering the wireless mode, search with your mobile phone or other devices, Conduct “E-5011” pairing connection for the wireless device name. If you need to enter the pairing code as 0000°, enter the wireless playback mode after successful pairing
b. After the device is paired successfully, the next time it enters the wireless mode, it will be automatically connected back to 10 S. After the connection back times out, it will enter the pairing state

3. Previous switch, next switch, pause / resume switch
Long press “◀” Key previous song switching
Long press “▶” Key next song switch
Short press “▷” The key is to switch between stop playing / continue playing
Short press “⏮” Mode switching (play USB file / play TF card file / play aux connection Device / Bluetooth mode switching)

4. Volume control
Short press “▶” Key volume increase key
Short press “◀” Key volume down key

Play USB flash disk / TF Card:

When the USB flash disk / TF card is inserted in the power on state, the sound will automatically switch to the USB flash disk / TF mode and give a prompt tone. Songs will be played automatically after 2 seconds. There must be MP3 and wav audio files in the USB flash disk / TF card

External audio aux input mode:

In the power on state, use the factory distribution line to insert the audio head of external devices (such as mobile phones, computers, MP3 and other audio input devices) into the “micro charging port”. At this time, the audio will automatically switch to the external audio input mode to play the audio on the device.

Maintenance and repair

- When using, please read the following suggestions to help you comply with the warranty terms and prolong the service life of the product.
- Keep the product dry and do not put it in a wet place, so as not to affect the internal circuit of the product.
- Do not place the product in the sun or high temperature. High temperature will shorten the service life of electronic components and deform some plastic components
- Do not put the product in a supercooled place to avoid damaging the internal circuit board.
- Do not attempt to disassemble the product. If you are not a professional, you may damage the product.
- Do not drop, strongly vibrate or hit the product with hardware, so as not to damage the internal circuit.
- Do not scratch the product surface with a sharp body, so as not to damage the shell and affect the appearance.
- If the product does not work properly, please send it to your qualified maintenance organization, and the staff will be eager to help you solve the problem.

Product warranty card

Model / Name:	
User name:	
Place of purchase:	
Purchase date:	
Color:	
Warranty period:	
Explain: 1. The warranty card can be used for maintenance. If the warranty card is lost, please keep it properly. 2. The company's product after-sales service regulations: the products sold are guaranteed for one year. 3. The maintenance of this product shall be sent to a professional warranty unit or a designated seller. The user shall not repair or dismantle it without authorization, otherwise he shall bear the consequences.	

Certificate

Date: _____
Inspector: _____

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.