 


User Manual

LED Projector

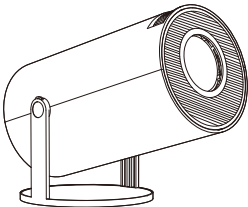 


Due to continuous improvement, actual product may different from the manual, manual is for reference only.

SAFETY INFORMATION

- Read Instructions**—Read safety and operating instructions should be read before the appliance is operated.
- Read Instructions**—The safety and operating instructions should be retained for future reference.
- Read Warnings**—All warnings on the appliance and in the operating instructions should be adhered to.
- Water and Moisture**—Do not use the appliance near water (e.g., bath tub, sink, swimming pool or in wet places or tropical climates. Do not place objects that with liquids, such as vases, on top of the appliance. Do not expose the appliance to dripping or splashing.
- Setup**—The appliance should only be placed on a stable, flat surface. Do not let the appliance topple over or expose it to shock.
- Wall or Ceiling Mounting**—The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- Ventilation**—The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings. Ensure a minimum distance of 5 cm around the appliance for sufficient ventilation. Ensure that the ventilation is not impeded by covering the ventilation openings with items such as newspapers, tablecloths, curtains, etc.
- Heat**—The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- Power Sources**—The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- Cables and Plugs**—The mains plug shall remain readily accessible. All cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- Cleaning**—The appliance should be cleaned only as recommended by the manufacturer. Clean by wiping with a dry and clean cloth. Do not use chemical cleaners or detergents. Always unplug the mains plug before cleaning the unit.
- Release Petards**—The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- Object and Liquid Entry**—Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- Damage Requiring Service**—The appliance should be serviced by qualified service personnel when:
 - The power supply cord or the plug has been damaged.
 - Objects have fallen, or liquid has been spilled, into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
 - The appliance has been dropped, or the enclosure damaged.
- Servicing**—The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

- Open Fire**—Keep the appliance away from open fires. Do not place naked flame sources, such as lighted candles, on the appliance.
- Thunderstorm**—During a thunderstorm the mains plug should be unplugged.
- Safety Check**—After servicing the technician should conduct a safety check in order to ensure that the appliance is working properly and safely.
- Batteries**—Always place batteries in the correct polarisation into electrical components. Danger of explosion if battery is incorrectly recharged. Recharge only with the same or equivalent type. Do not mix old and new batteries. Take attention to the environmental aspects of battery disposal. Batteries should not be exposed to excessive heat such as sunlight, fire or fire risk. Remove batteries before disposing of the product.
- Volume Levels**—To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Headphones (if applicable)**—Excessive sound pressure from earphones and headphones can cause hearing loss.

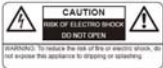

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

The lightning bolt with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Batteries may not be disposed of in regular household trash. Every consumer has the obligation to return batteries to special disposal locations.

Disposal of Used Electrical & Electronic Equipment
The meaning of the symbol on the product, its accessory or packaging indicates that this product should not be treated

as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipment wastes, by ensuring the correct disposal of this product, you will help prevent potential hazards to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

NOTES ABOUT THIS INSTRUCTION MANUAL

- This instruction manual is published by the manufacturer without any warranty. Corrections and changes of this instruction manual for the removal of typographic mistakes and editorial inaccuracies as well as due to technical improvements (changes of the device) can be done by the manufacturer at any time without announcement. Changes of this kind are contained in future versions of this user manual. All rights reserved.
- All figures are only for illustration and do not always show the exact representation of the product. This unit is not intended for use by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the unit.

FURTHER NOTES ON THE DEVICE

Setting a safe volume level

- If you continuously listen to loud music, your hearing gradually adapts to it and gives you the impression that the volume is lower.
- What seems normal to you can be already for long time too loud and unhealthy.
- To protect yourself from this, set the volume to a low level.
- Increase the volume slowly.
- Damage to your hearing can be extensive and cannot be reversed.
- If you notice a hearing problem, please consult a doctor.

Conservation

- Conservation may occur when moving the device from a cool to a warm environment. If there is moisture inside the device, it may not operate properly. Don't turn on the device and wait about one hour for the moisture to evaporate.

Saving energy

 
 
 
- If the unit is not used for a long period of time, it should be unplugged from the AC socket.
- If there is no audio signal or no device connected within in AUX mode for approximately 10 minutes, the unit will automatically switch into standby mode.

Unpacking


- Take out carefully the unit from the packing. Please keep the packing for further use.
- Control for possible protection card boards and documents.

Structure Description

This manual is for reference only, it is subject to change without prior notice.

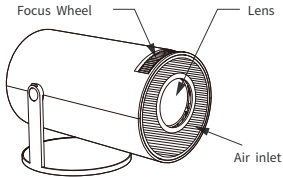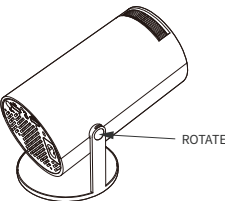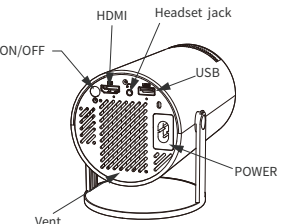


Remote Control

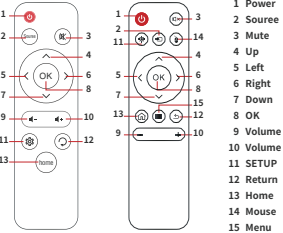 


Power ON/OFF

 Power On
Long press Power button on projector for 3 seconds.
Power Off
When the projector is powered-on, press and hold the power button on the projector or the remote control for 3s to power off.

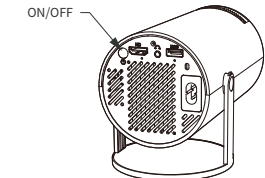

Focus Adjustment

 When projector is on, adjust sharpness by focus wheel on the back of projector.

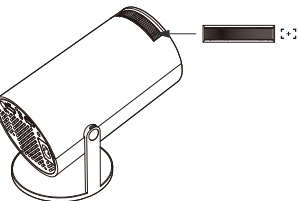

Volume Control

To increase the volume, press the Volume Up button.
To decrease the volume, press the Volume Down button.

User Interface

After switched on projector ,the following UI will appear after 30s starting pictures flash.



Then select "Media" icon to enter the multimedia screen



1. Then select "Photo", "Music", "Video"/"TEXT", which you want to play.
2. Press OK button to confirm.

 
3. Select the file that you want to play, then press Play/Pause button to play the selected file.



Menu set up


Select the SETE icon from the UI menu to go into the menu page setting.
Or press @ MENU button on the remote control to go into the menu page setting.

1. BT Device Setting

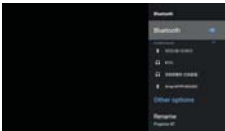


Bluetooth(OHDI), After selection, press OK to confirm.

 2. Keystone Setting

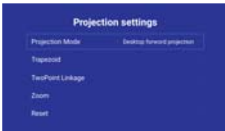

Keystone(Reset), After selection, press OK to confirm.

 
3.OPTION

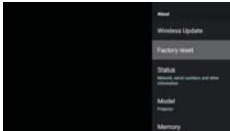

In the option setting, you can select for the OSD language, and goes back to restore factory default.

Same Screen

 1. Wireless version

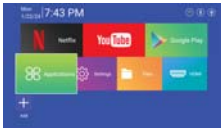

Then select "Wireless screen" icon to enter the Same screen



Technical Features

Imaging Technology	1 TFT LCD
Light	LED
LED Lifetime	20,000 Hours
Focus Mode	Manual operation
Projection Distance	1.2- 4M
Projection Size	18 ~ 200 inches
Optimum projection size	40-130 inches
Projector Ratio	1.66
Display colors	16.7M
System support	Multi-media (Music, Picture, Video and TXT)

Warning Statement
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

450 x 105 mm

单页：75 x 105 mm