


X10 Pro

USER GUIDE

Magnetic Golf Speaker

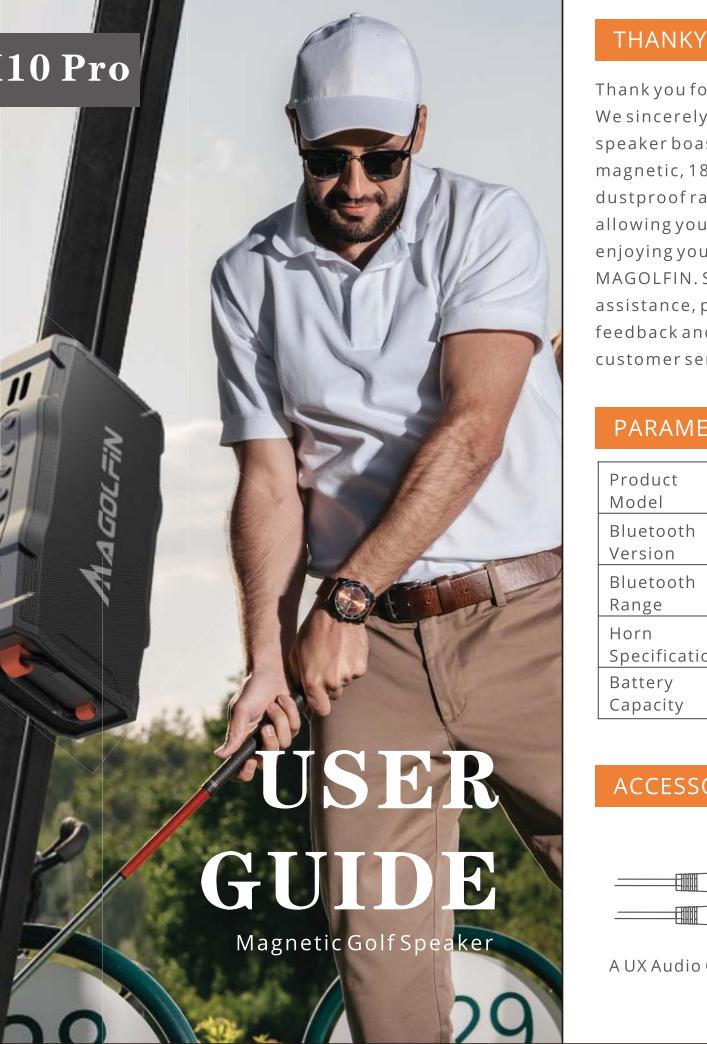

THANKYOU

Thank you for purchasing our MAGOLFIN golf magnetic speaker. We sincerely appreciate your support and trust in our brand. X10 speaker boasts several key advantages, such as ultra-strong magnetic, 18W high-fidelity horn, and IP67 waterproof and dustproof rating. We aim to enhance your golfing experience, allowing you to fully enjoy the pleasure of playing golf while enjoying your favorite music. Thank you once again for choosing MAGOLFIN. Should you have any questions or require further assistance, please do not hesitate to contact us. We value your feedback and are committed to providing you with exceptional customer service.

PARAMETERS

Product Model	X10 Pro	Input power supply	Type - C 5V/2A
Bluetooth Version	5.3	Response frequency	80Hz~18KHz
Bluetooth Range	≥18M (without obstruction)	Distortion degree	≤1%
Horn Specification	φ58MM 2*15W	Playback time	≥36H
Battery Capacity	3.7V/3600mAh	Charging time	≤5H

ACCESSORIES


AUX Audio Cable * 1

Type-C Cable * 1



Button	Operate	Function Description
	Short Press	Short press for 2 seconds to power on/off
	Long Press	If the speaker crashes, long press for 8 seconds to reset
	Short Press	Volume Up
	Long Press	Long press for 2 seconds to play the next track
	Short Press	Volume Down
	Long Press	Long press for 2 seconds to play the previous track
	Short Press	Playback Mode Switch: BT-USB-TF-AUX
	Long Press	Long press for 2 seconds to disconnect the Bluetooth connection
	Double Click	Enter/Exit TWS mode
	Short Press	a. Play/Pause music b. Answer/End call c. Activate voice assistant in Bluetooth mode
	Long Press	Long press for 2 seconds to reject incoming call
	Double Click	Double click the last number to dial in Bluetooth mode
	Flashlight On/Off	In power off state: Long press to turn on the light, then short press for SOS flashing. Short press again to turn off. Repeat in a loop. In power on state: Short press to turn on the light, then short press for SOS flashing. Short press again to turn off. Repeat in a loop.

BUTTON FUNCTIONS

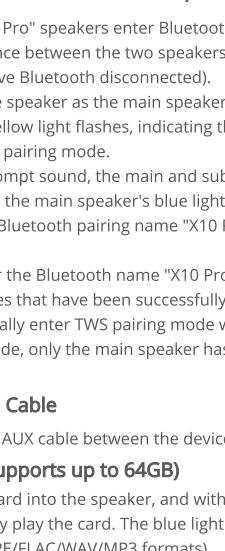

TWS Interconnection for Two Speakers

- Both "X10 Pro" speakers enter Bluetooth pairing mode simultaneously (the distance between the two speakers should be ≤8 meters, and both should have Bluetooth disconnected).
- Select one speaker as the main speaker, double-click the "M" button, and the yellow light flashes, indicating that the speakers enter TWS automatic pairing mode.
- After a prompt sound, the main and sub speakers have steady yellow lights, and the main speaker's blue light flashes. At this time, there is only one Bluetooth pairing name "X10 Pro," indicating a successful TWS pairing.
- Incorrect battery replacement may cause combustion hazards. Only use the same type or equivalent type of battery for replacement.
- Prolonged use of the device at high volume may cause damage to your hearing.

NOTE

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, if installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into a outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

WARRANTY

We are committed to providing you with the highest quality products.

a. After power on, the blue light flashes, and the speaker enters Bluetooth pairing mode.

b. Turn on the Bluetooth function on your phone and search for the Bluetooth name "X10 Pro" to connect.

c. After a prompt sound, the blue light stays on, indicating a successful Bluetooth connection.

SAFETY PRECAUTIONS

1. Please keep it out of reach of children to prevent accidents.

2. Do not place the device in high-temperature environments, including direct sunlight.

3. Do not place the device near fire or other overheated environments.

4. Do not place the device in damp or excessively humid areas.

5. Do not attempt to charge the device using methods other than the provided charging cable.

NOTE2:
Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

REXOSURE STATEMENT

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.