



Music Playback

BASIC INFORMATION

Item Size: 11inch

Item Color: Black, Orange, Blue, Iceberg blue, Purple.

Item Material: ABS+glass.

Item Function: Gifts & Decoration.

Package Includes: 1xUSB charging cable

OMAIYOUPI




USB charging port.

- 1. Long press to switch on/off.
- 2. Click to pause music.
- 3. Double click to change the light.

- 1. Click to switch to the next music.
- 2. Long press to increase volume.

- 1. Click to switch to the previous music.
- 2. Long press to reduce volume.

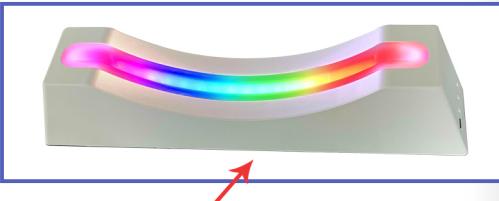

Flashes coloured light when switched on.

How to Play





If there are no bubbles or extremely few bubbles, please take down the sand painting and shake it back and forth a few times. The size of air bubbles that support sand, has a crucial impact on how a sand picture actually works.



WARM REMINDER

When the air in the product exceeds the standard, use the equipped syringe to adjust the air to ensure that the sand works properly.

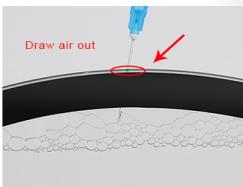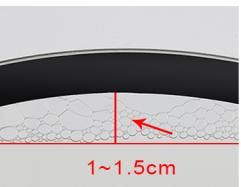

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.